






Mingfans Air Ltd


SVS SYSTEM RH SERIES-ROOF SPACE & HEAT TRANSFERSYSTEM FUNCTION LAYOUT

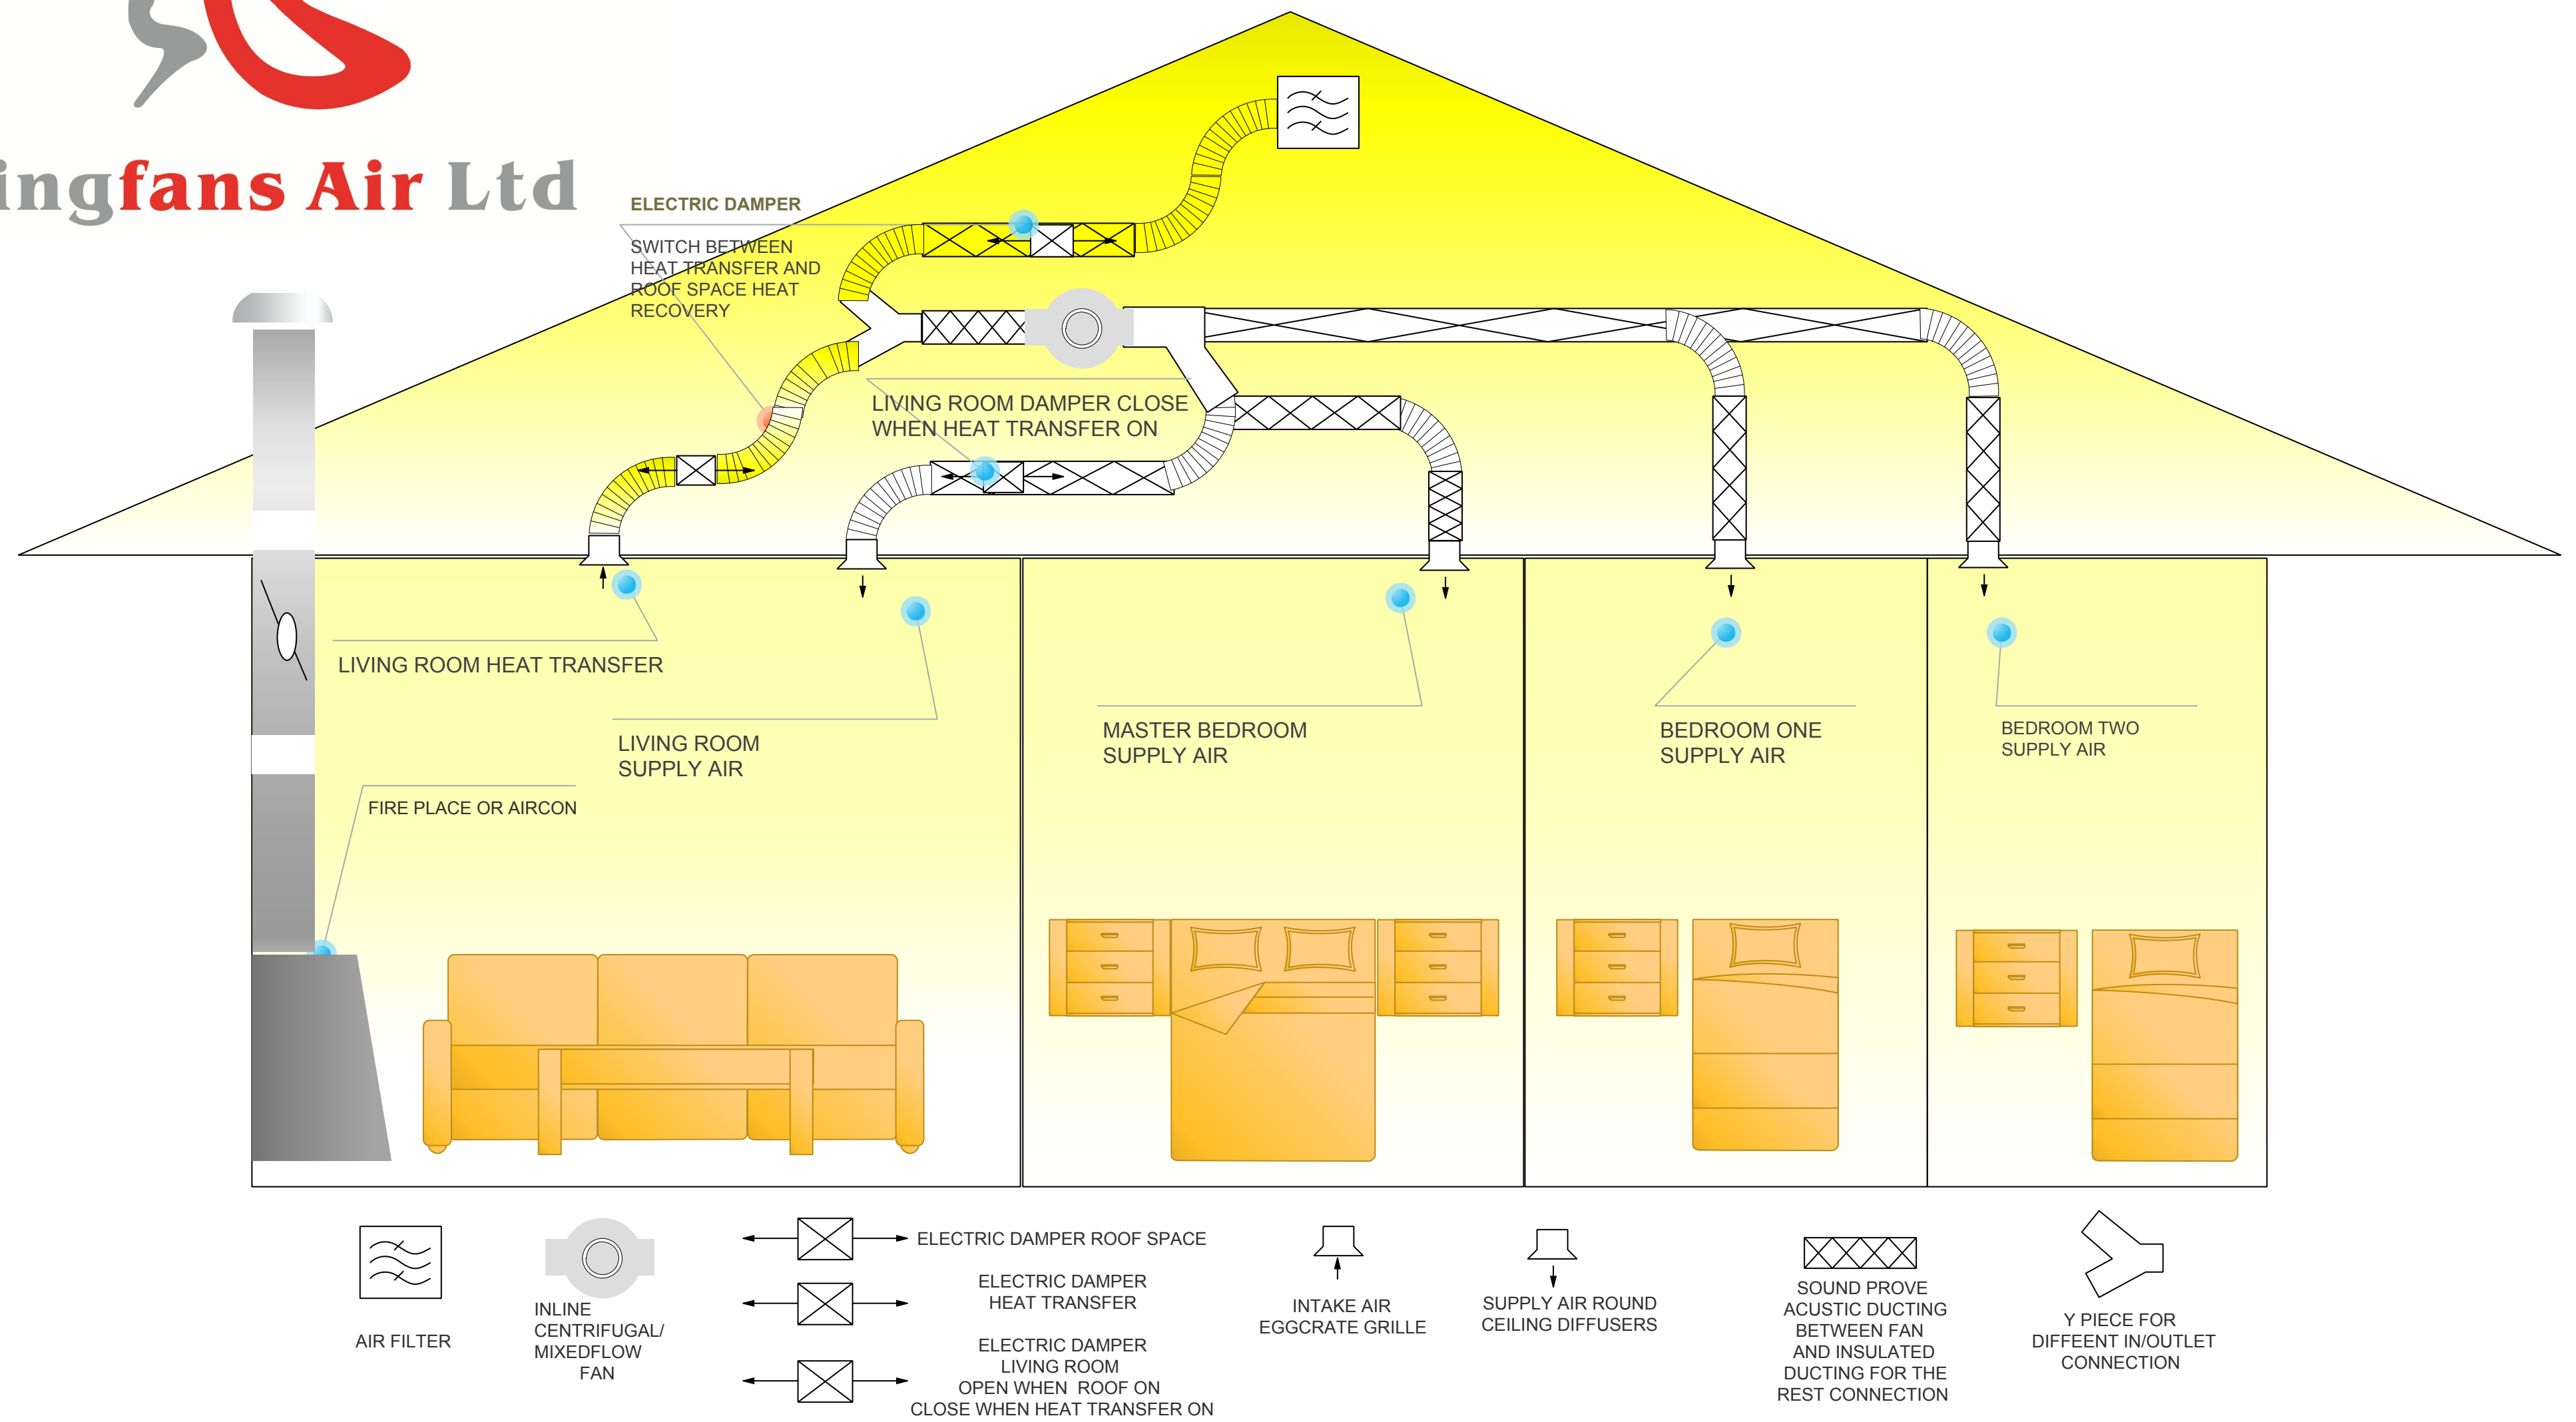


WWW.MINGFANS.CO.NZ

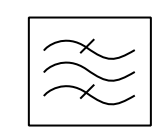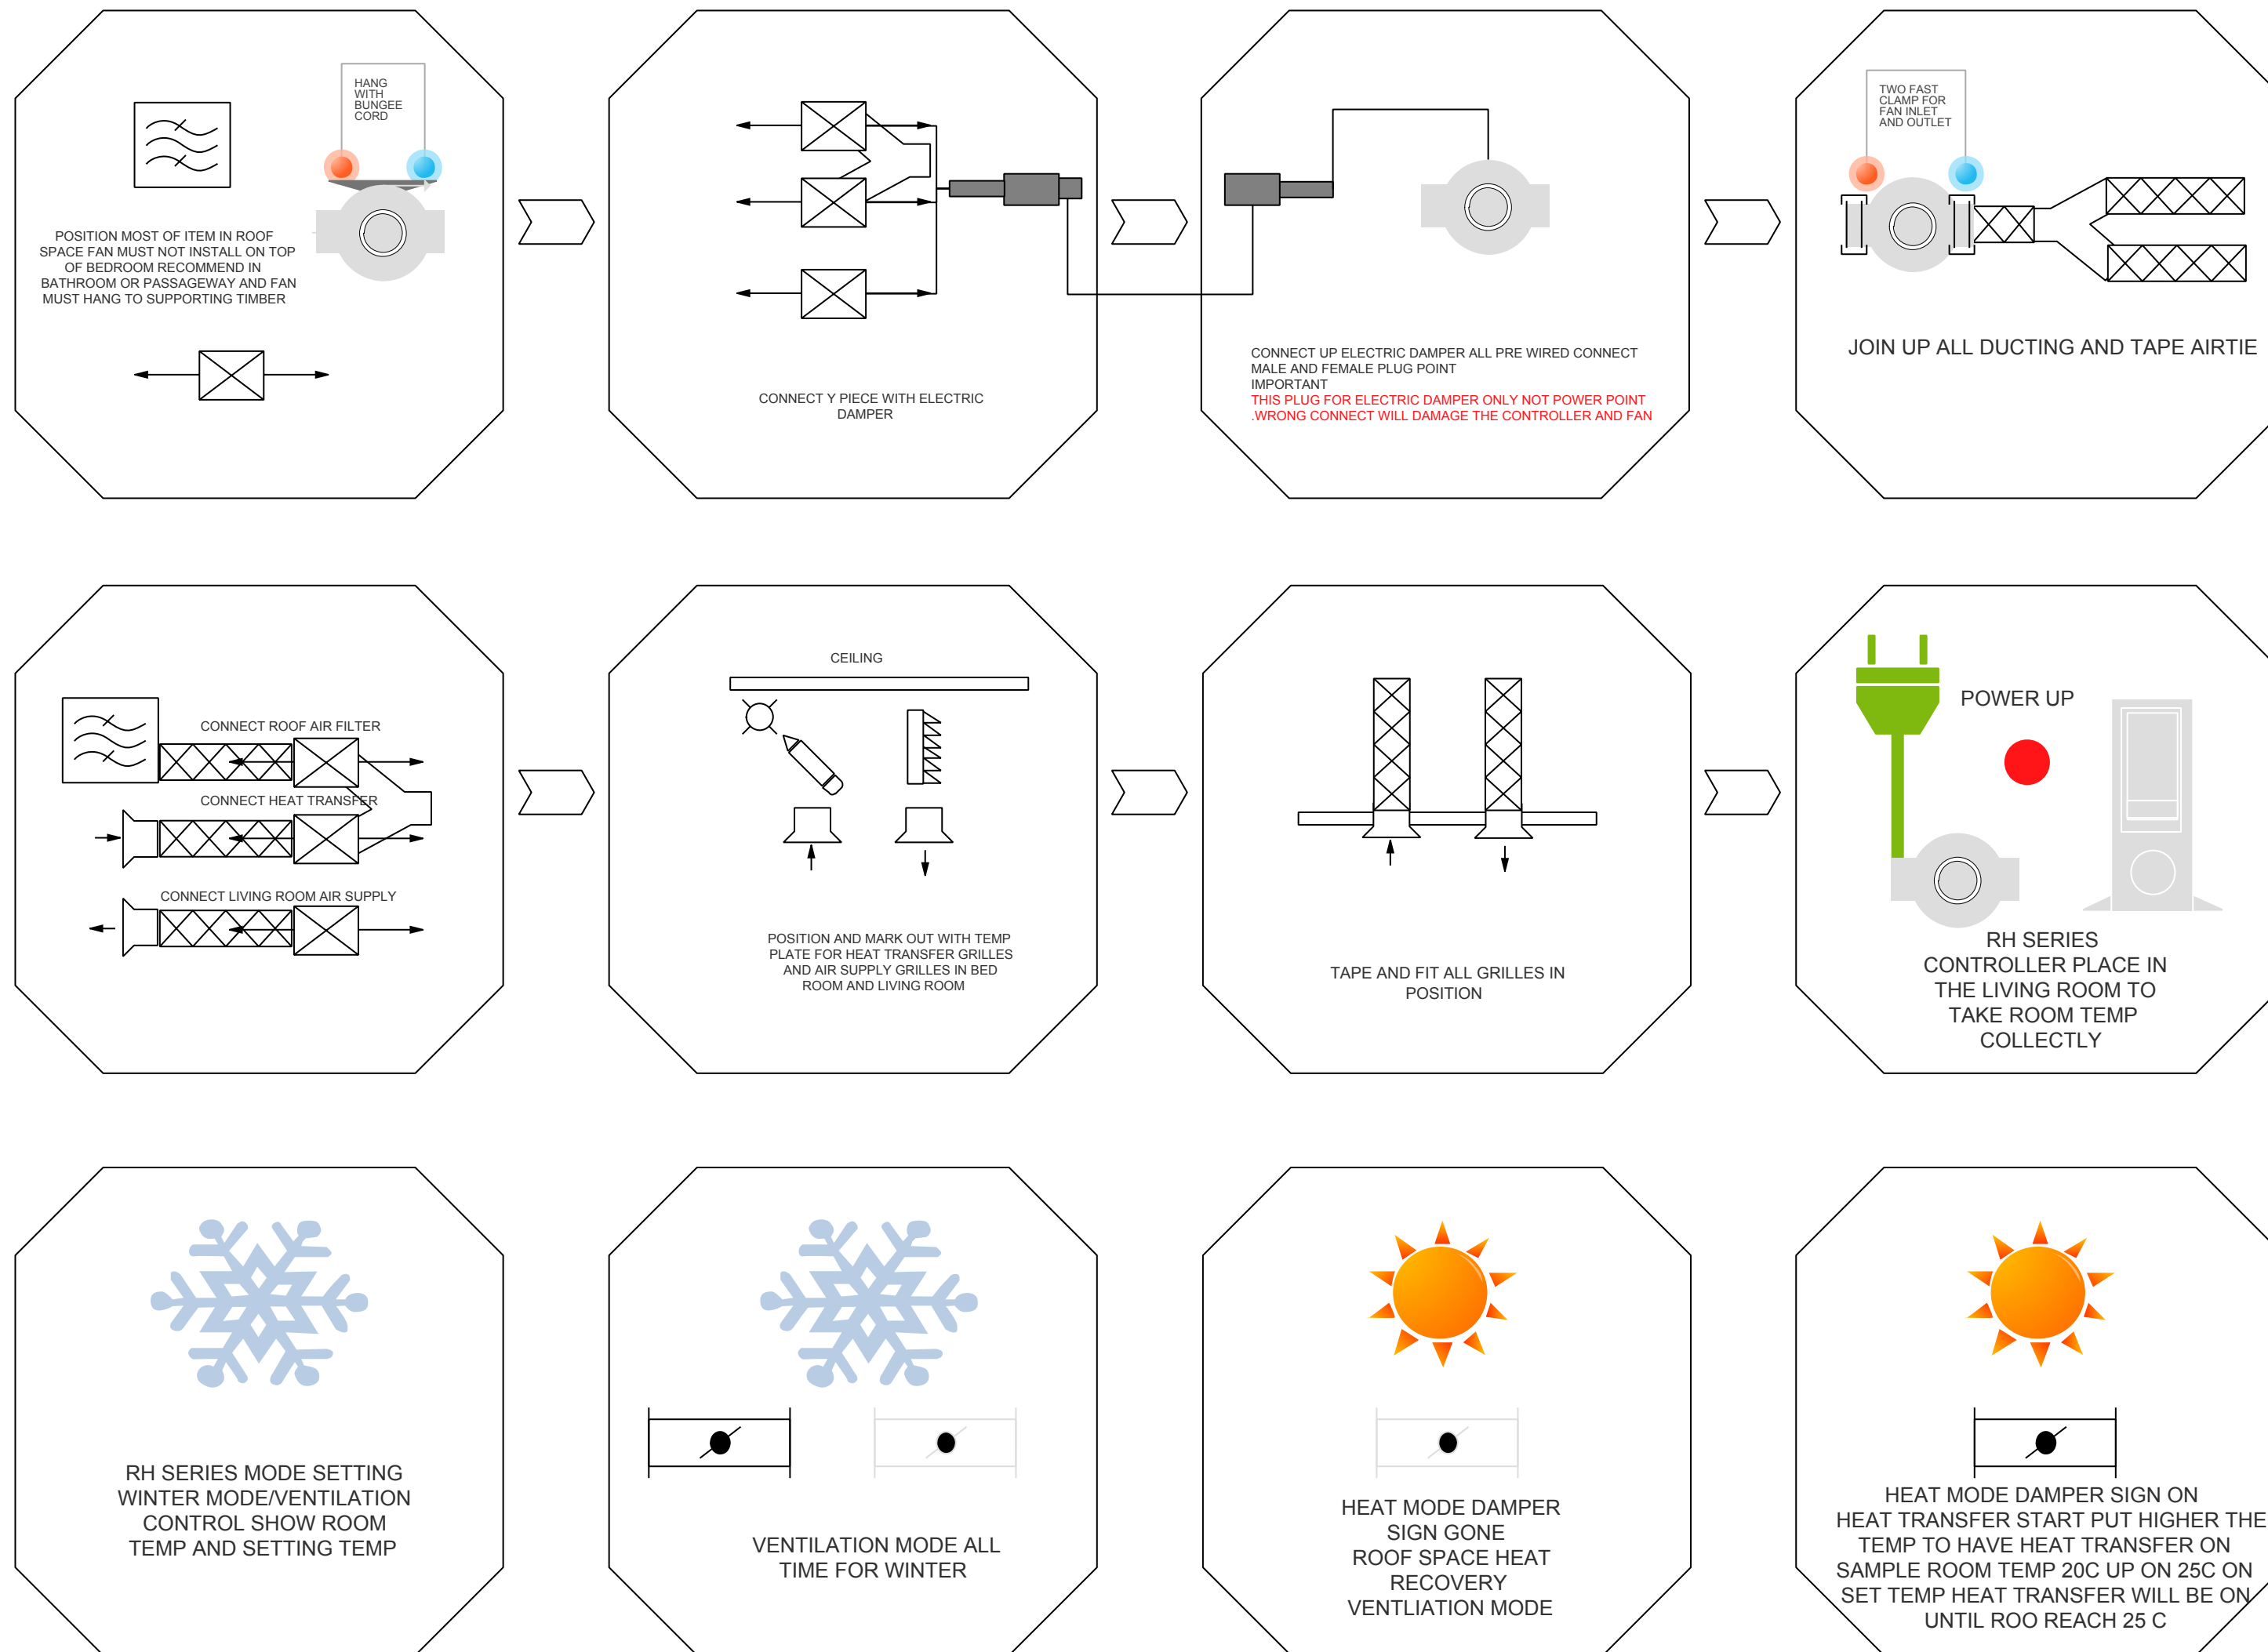

AIR FILTER

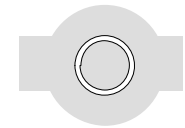

INLINE CENTRIFUGAL/ MIXEDFLOW FAN

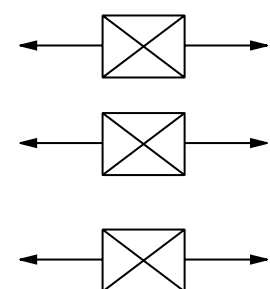

ELECTRIC DAMPER ROOF SPACE

ELECTRIC DAMPER HEAT TRANSFER

 
ELECTRIC DAMPER LIVING ROOM
OPEN WHEN ROOF ON
CLOSE WHEN HEAT TRANSFER ON




INTAKE AIR
EGGCRATE GRILLE




SUPPLY AIR ROUND
CEILING DIFFUSERS




SOUND PROVE
ACUSTIC DUCTING
BETWEEN FAN
AND INSULATED
DUCTING FOR THE
REST CONNECTION

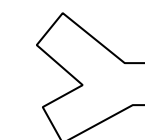

Y PIECE FOR
DIFFEENT OUTLET
CONNECTION

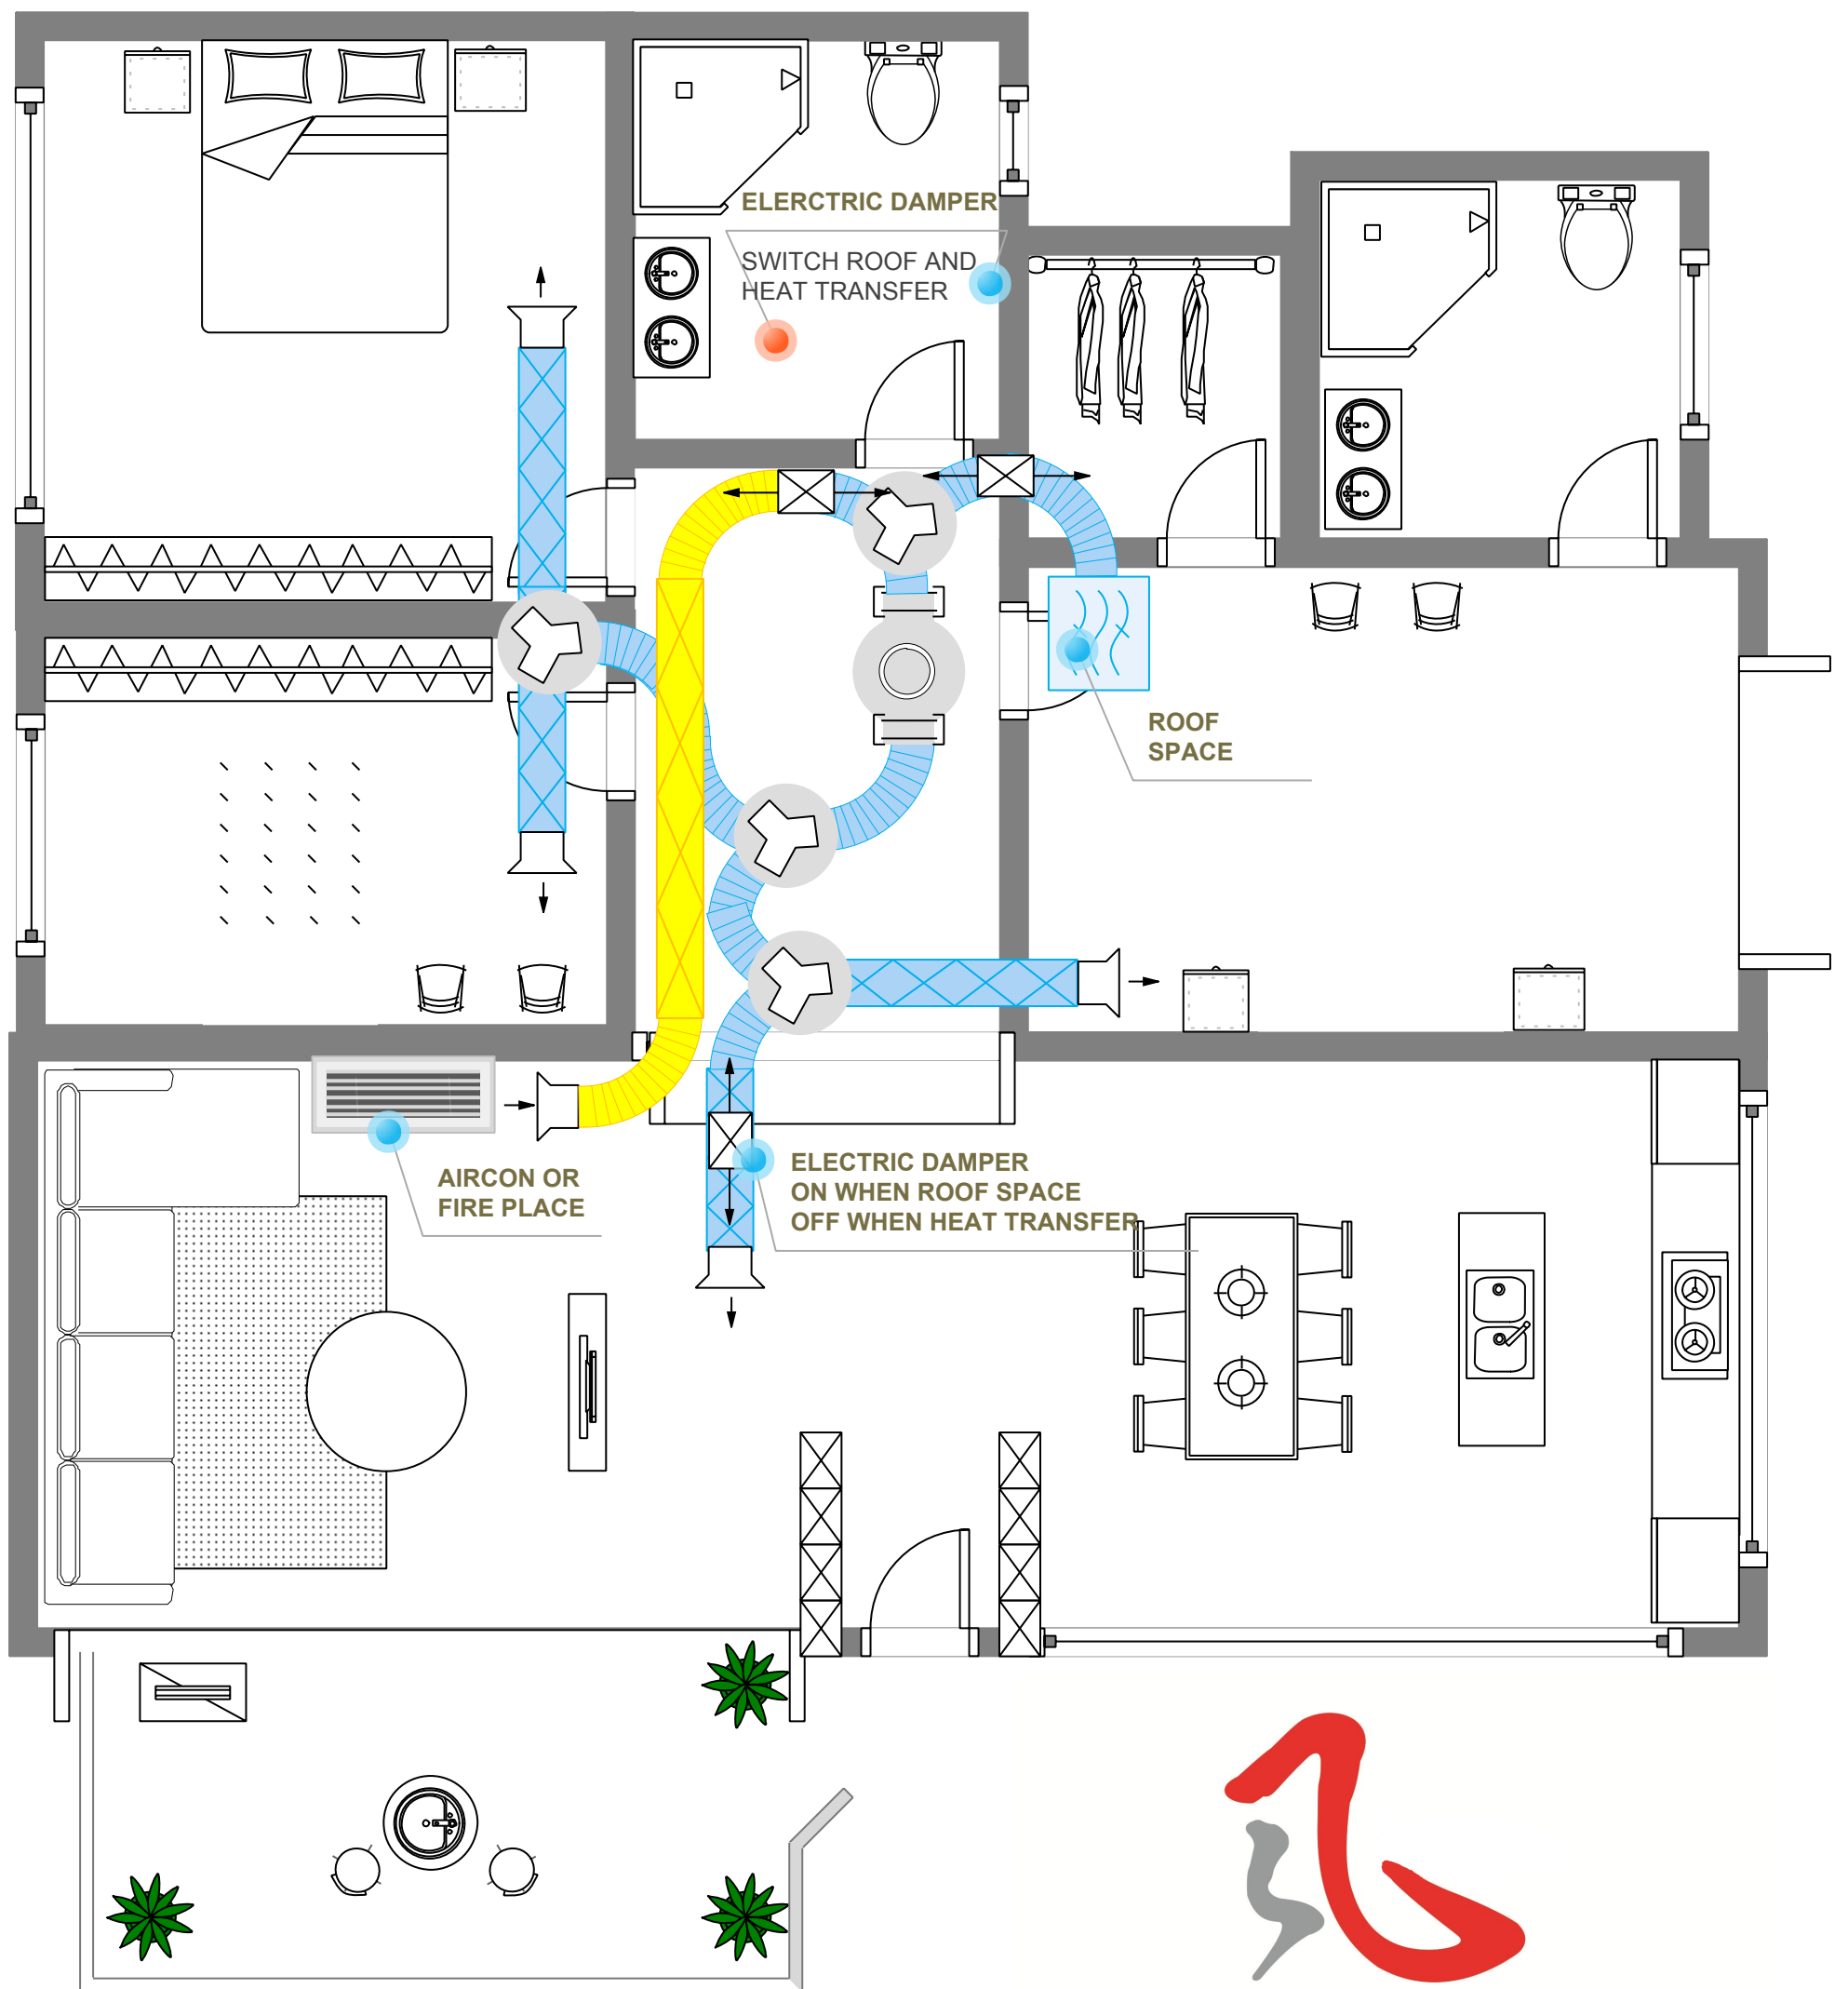

Mingfans Air Ltd

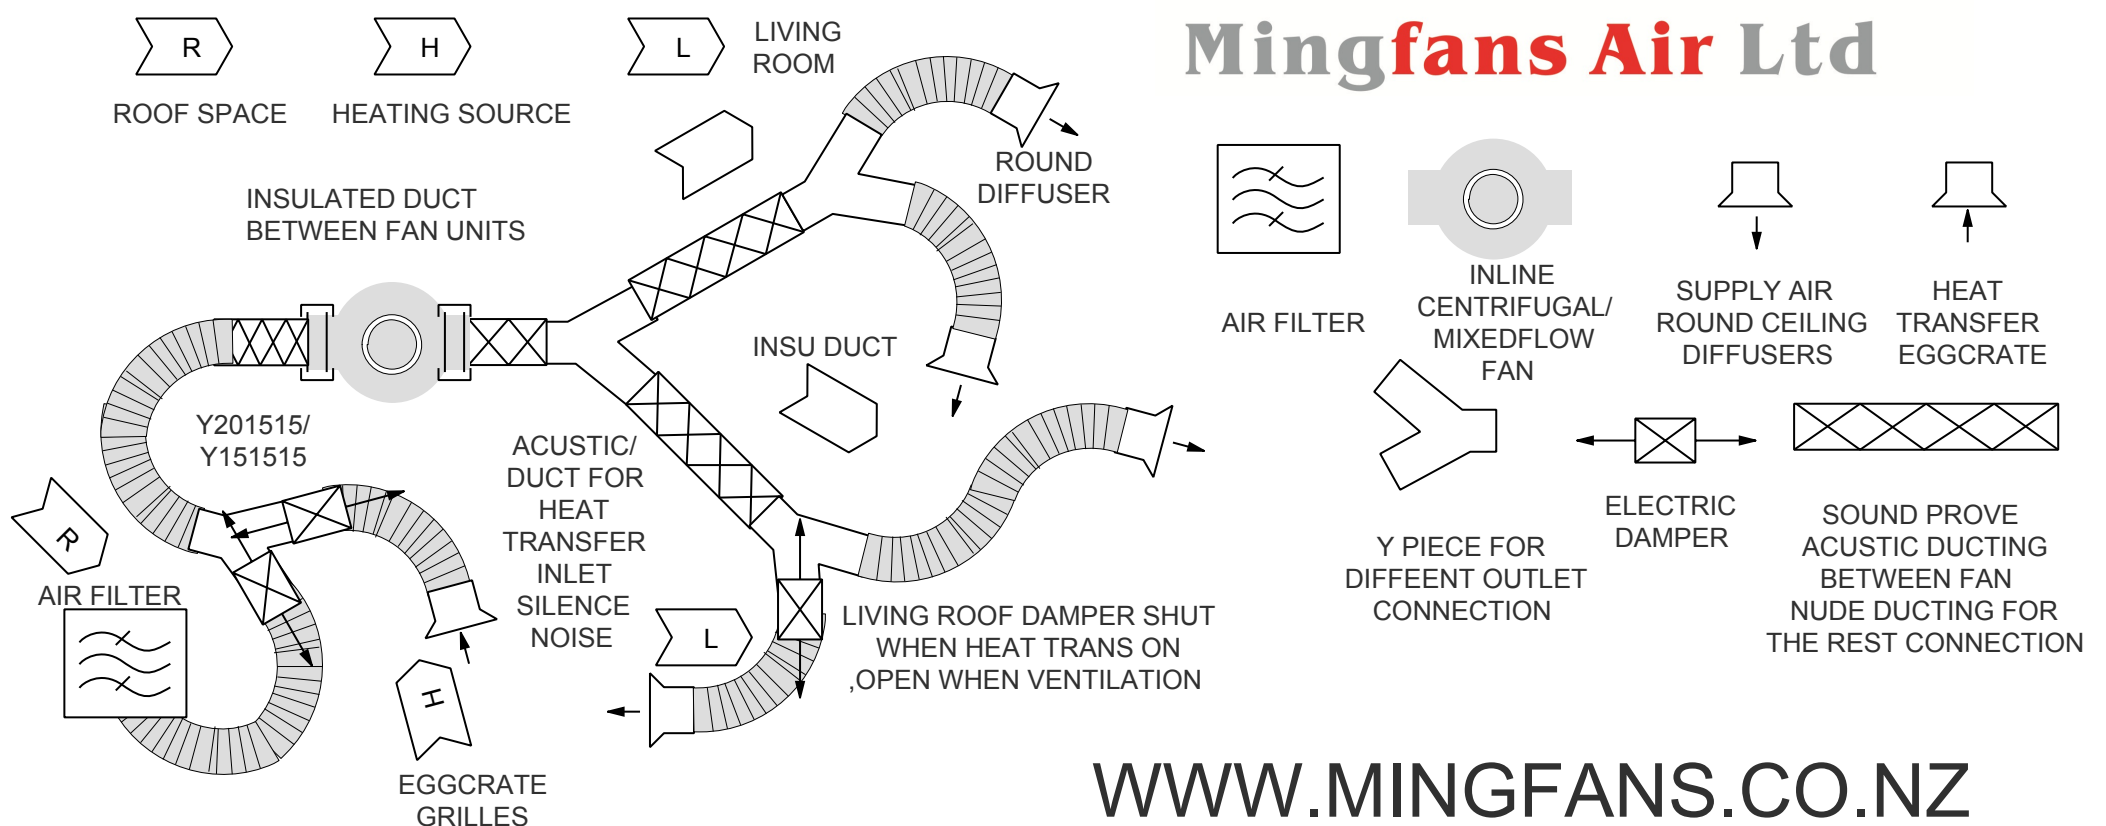

WWW.MINGFANS.CO.NZ

PVS&SVS SYSTEM

TROUBLESHOOT WIRELESS CONTROLLER SAS916FCT-RF

MOST COMMON
ISSUE IS
BATTERY RUNS
QUICKLY
HERES THE
SOLUTION

MOST BATTERY
LAST A YEAR



FAULT 1 SIGNAL FLASH
CONTROLLER NOT CONNECT
TO RECEIVER
SOLUTION : CHECK POWER OF
THE RECEIVER
CONSTANT FLASHING IT WILL
DRAIG
BATTERY LIFE WITHIN
1-2WEEKS





FAULT 2 SIGNAL GONE OR
POWER ON BOTH, BUT STILL
FLASHING
LOSS CONNECT TO RECEIVER

STEP 1 TAKE OUT BATTERY
LEAVE FOR FEW MIN PUT IT
BACK USUALLY RESET THE
REMOTE .

STEP 1 NOT WORK
STEP 2 RESET RECEIVER TO
REMOTE

1.TURN OFF POWER THE RECEIVER
AND CONTROLLER

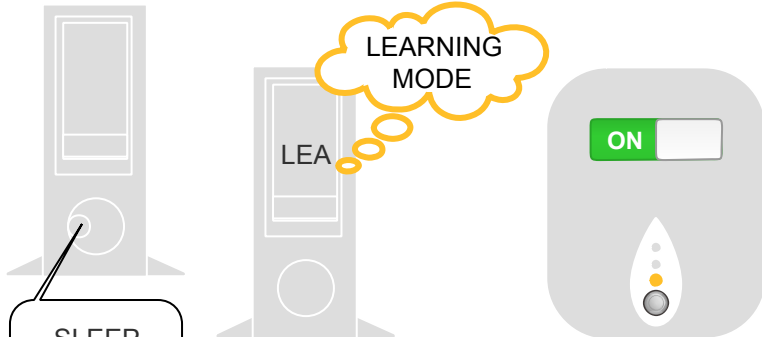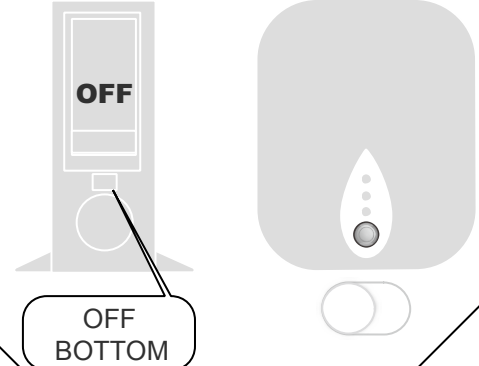


STEP2

REMOTE: LONG PRESS SLEEP BOTTOM IT WILL
SHOWS LEA (LEARING MODE)
RECEIVER:QUICKLY LONG PRESS ON BOTTOM ,
IT MUST SHOWS IN ORANGE
THEN THEY ARE START TO MATCH



AFTER 3-5S REMOTE:
SHOWS 1 MATCH UP
SUCESS,NOW REMEMBER THE
RECEIVER WILL TURN OFF AGAIN
YOU NEED TO PRESS IT ON TO
MAKE IT WORK TEST ALL SPEED
AND FUNCTION WHILE YOU UP IN
THE ROOF SPACE

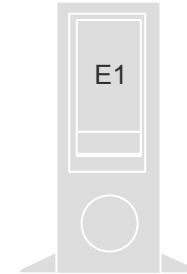

ERROR IF SHOWS E1 MATCH FAULT
THEN REPEAT THE PROCESS
AGAIN TILL SHOW 1
AFTER 3-4 TIME TRY OUT STILL E1
TAKE OUT REMOTE'S BATTERY
LEAVE FOR FEW MIN PUT BACK
AND REPEAT AGAIN
ANY QUESTION CONTACT US ON
09-2762745 QUUCKY