



FUNCTION LAYOUT NO 3 DAMPER NO 1 DAMPER O 4 DAMPER NO 2 DAMPER NO 5 DAMPER SUMMERKITS INTAKE HEAT TRANSFER INLET SUMMER KITS FRESH AIR SUPPLY AIR (LIVING ROOM) MASTER BEDROOM SUPPLY AIR (LIVING ROOM) FIRE PLACE OR AIRCON D1 ELECTRIC DAMPER D1 SUMMERKITS FRESH AIR SUPPLY OUTSIDE D2 ELECTRIC DAMPER INTAKE AIR EGGCRATE D2 VENTILATION/HEAT TRANSFR MODE GRILLE OTHERS AND FRESH AIR GRILLE D3 ELECTRIC DAMPER D3 -ROOF SPACE GRILLES D4 ELECTRIC DAMPER D4 SOUND PROVE ACUSTIC DUCTING HEAT TRANSFER GRILLES **BETWEEN FAN** AND INSULATED DUCTING FOR D5 ELECTRIC DAMPER THE REST CONNECTION D5 LIVING ROOM FRESH AIR SUPPLY OPEN WHEN ROOF AND SUMMER KITS ON

CLOSE WHEN HEAT TRANSFER ON

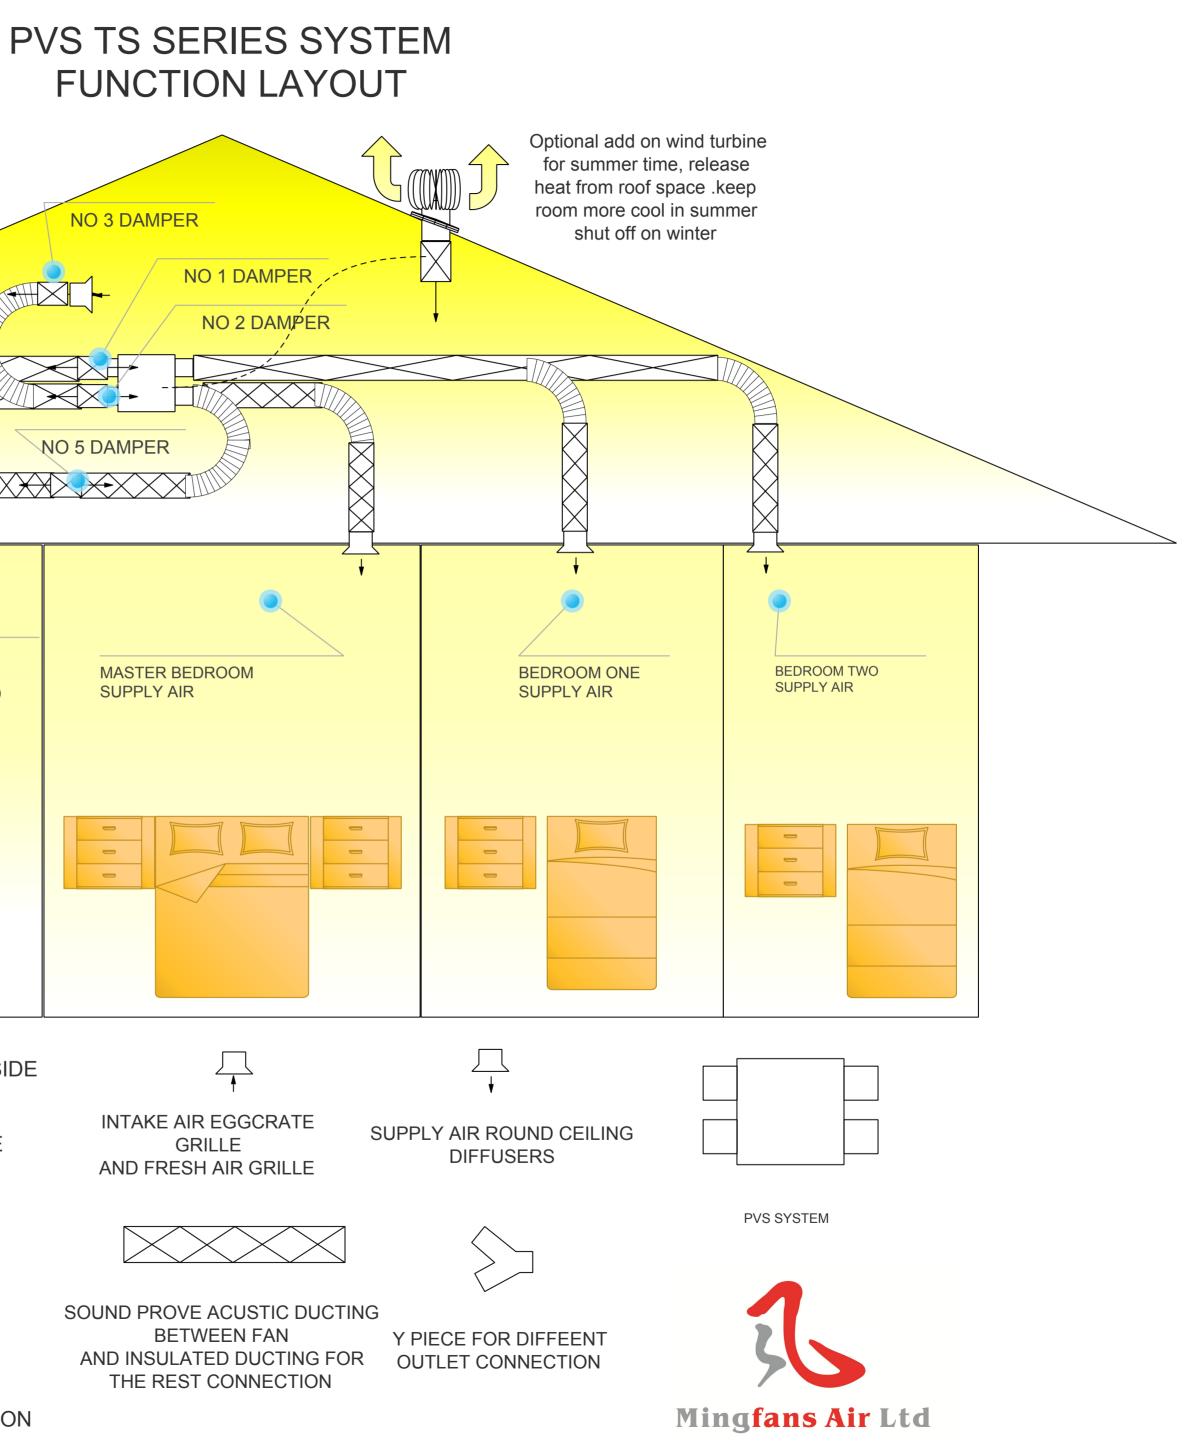

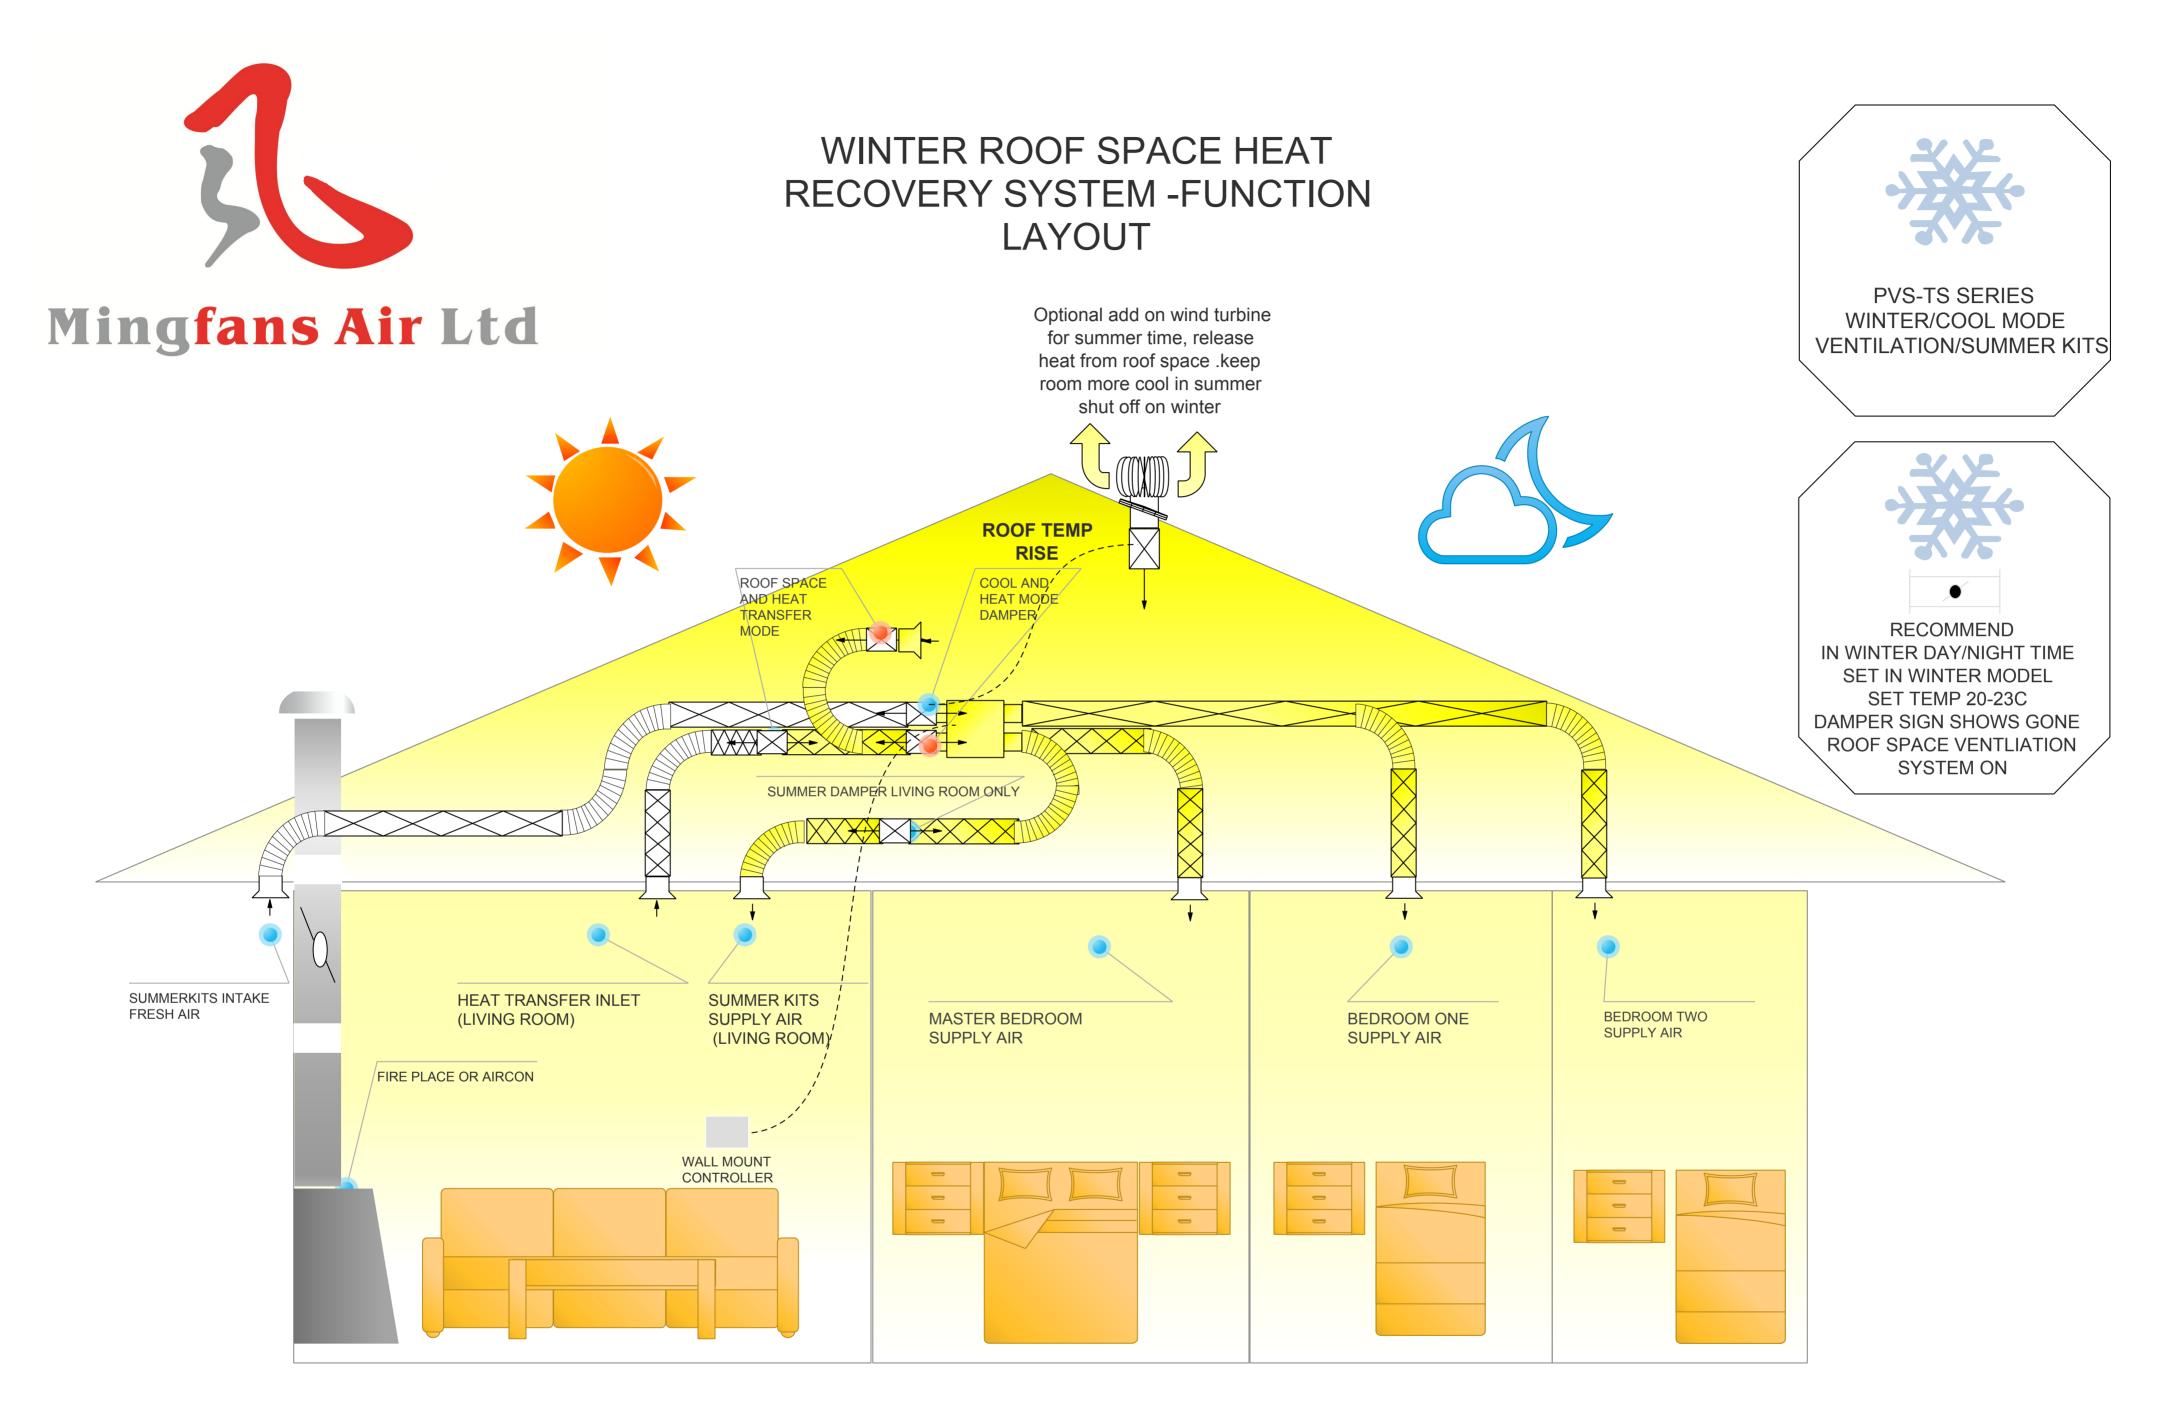

WWW.MINGFANS.CO.NZ





SUMMER SYSTEM -FUNCTION LAYOUT

Mingfans Air Ltd


ROOF TEMP 28C + ROOF SPACE AND HEAT COOL AND HEAT MODE DAMPER TRANSFER MODE $\overline{\mathbf{X}}$ $\overline{\times}$ SUMMER DAMPER LIVING'ROOM ONLY OUTSIDE 20-23C SUMMERKITS INTAKE HEAT TRANSFER INLET SUMMER KITS SUPPLY (LIVING ROOM) FRESH AIR AIR (LIVING ROOM) BEDROOM SUPPLY AIR FIRE PLACE OR AIRCON WALL MOUNT CONTROLLER

WWW.MINGFANS.CO.NZ

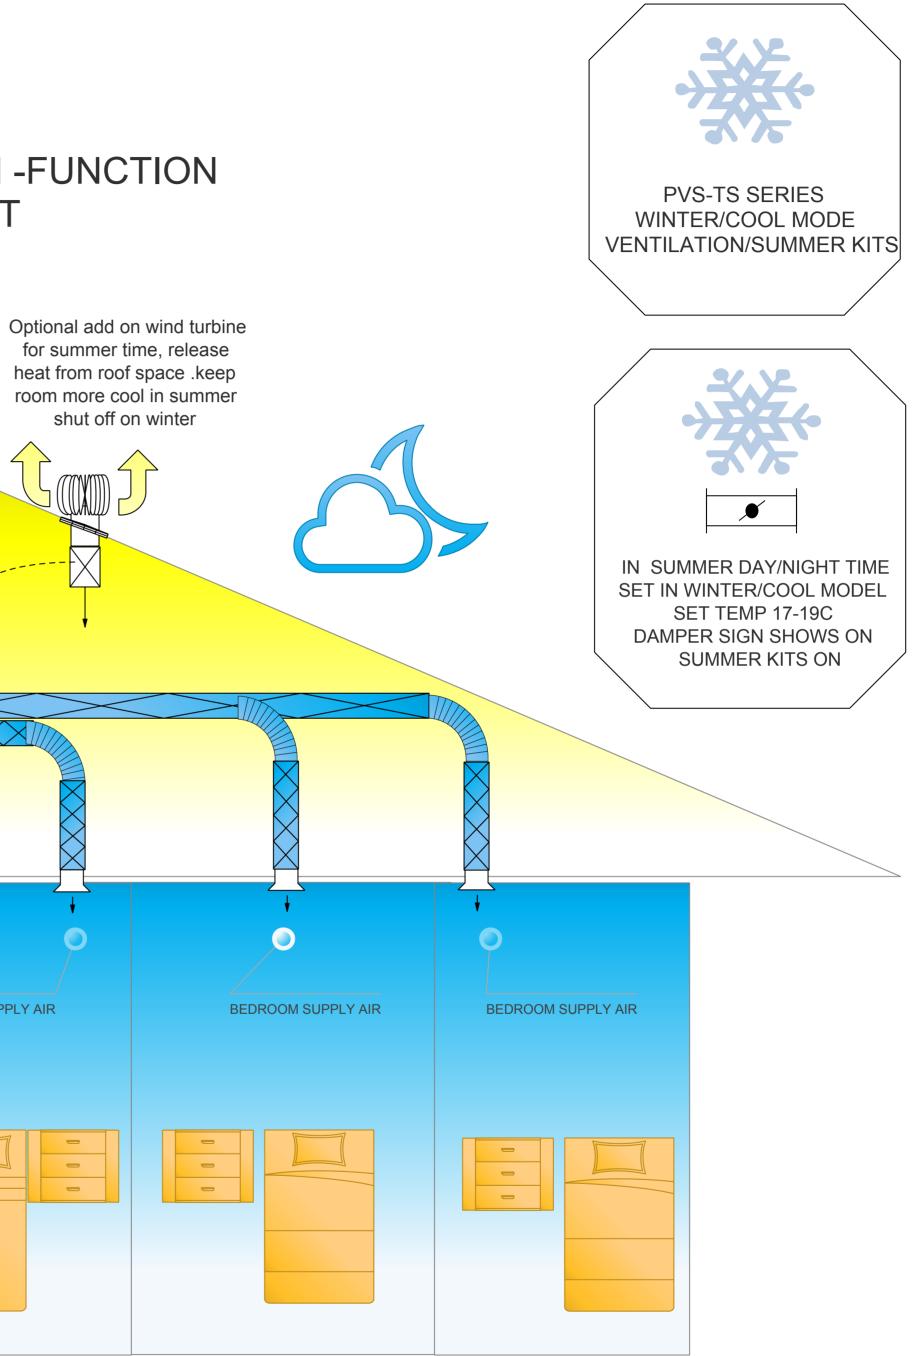


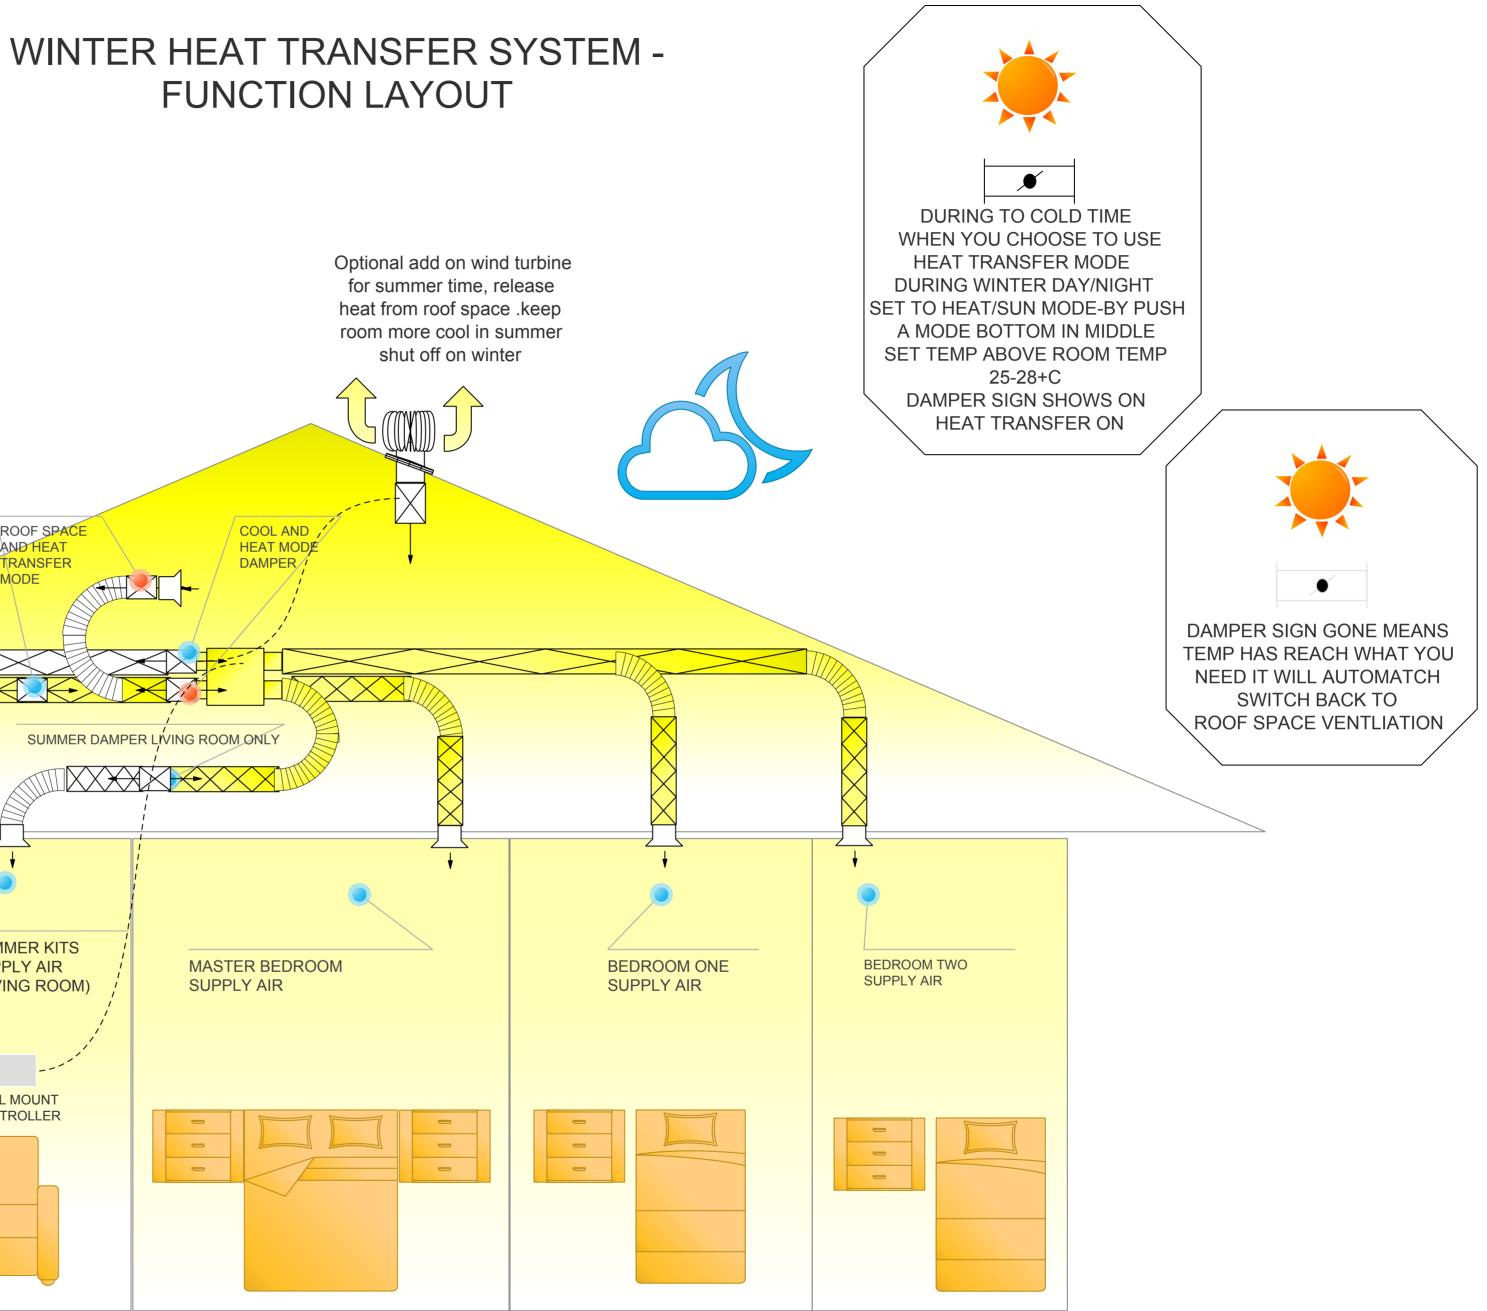

Mingfans Air Ltd

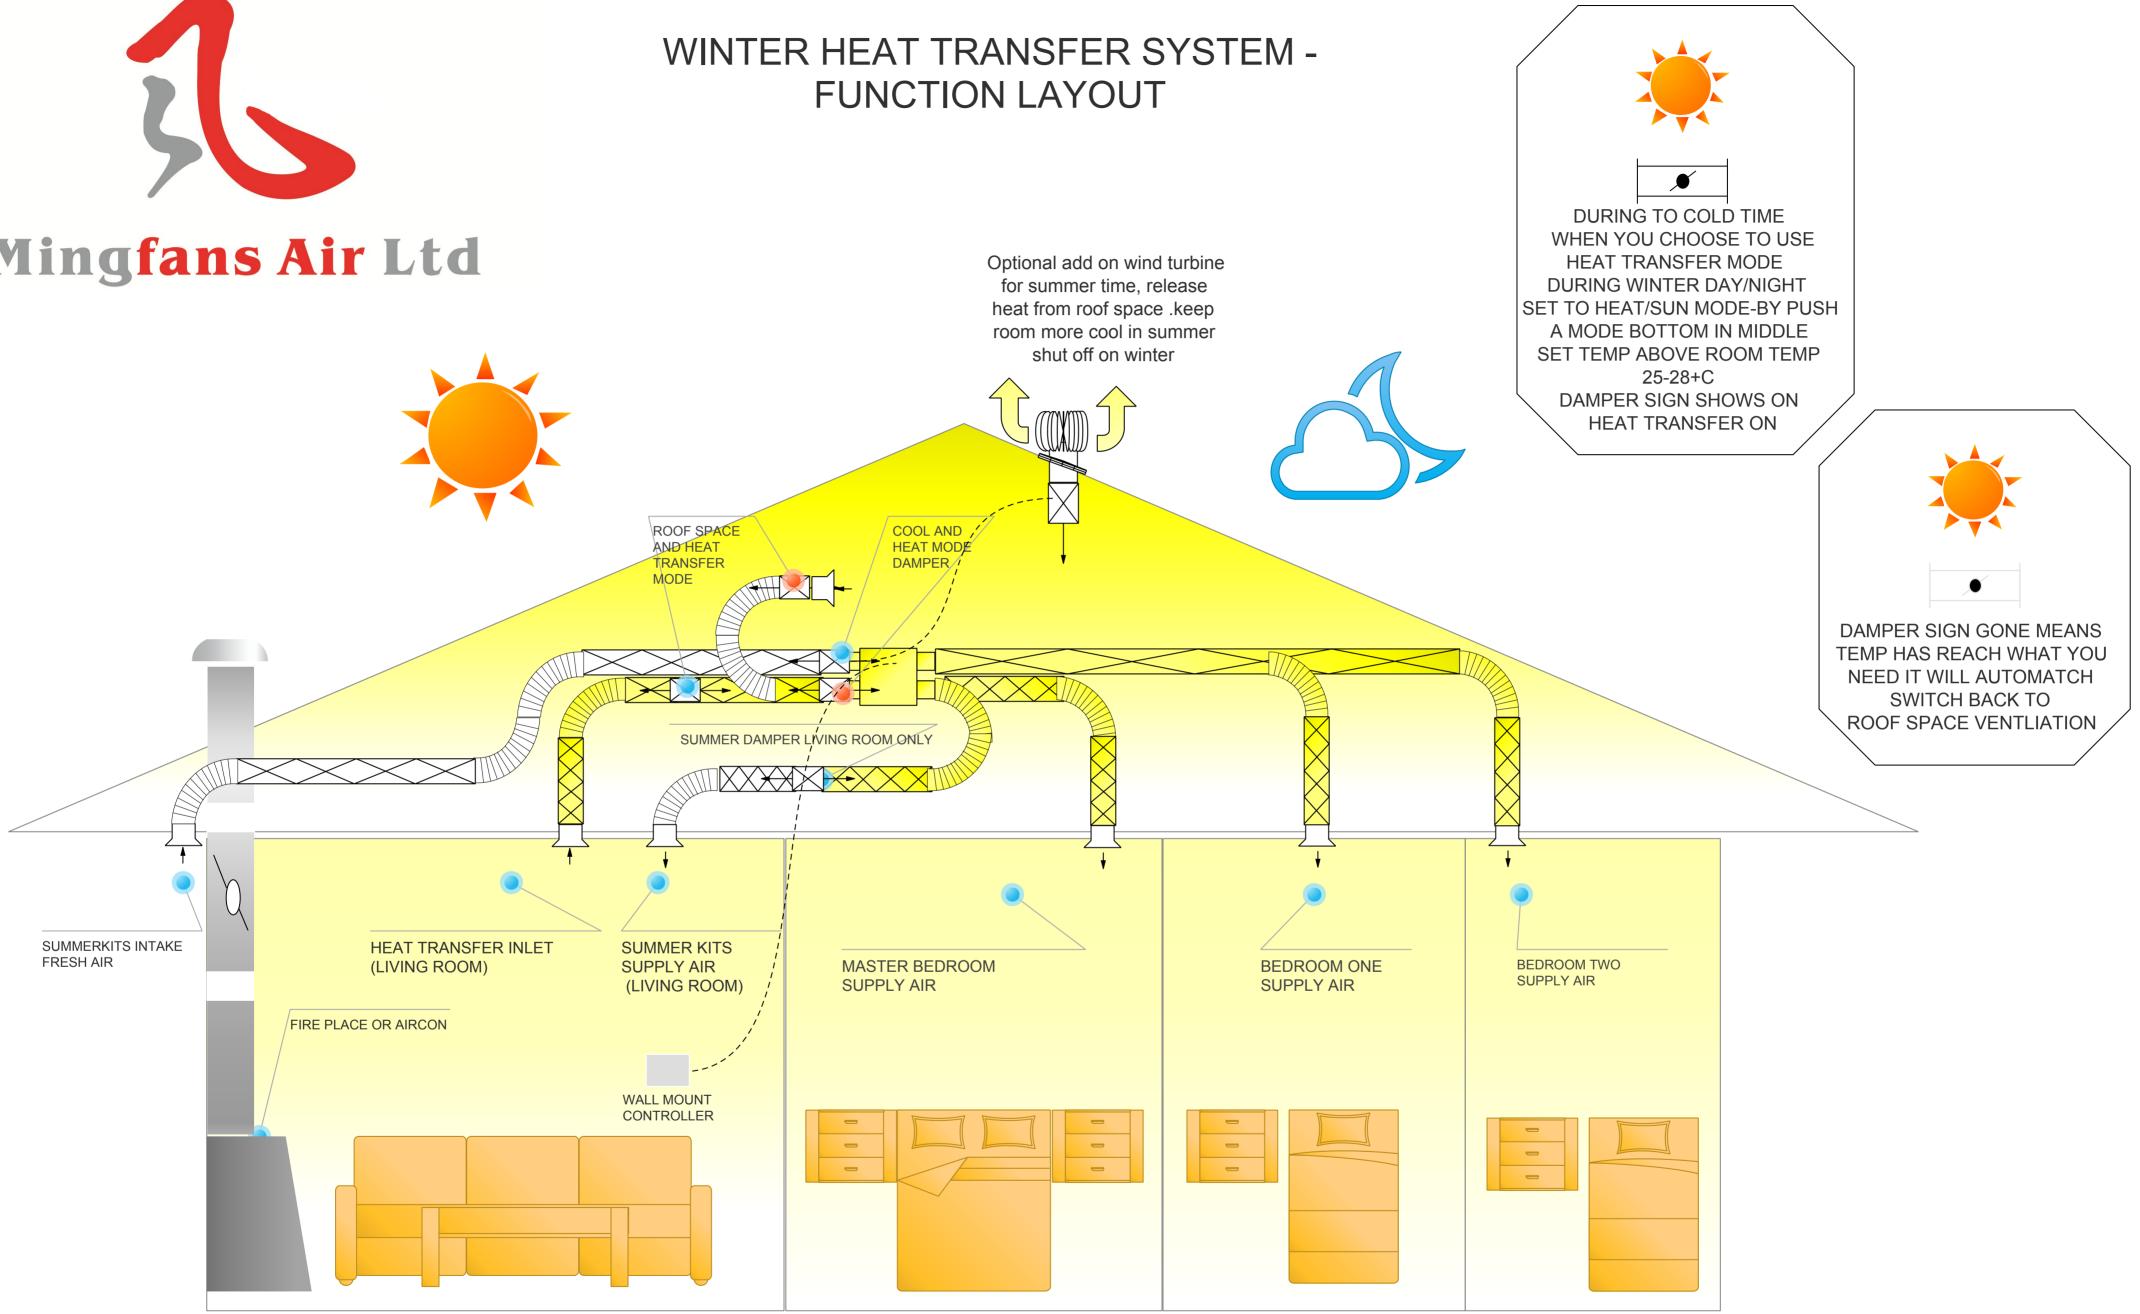


WWW.MINGFANS.CO.NZ

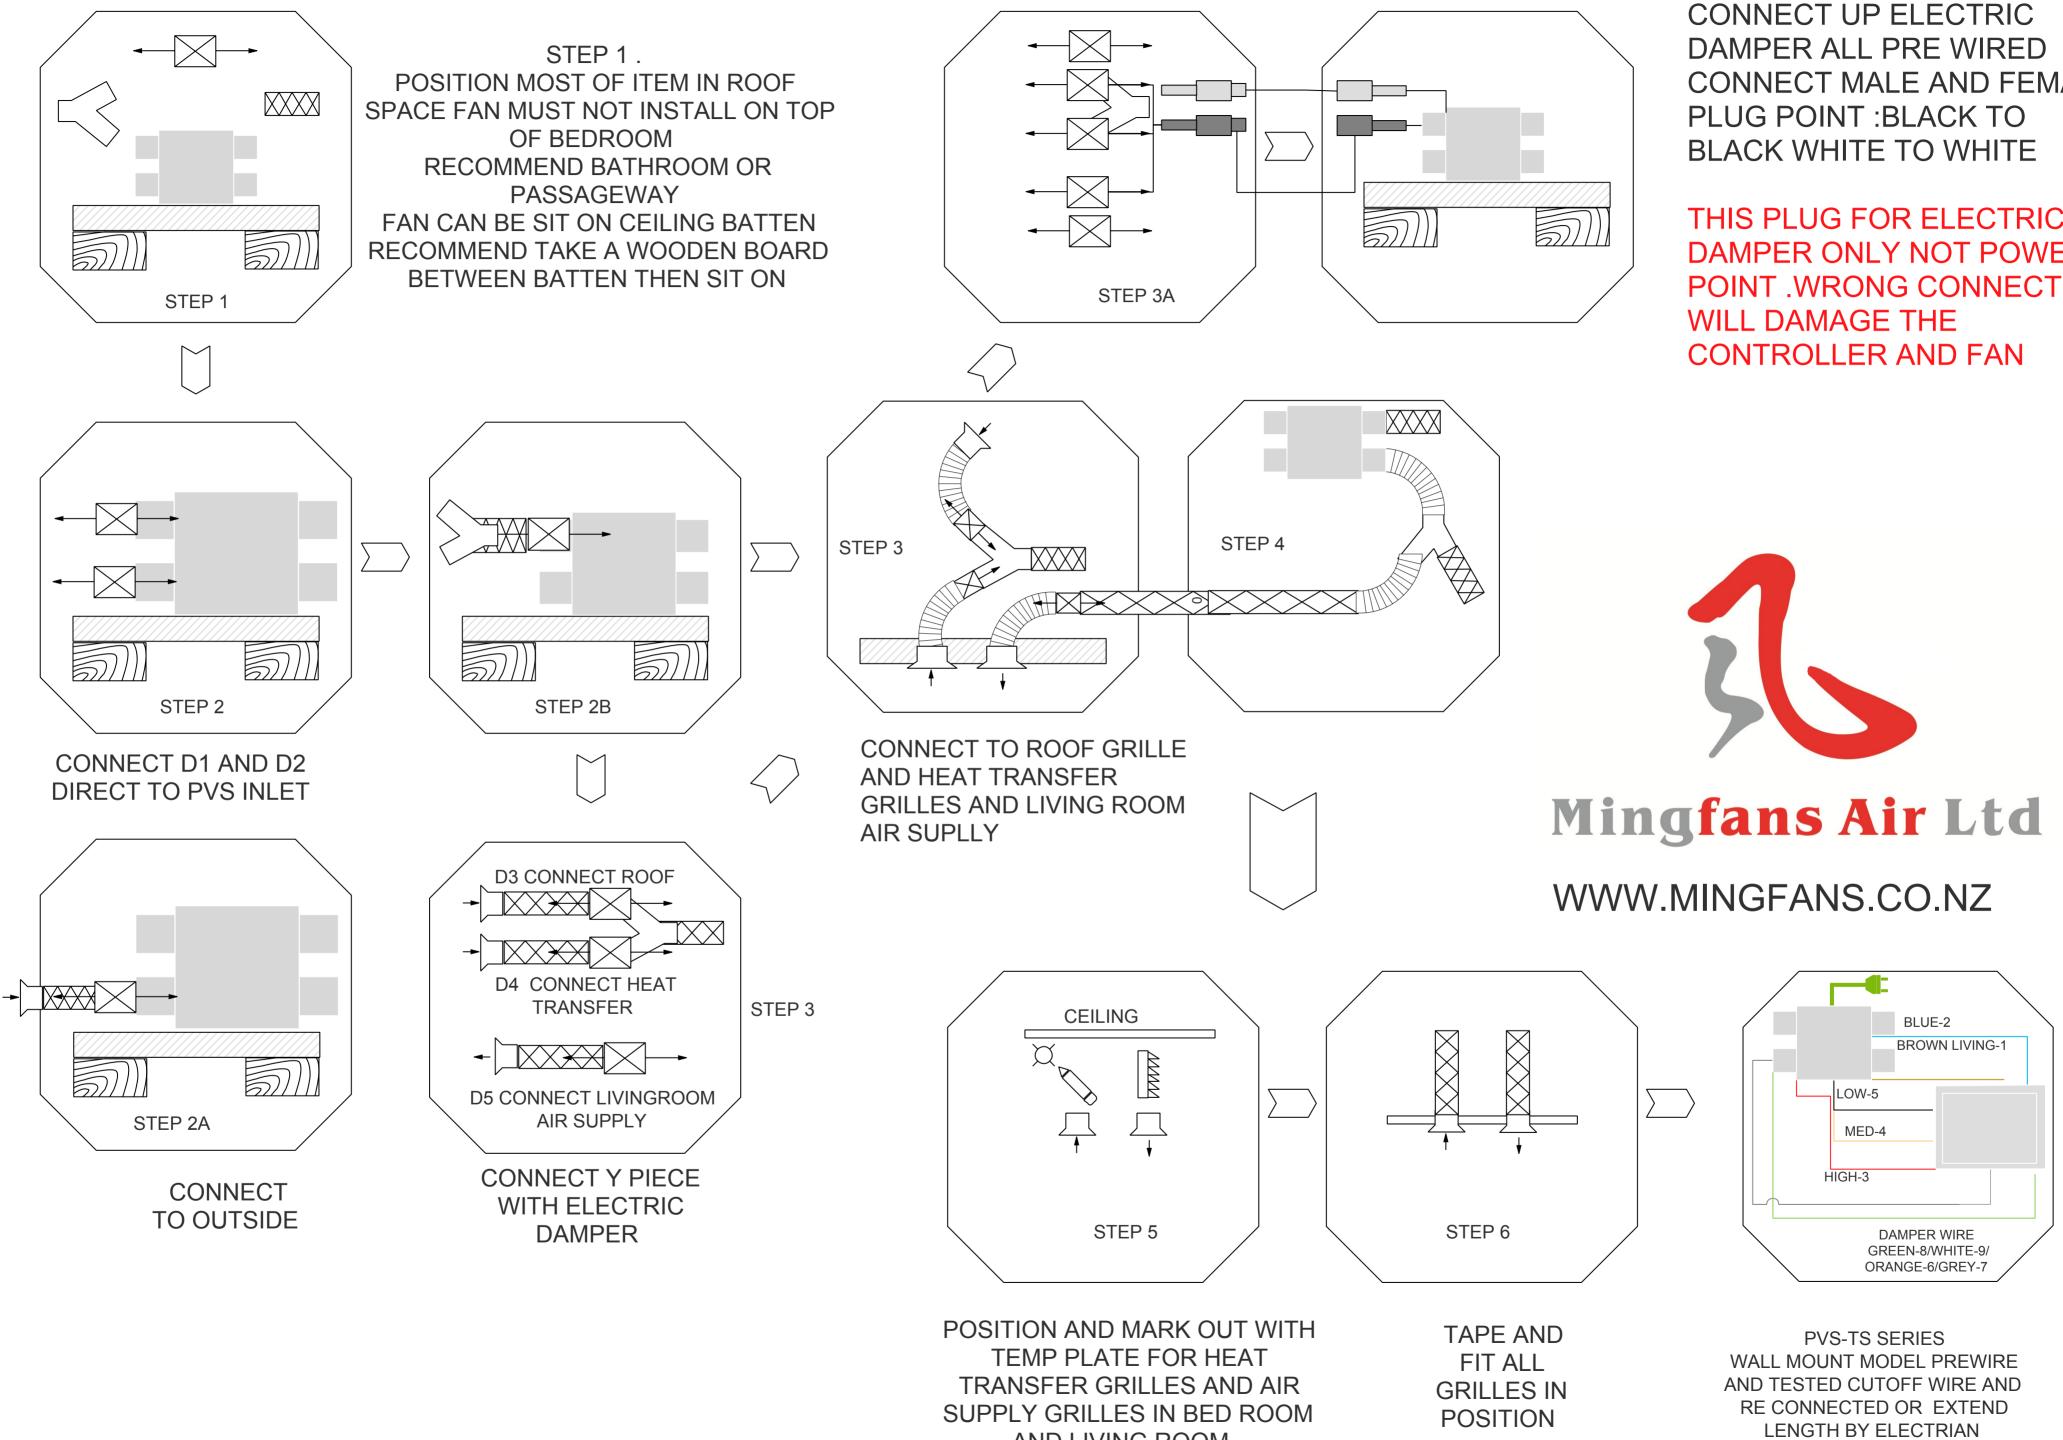

CONNECT UP ELECTRIC CONNECT MALE AND FEMALE

THIS PLUG FOR ELECTRIC DAMPER ONLY NOT POWER

AND LIVING ROOM

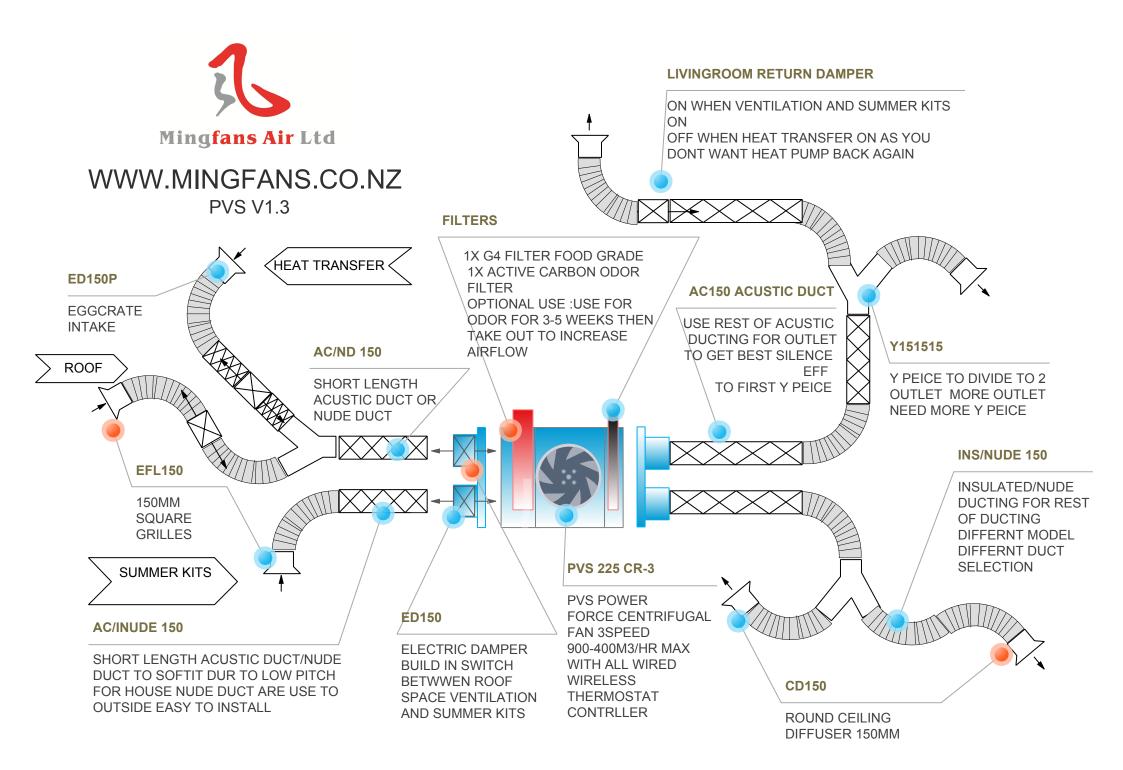






PVS TS COOL &HEAT FUNCTION

WE HAVE WIRED & SET UP TO SUIT EACH SYSTEM PLEASE READ THE SETUP BOOKLET CAREFULLY BEFORE SET UP .

Summer Day Time Cool Mode Room Temp Above Set Temp COOL ON Summer damper opening high speeds fresh air outside

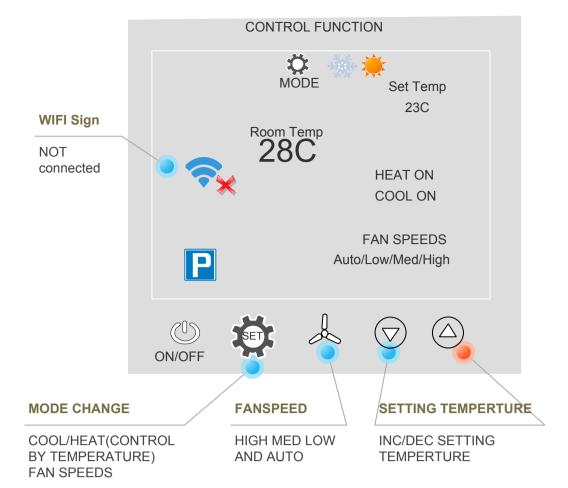


Summer Night Time Cool Mode Room Temp Below Set Temp COOL ON GONE

Roof Space Damper on Low speeds air from roof space (can be use for winter mode, ventilation only)



COOL MODE SUMMERKITS& VENTILATION

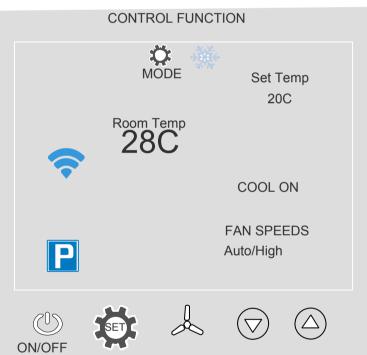


Winter Time Heat Mode Room Temp Below Set Temp HEAT ON Heat transfer Damper opening high speeds air from heat source




Winter Time Heat Mode Room Temp Below Set Temp HEAT ON GONE Roof Space Damper on Low speeds air from roof space



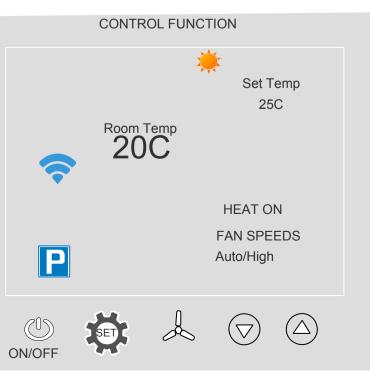



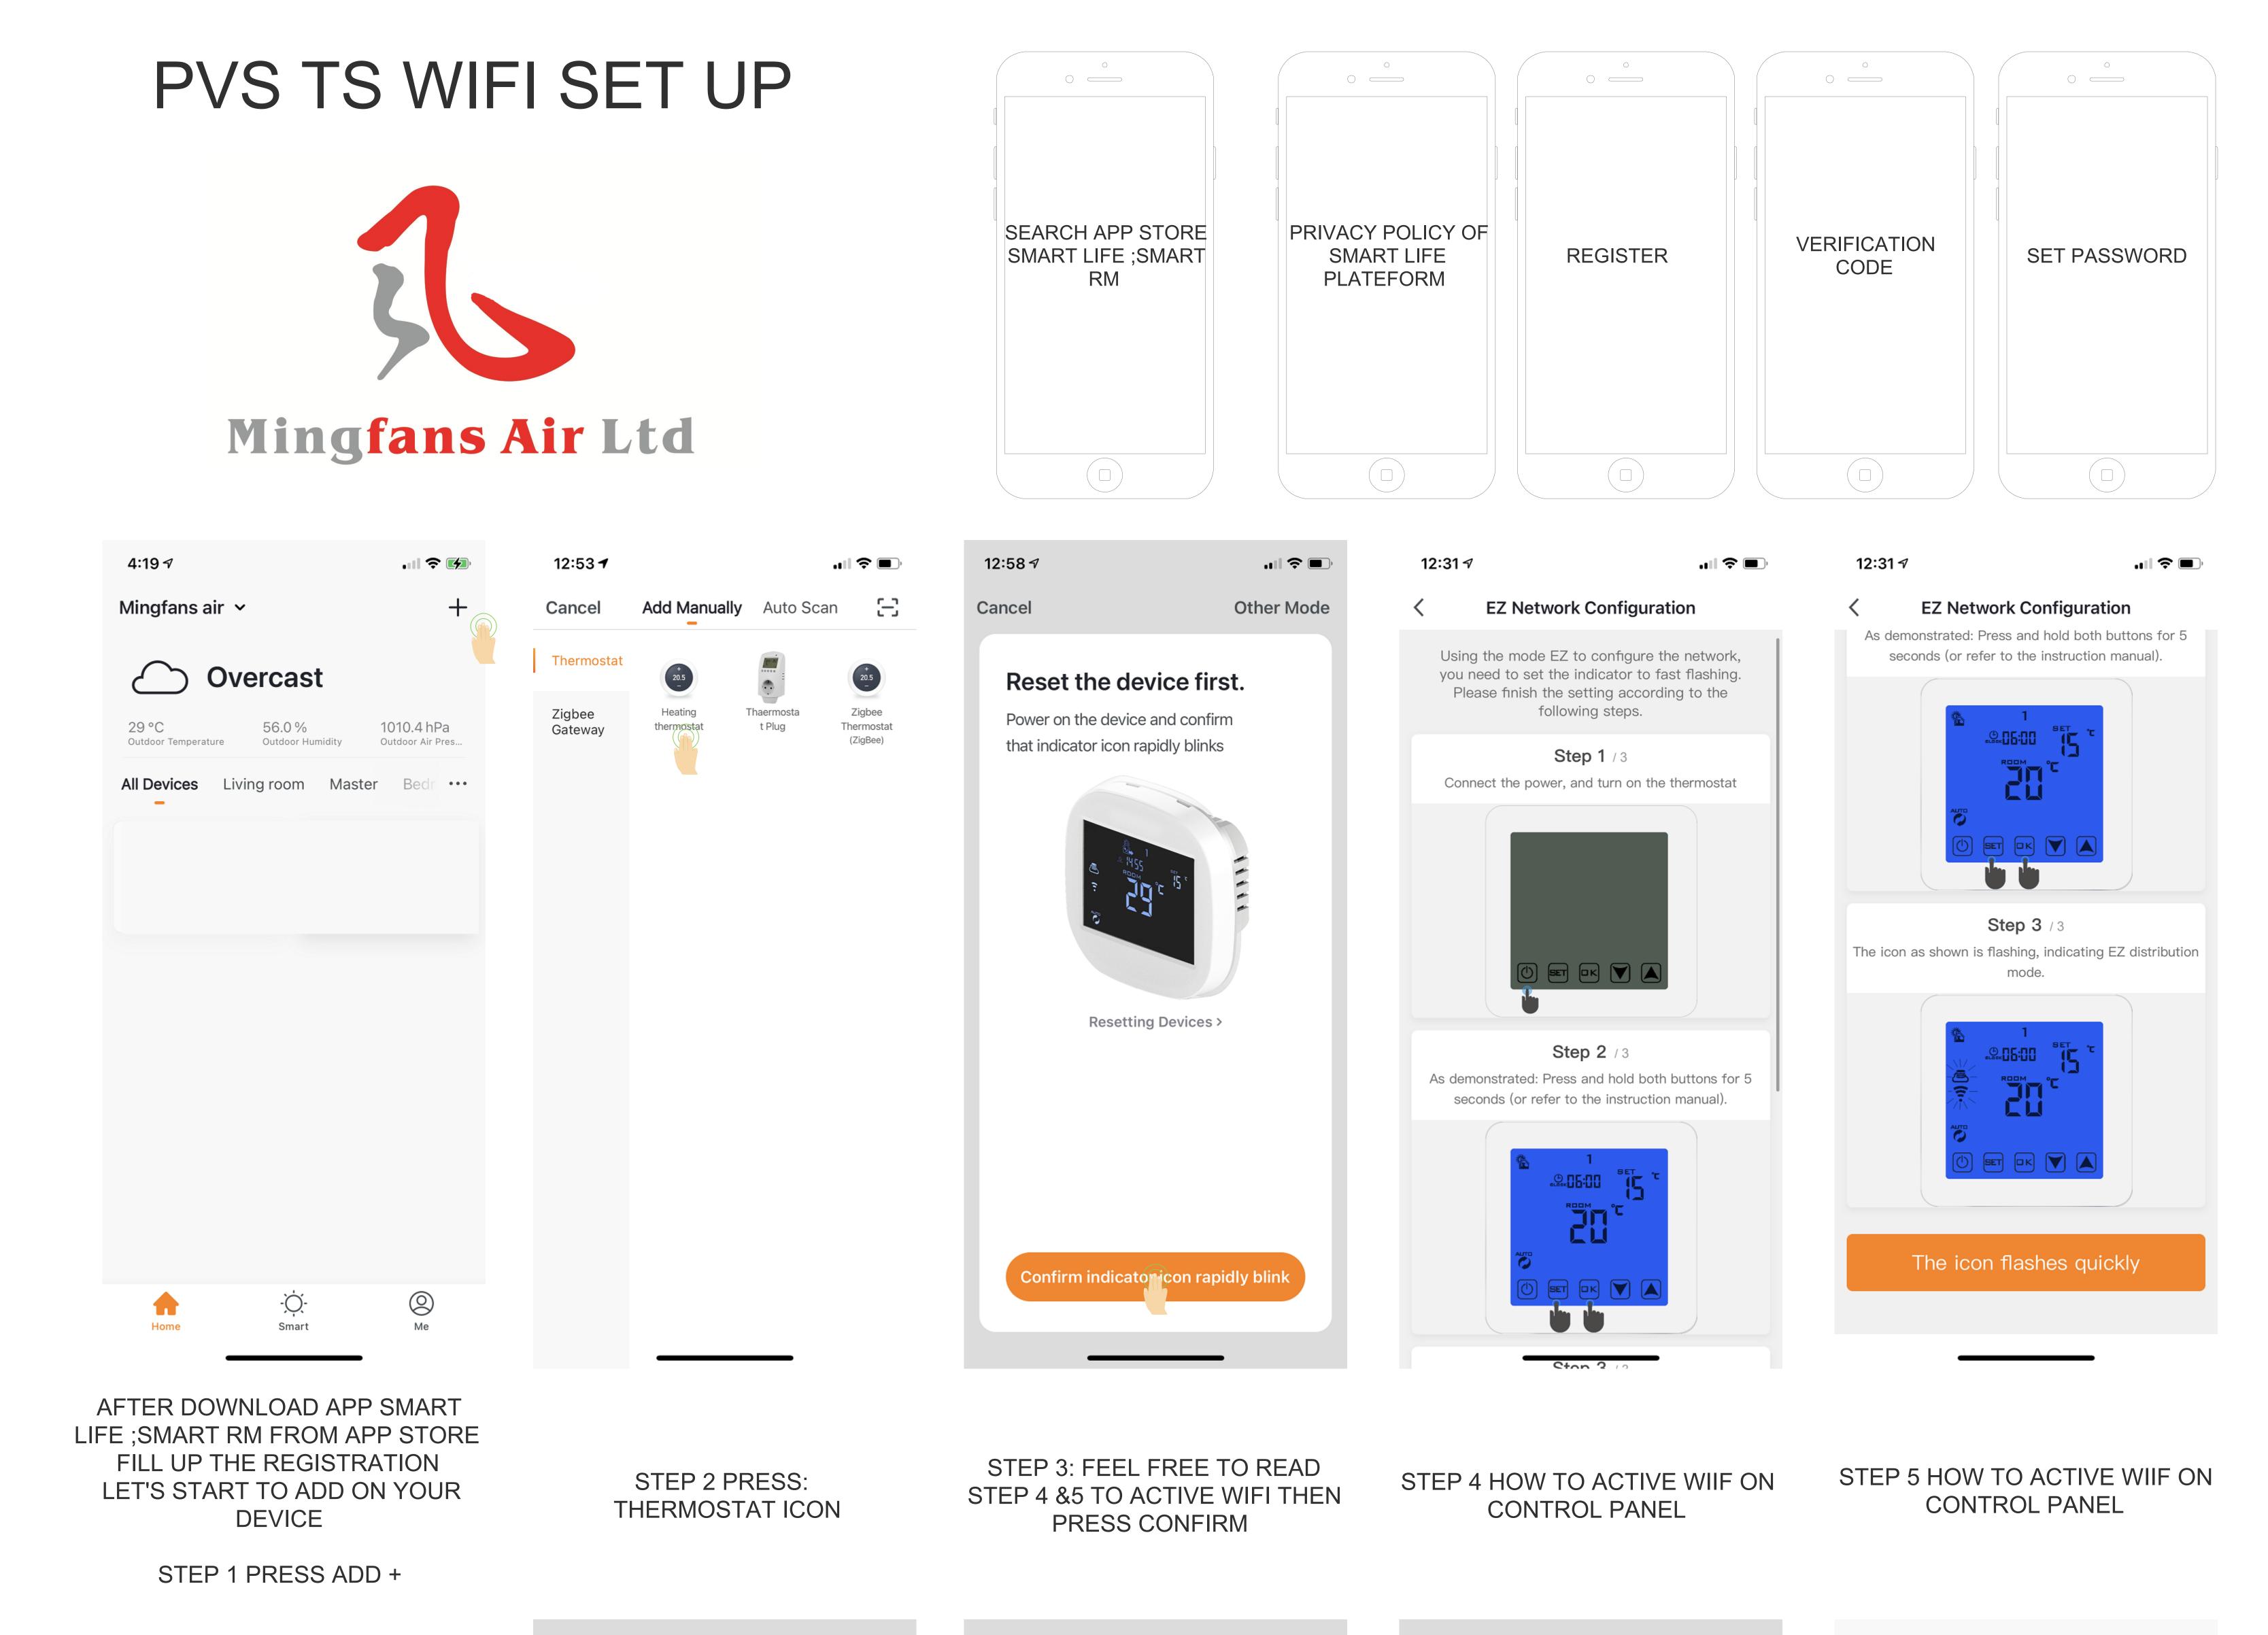

12:29 1 🤶 🗩	12:27 ৵	12:28 -7	12:36 <i>ব</i>	4:19 -7
Cancel	Cancel	Cancel	Cancel	Mingfans air 🗸 🔶 🕂
Enter Wi-Fi Password	<section-header><section-header><text></text></section-header></section-header>	<section-header>ConnectingPlace your router, mobile phone, and device as close as possible</section-header>	<section-header><section-header><section-header><section-header><section-header><section-header><section-header><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/><image/></section-header></section-header></section-header></section-header></section-header></section-header></section-header>	Diversion 29 °C Outdoor Temperature 56.0 % Outdoor Air Presure Al Devices Living room Master Bedr Image: Comparison of the set o
<text><text><text><text></text></text></text></text>	Device found Register Device to Smart Cloud Initializing device	Device found Register Device to Smart Cloud Initializing device	Done	Image: Smart Image: Smart

STEP 6 ENTER YOUR OWN WIFI PASSWORDS

AUTO SET UP % PLS NOTES WIFI ON 2.4G ONLY 5G NOT ACCEPTABLE



ALL DONE

YOUR DEVICE HAS ADD ON APP YOU CAN ADD ON AS MANY SMART WIFI AS YOU WANT

PVS APP PANEL FUNCTION

Mode control

Cooling


Heating


Ventilate

cooling heating automatically

Done

MODE CONTROL

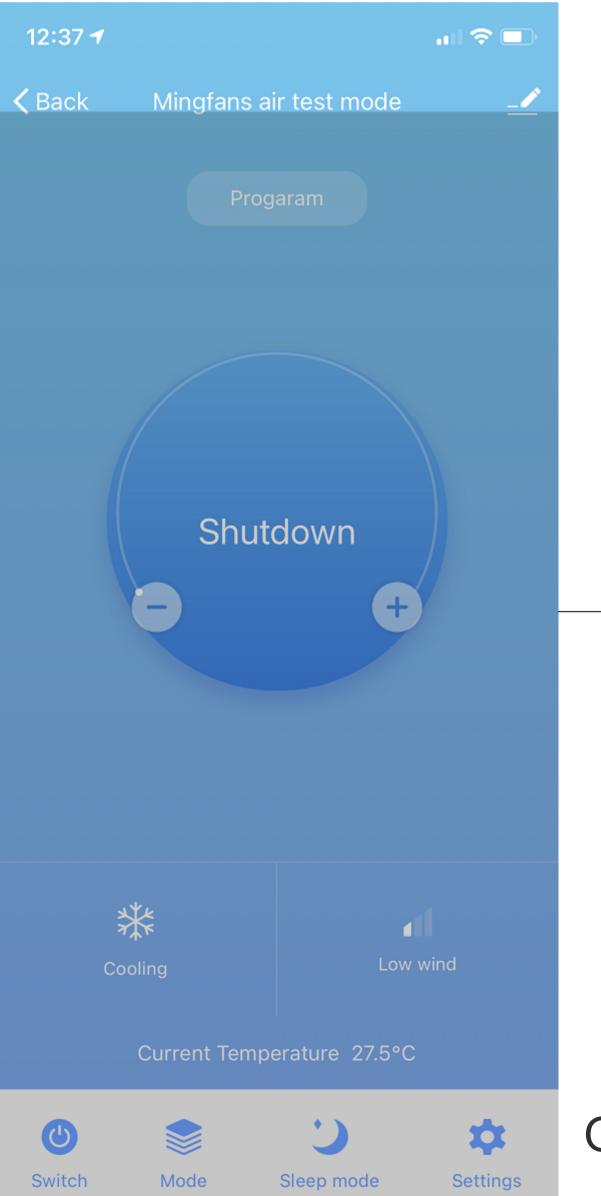

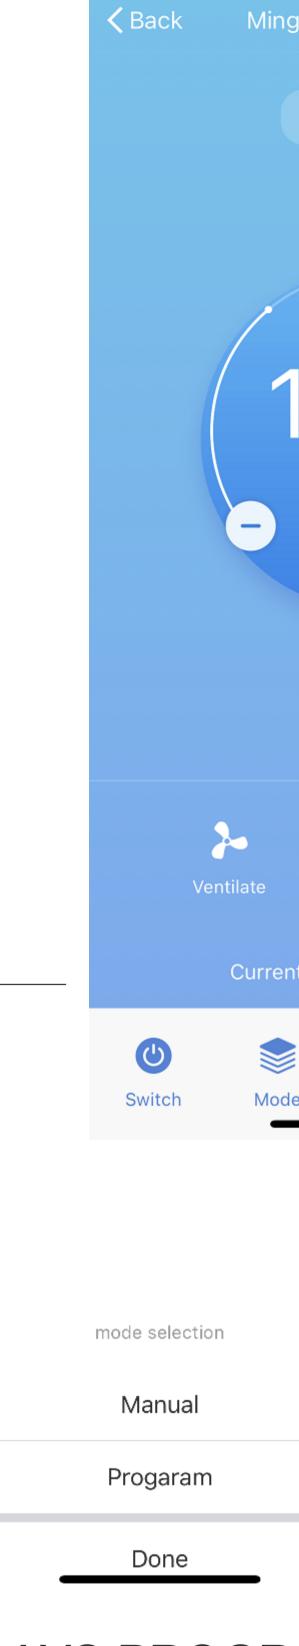

4:06 🕇

7 DAYS PROGRA MANUAL

ON/OFF

fans air test mode						
Progaram		FAN	SPEED)S		
			Gear			
5.0°°		Lo	ow wind			
		Μ	lid wind			
+		Hi	gh wind			
		Autor	matic wind			
			Done			
Low wind t Temperature 28.0°C				4:15 - 1 〈 Back	Setti	ngs
.	t Settings			Child Lock		
				time period p	rogramn	ning
				Cloud timing		
		Sleep mode		The following conte	ent needs to	o enter
	S	Sleep mode ON Sleep mode OFF		temperature calibration		
	S			child lock type		
	_	Done		Set temperat		
AM /	SLEEP MODE ON/OFF			Set lower tem		
S			· F-	fan energy sa		fan
				programming	ı type	

ADV. SETUP



ALL ADVANCED SET UP REQUEST PASSWORD TO RESET FACTORY PASSWORD "123456"

.ıl 🗢 🕻	2)	
	>	
	>	
a password to set		
-1°C	>	
Full lock	>	
35°C	>	
t 5°C	>	
energy saving	>	
7	>	

4:01 🕫					'' II ≎	K
く Back		Setting	S			
Child Loc	k					
time	Please e	nter a	passw	ord		>
Clou 123	3456					>
	Cancel		Sa	ve		
The following	content ne	eas lo er	iter a pa	sswor	u io set	
temperat	ure calib	oration			-19	°C >
child lock	type			F	Full lo	ck >
Set temp	erature l	imit			359	°C >
q w e	e r	t y	′ u	i	0	р
as	d f	g	h	j	k	Ι
δZ	xc	V	b	n	m	\bigotimes
123		space			retu	ırn
					ļ	<u>)</u>