







PVS-RH SYSTEM FUNCTION LAYOUT

Mingfans Air Ltd

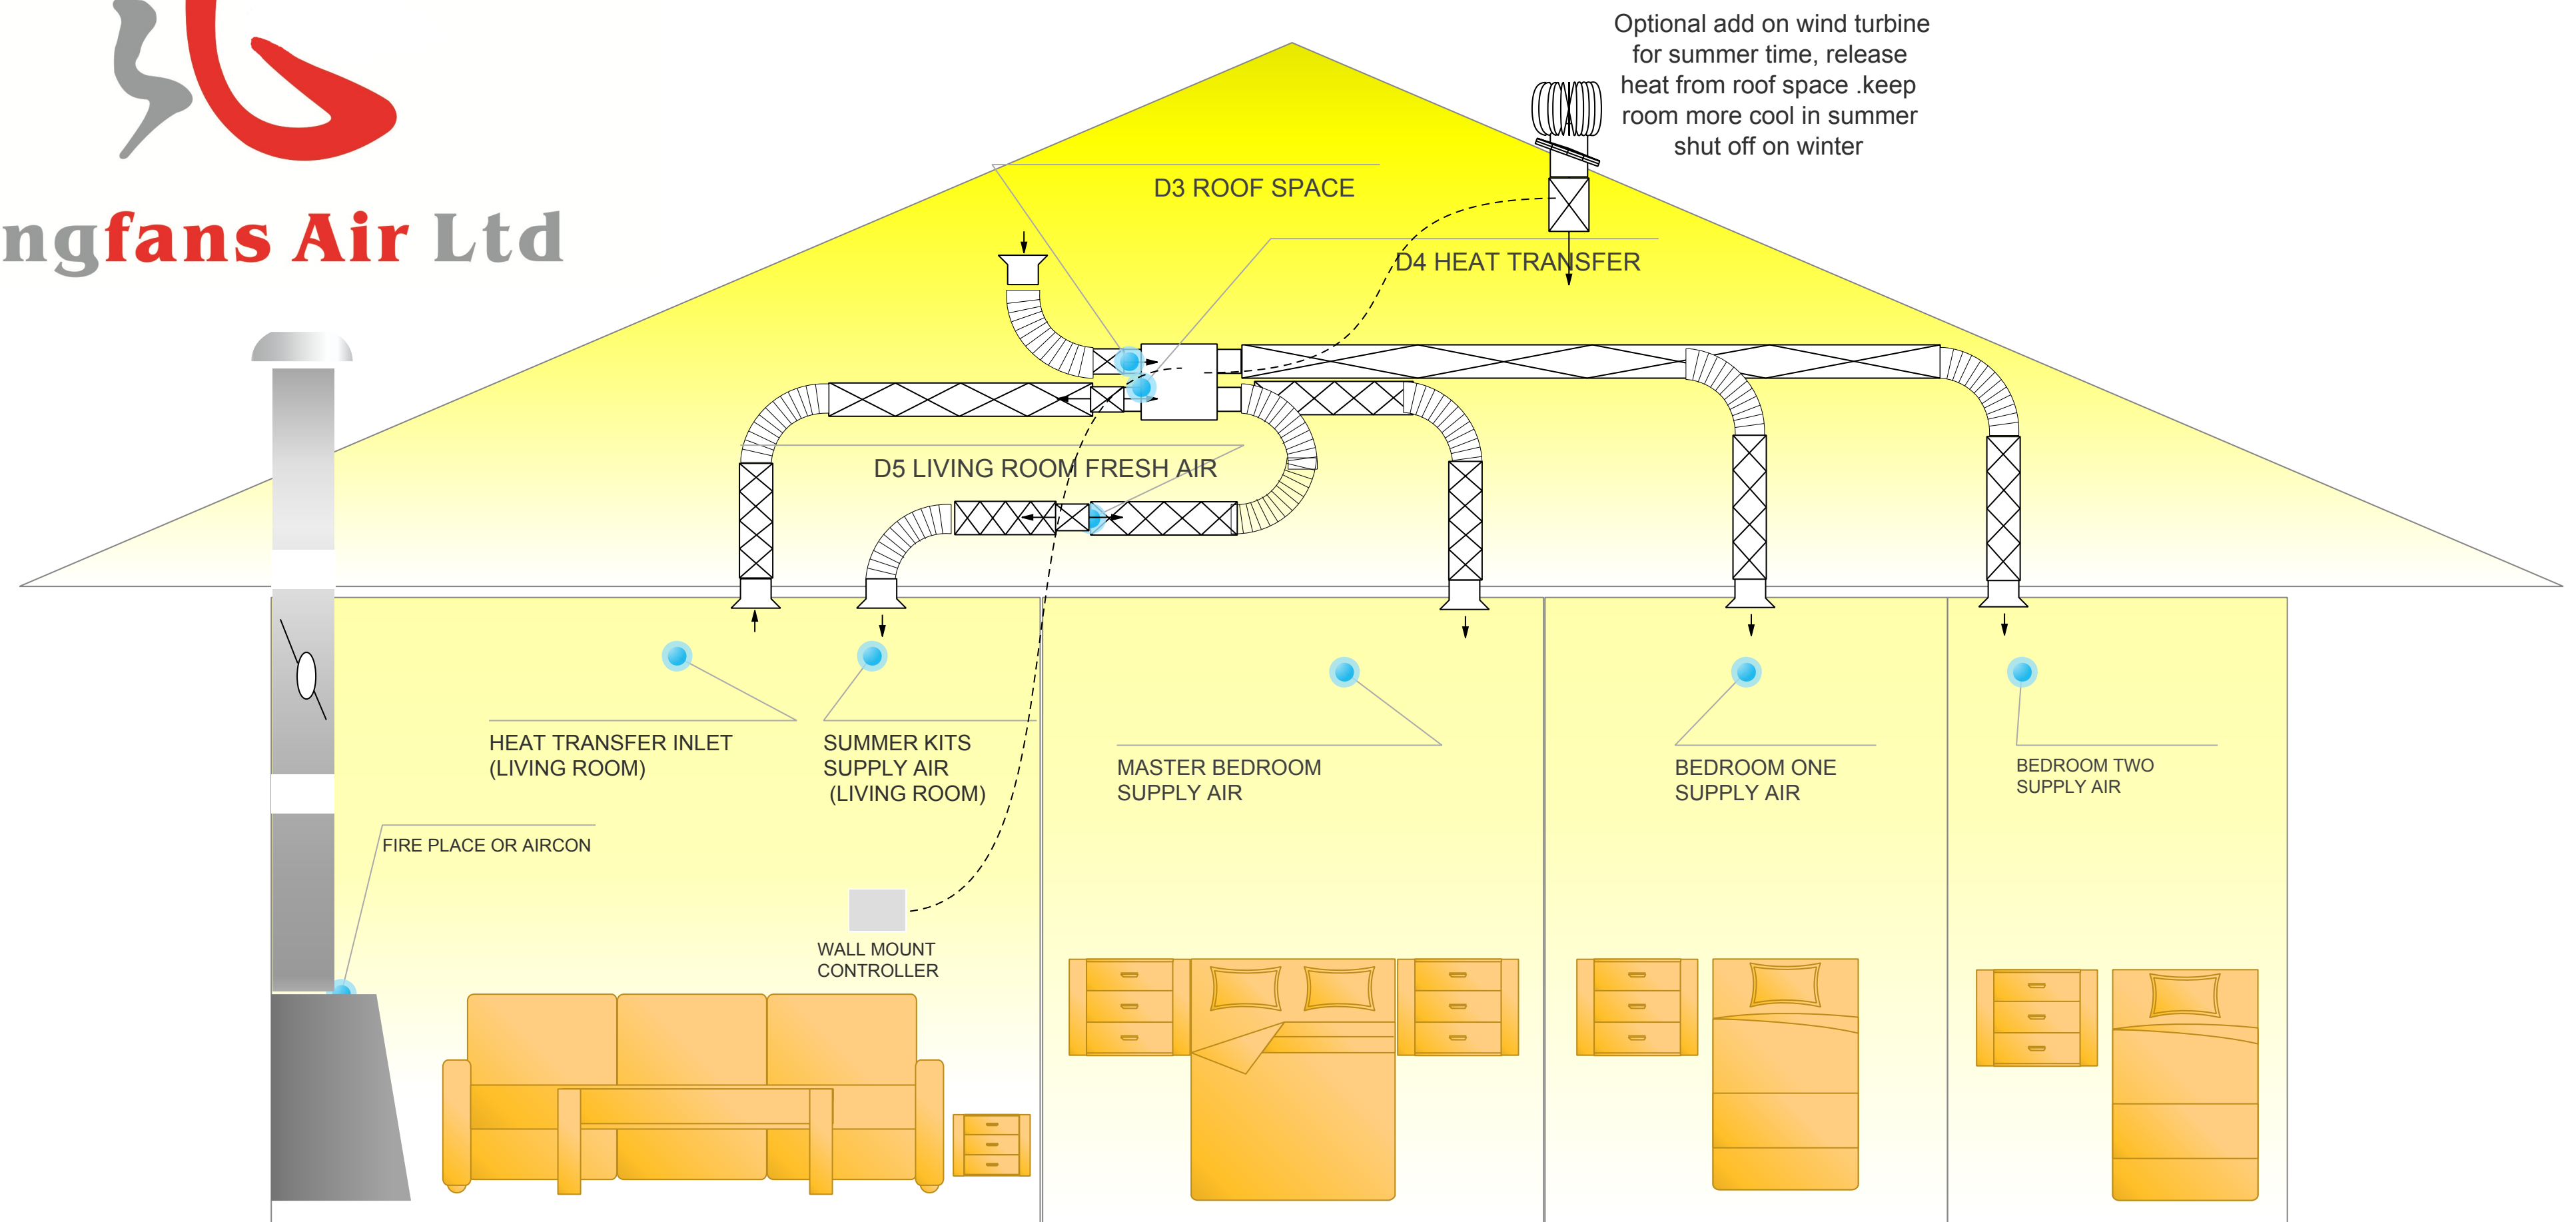

Optional add on wind turbine
for summer time, release
heat from roof space .keep
room more cool in summer
shut off on winter

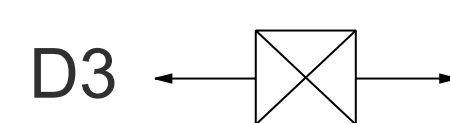

D3 ELECTRIC DAMPER
ROOF SPACE AIR SUPPLY

D4 ELECTRIC DAMPER
HEAT TRANSFR MODE

D5 ELECTRIC DAMPER
LIVING ROOM FRESH AIR SUPPLY
OPEN WHEN ROOF AND SUMMER KITS ON
CLOSE WHEN HEAT TRANSFER ON




INTAKE AIR EGGRATE
GRILLE
AND FRESH AIR GRILLE




SUPPLY AIR ROUND CEILING
DIFFUSERS




SOUND PROVE ACUSTIC DUCTING
BETWEEN FAN
AND INSULATED DUCTING FOR
THE REST CONNECTION

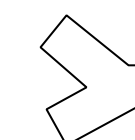

Y PIECE FOR DIFFEENT
OUTLET CONNECTION

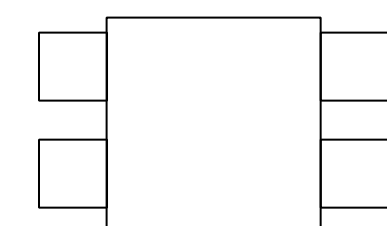


PVS SYSTEM

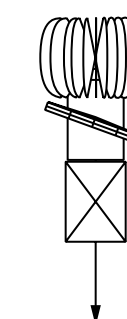



Optional add on wind turbine
for summer time, release
heat from roof space .keep
room more cool in summer
shut off on winter



Mingfans Air Ltd




PVS-RH SERIES
VENTILATION/WINTER MODE
VENTILATION



IN WINTER DAY/NIGHT TIME
SET IN WINTER/COOL MODEL
SET TEMP 23-25C

VENTILATION MODE ON ALL
TIME (AIRFLOW ROOF SPACE)


ROOF SPACE VENTILATION SYSTEM -
FUNCTION LAYOUT

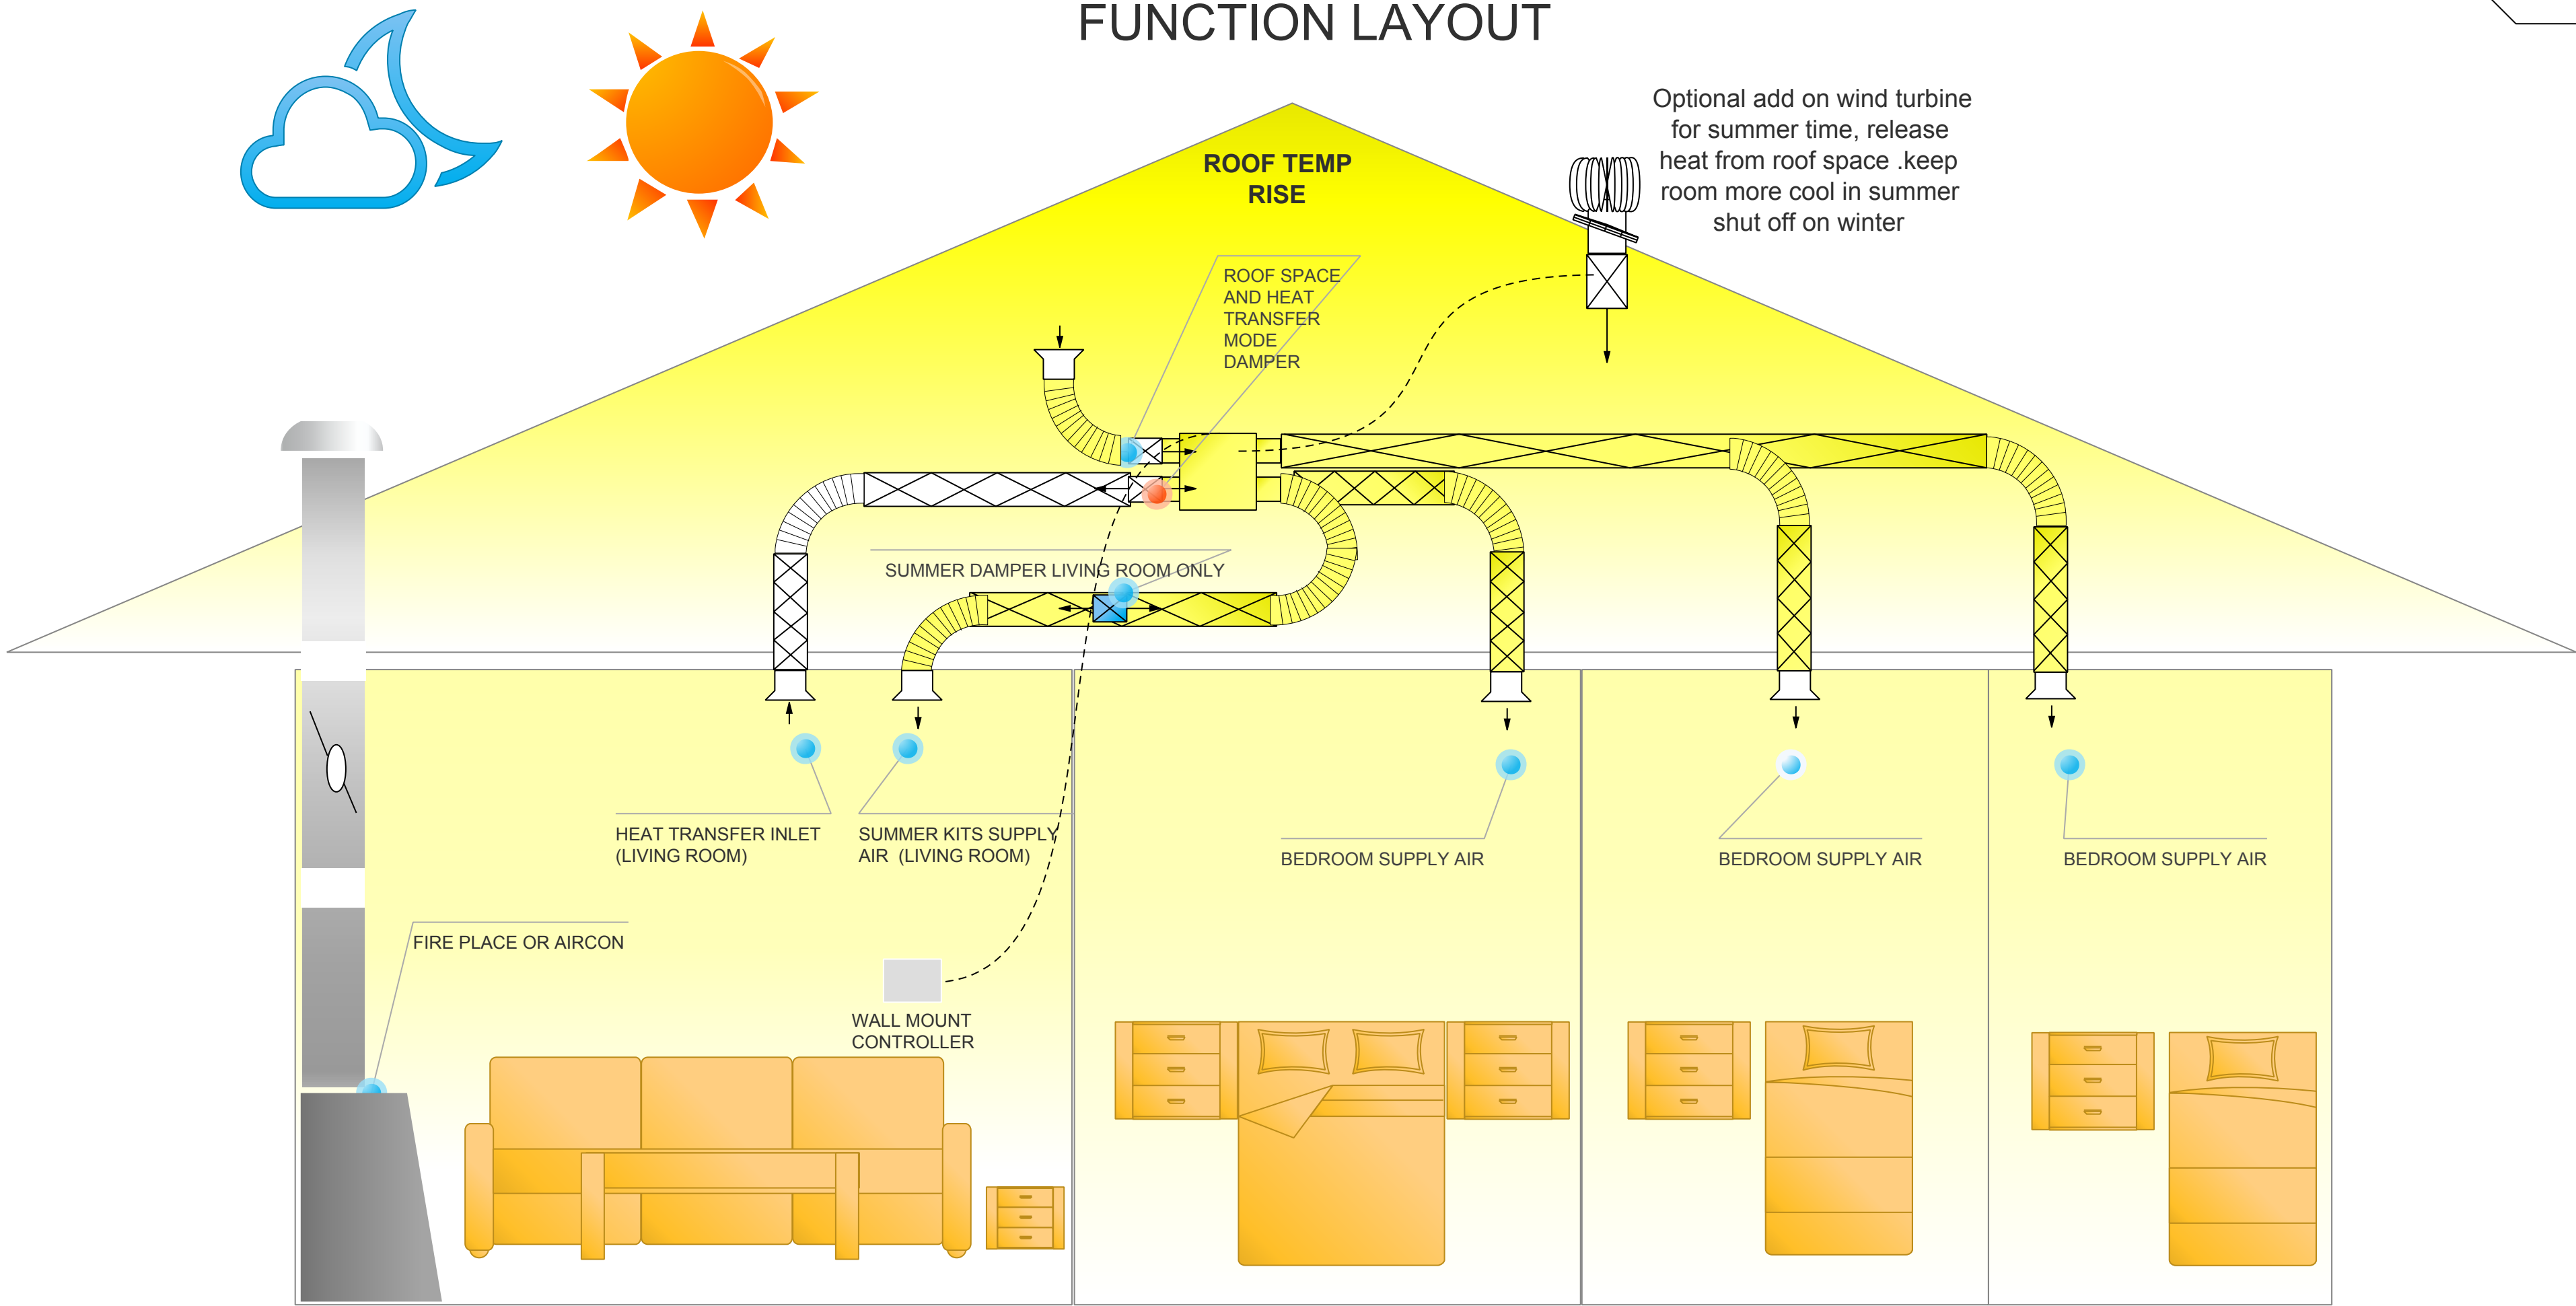




Mingfans Air Ltd


HEAT TRANSFER SYSTEM - FUNCTION LAYOUT

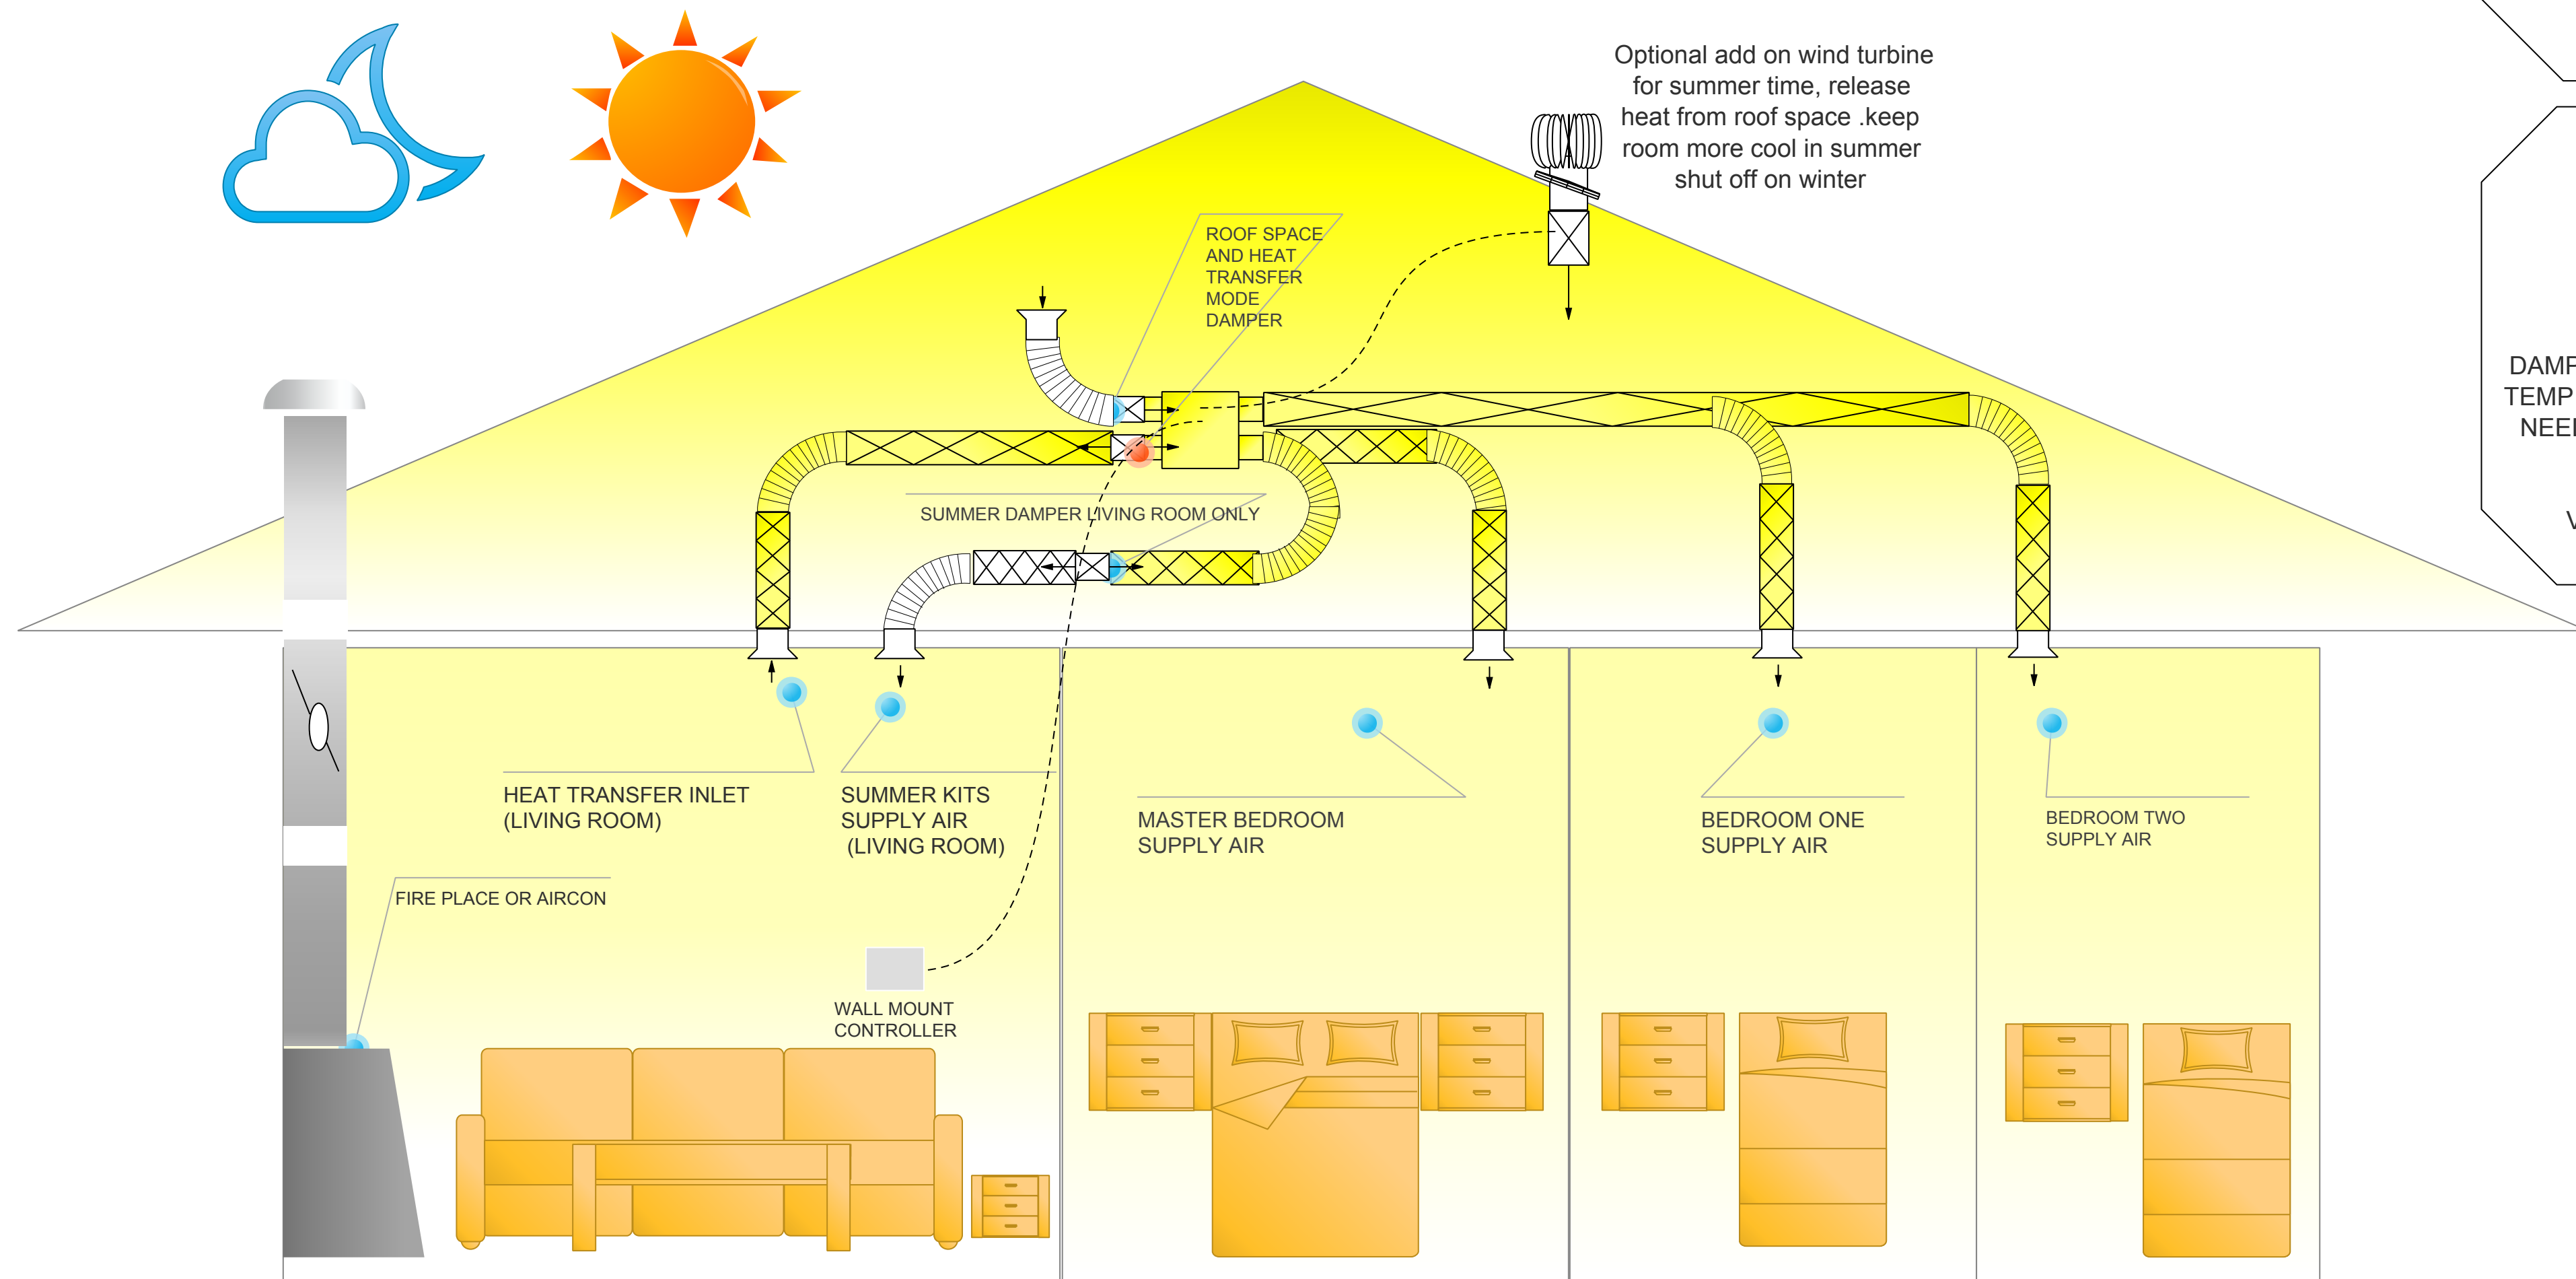



PVS-RH SERIES
HEAT TRANSFER/
VENTILATION MODE
RECOMMENDED USE FOR
WINTER NIGHT TIME


HEAT VALE ON
DURING TO COLD WINTER
WHEN YOU CHOOSE TO USE
HEAT TRANSFER MODE
DURING WINTER DAY/NIGHT
SET TO HEAT/SUN MODE-BY PUSH
A MODE BOTTOM IN MIDDLE
SET TEMP ABOVE ROOM TEMP
25-28+C
SIGN SHOWS ON
HEAT TRANSFER ON
HIGH SPEED



DAMPER SIGN GONE MEANS
TEMP HAS REACH WHAT YOU
NEED IT WILL AUTOMATCH
SWITCH BACK TO
ROOF SPACE
VENTILATION MODE
LOW SPEEDS

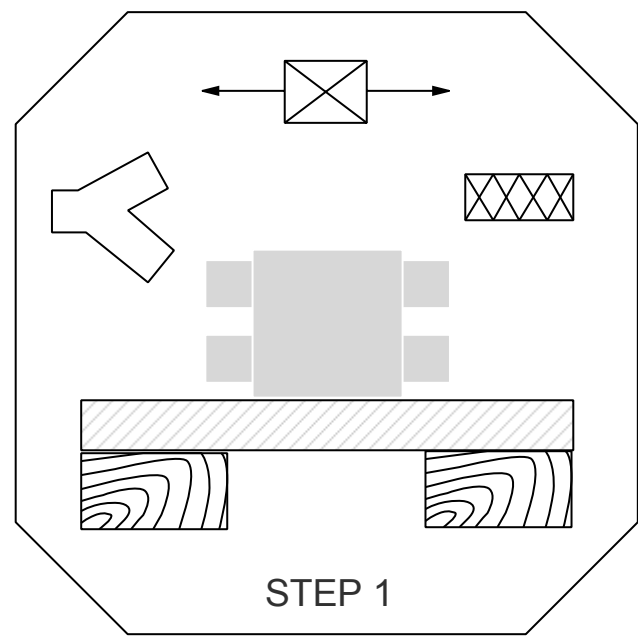


STEP 1 .
POSITION MOST OF ITEM IN ROOF SPACE FAN
MUST NOT INSTALL ON TOP OF BEDROOM
RECOMMEND BATHROOM OR PASSAGEWAY
FAN CAN BE SIT ON CEILING BATTEN WITH A
THICK POLYWOOD BOARD BETWEEN BATTEN
OR USE CHAIN TO HANG THE FAN
POLYWOOD BOARD AND CHAIN CAN
PURCHASE THROUGH ANY HARDWARE STORE

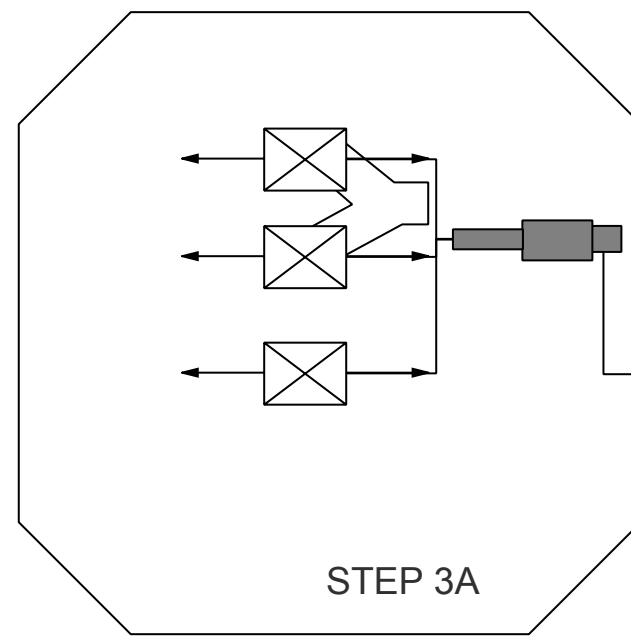


STEP 3A

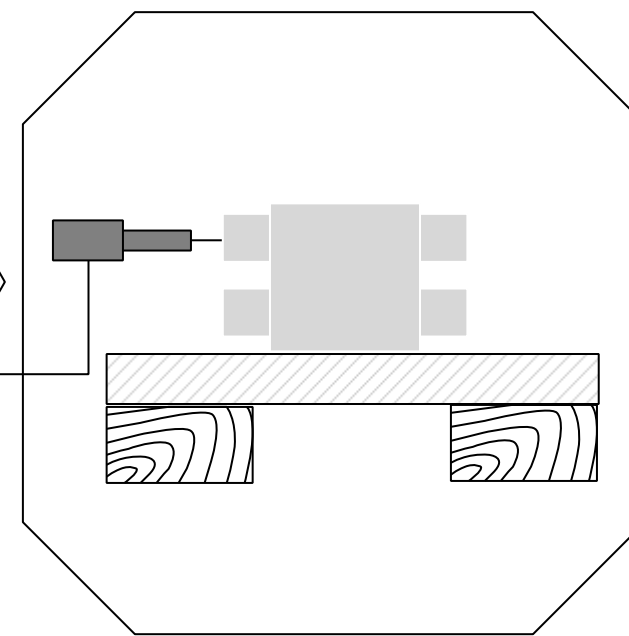


CONNECT UP ELECTRIC
DAMPER ALL PRE WIRED
CONNECT MALE AND FEMALE
PLUG POINT
PRE INSTALL UNITS DOESNT
NEED THIS STEP IT ALL WIRE
IN ALREADY

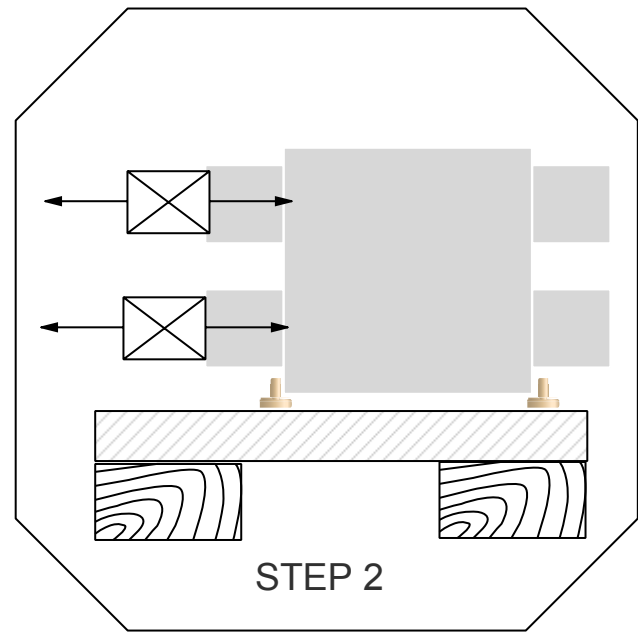

STEP 2

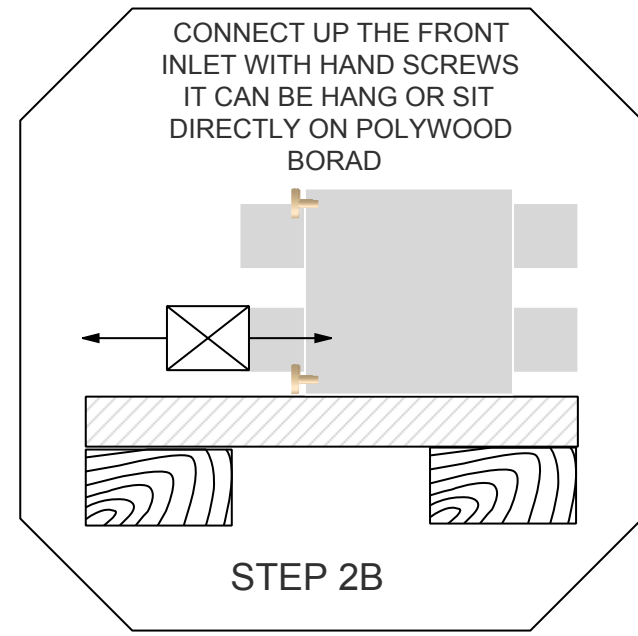

STEP 2B

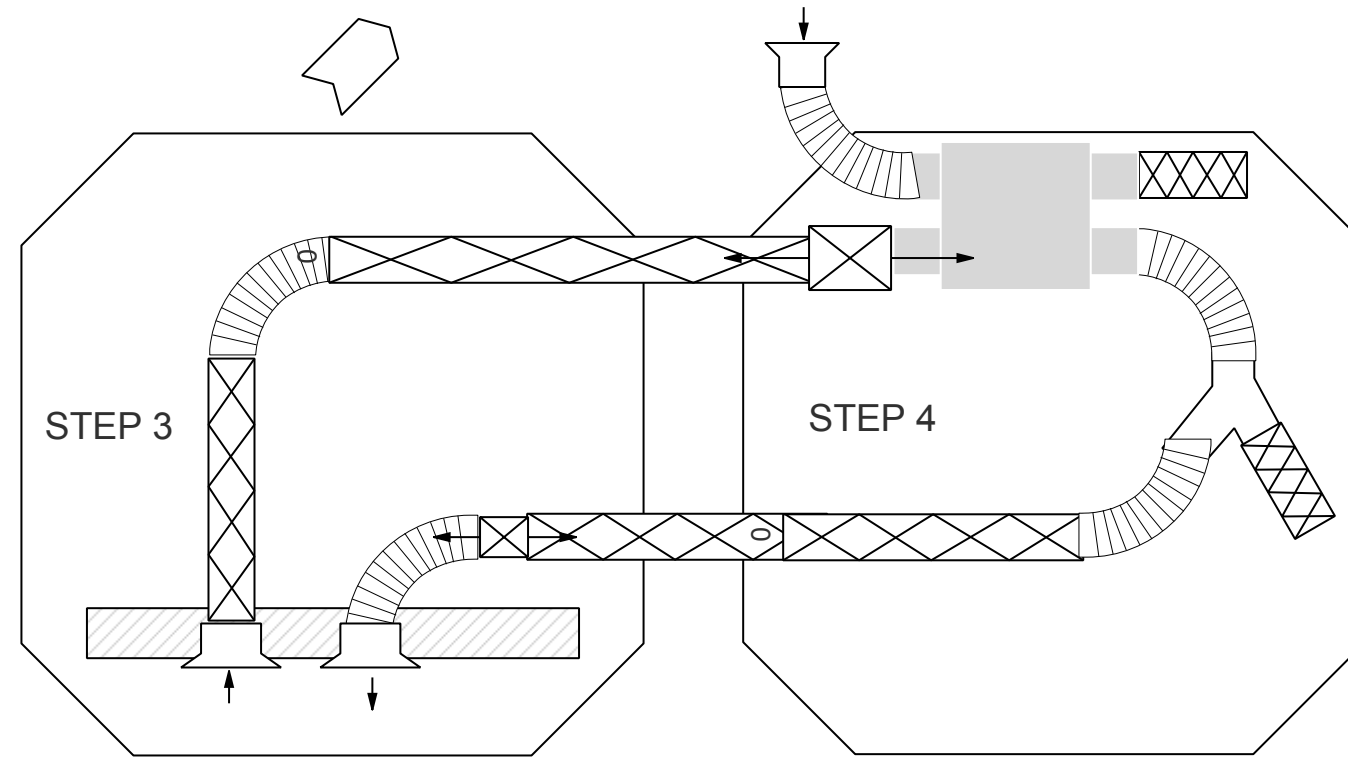


STEP 3

STEP 4


CONNECT D3 D4,AND D5 ADP
TO PVS INLET

CONNECT TO ROOF WITH GRILLES
AND HEAT TRANSFER WITH EGGCRATE
GRILLES AND LIVING ROOM AIR
SUPPLY

ALL PREWIRED
JUST MATCH UP
THE COLOR

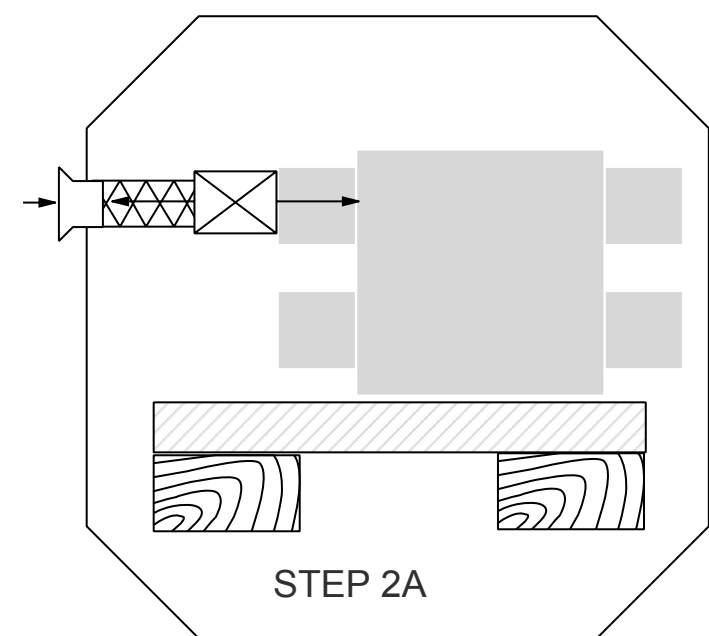


STEP 2A

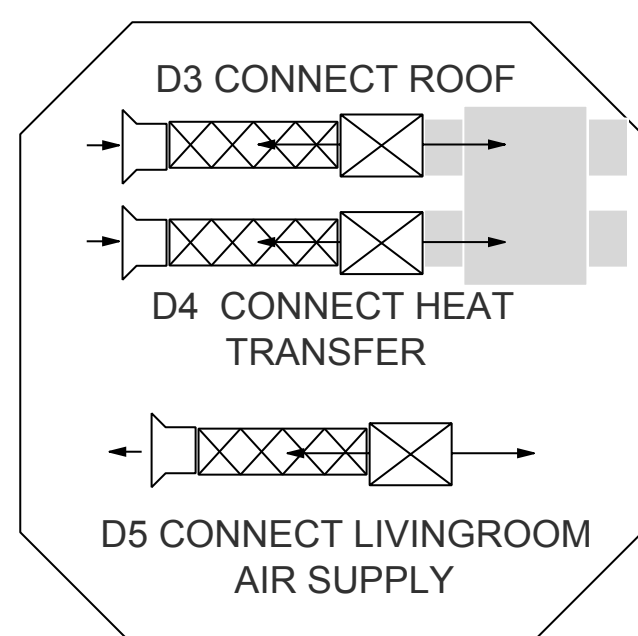

STEP 3


D3 ROOF SPACE CONNECT TO
ROOF HIGEST POSITION

CONNECT DUCTING
TO EVERY RIGHT
PLACE

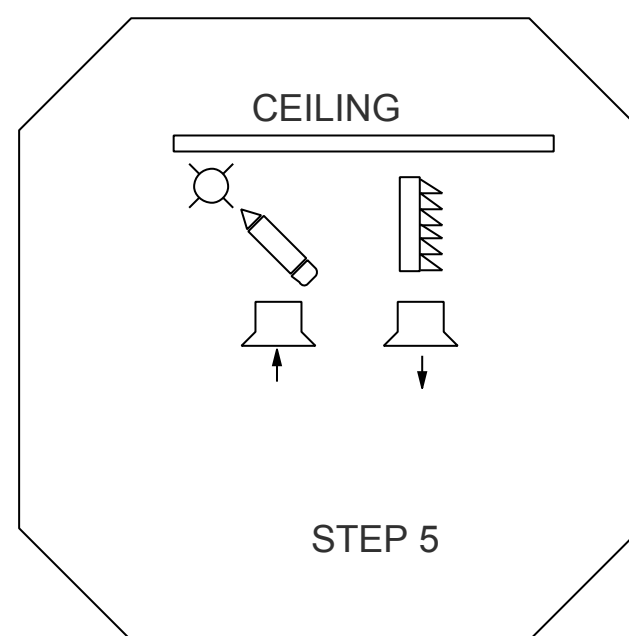



STEP 5

POSITION AND MARK OUT WITH
TEMP PLATE FOR HEAT
TRANSFER GRILLES AND AIR
SUPPLY GRILLES IN BED ROOM
AND LIVING ROOM

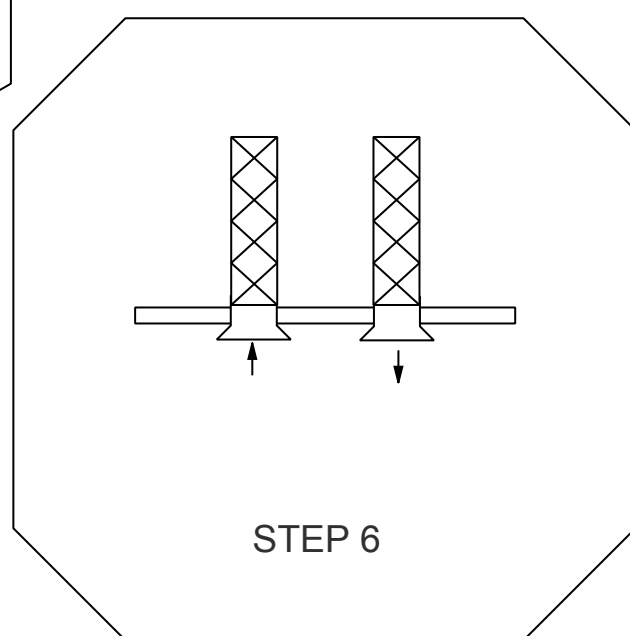

STEP 6

TAPE/
CABLETIES
AND FIT ALL
GRILLES IN
POSITION

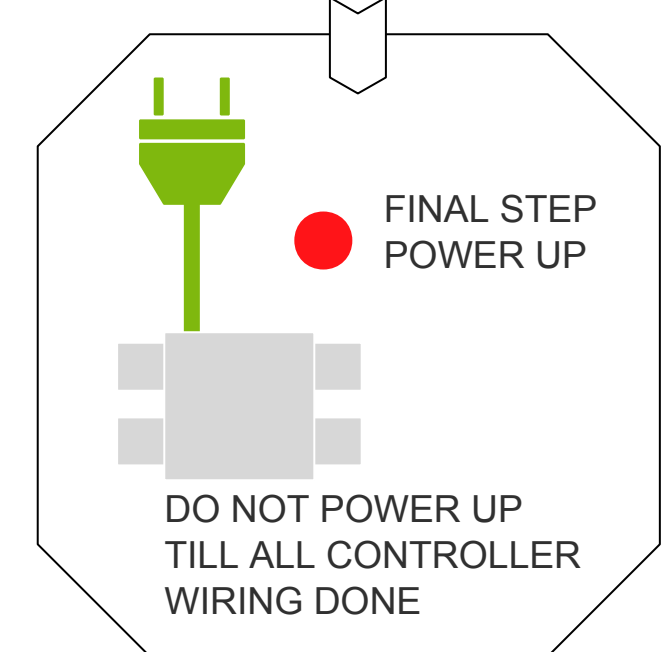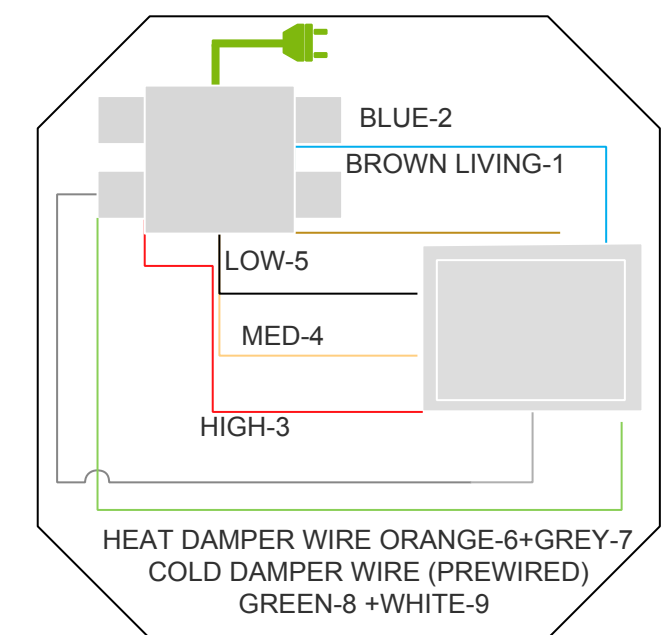

FINAL STEP
POWER UP

DO NOT POWER UP
TILL ALL CONTROLLER
WIRING DONE

PVS RH SERIES SYSTEM
PLACE IN THE LIVING ROOM /
HALLWAY TO TAKE ROOM
TEMP COLLECTLY






Mingfans Air Ltd

WWW.MINGFANS.CO.NZ

PVS-RH V1.4

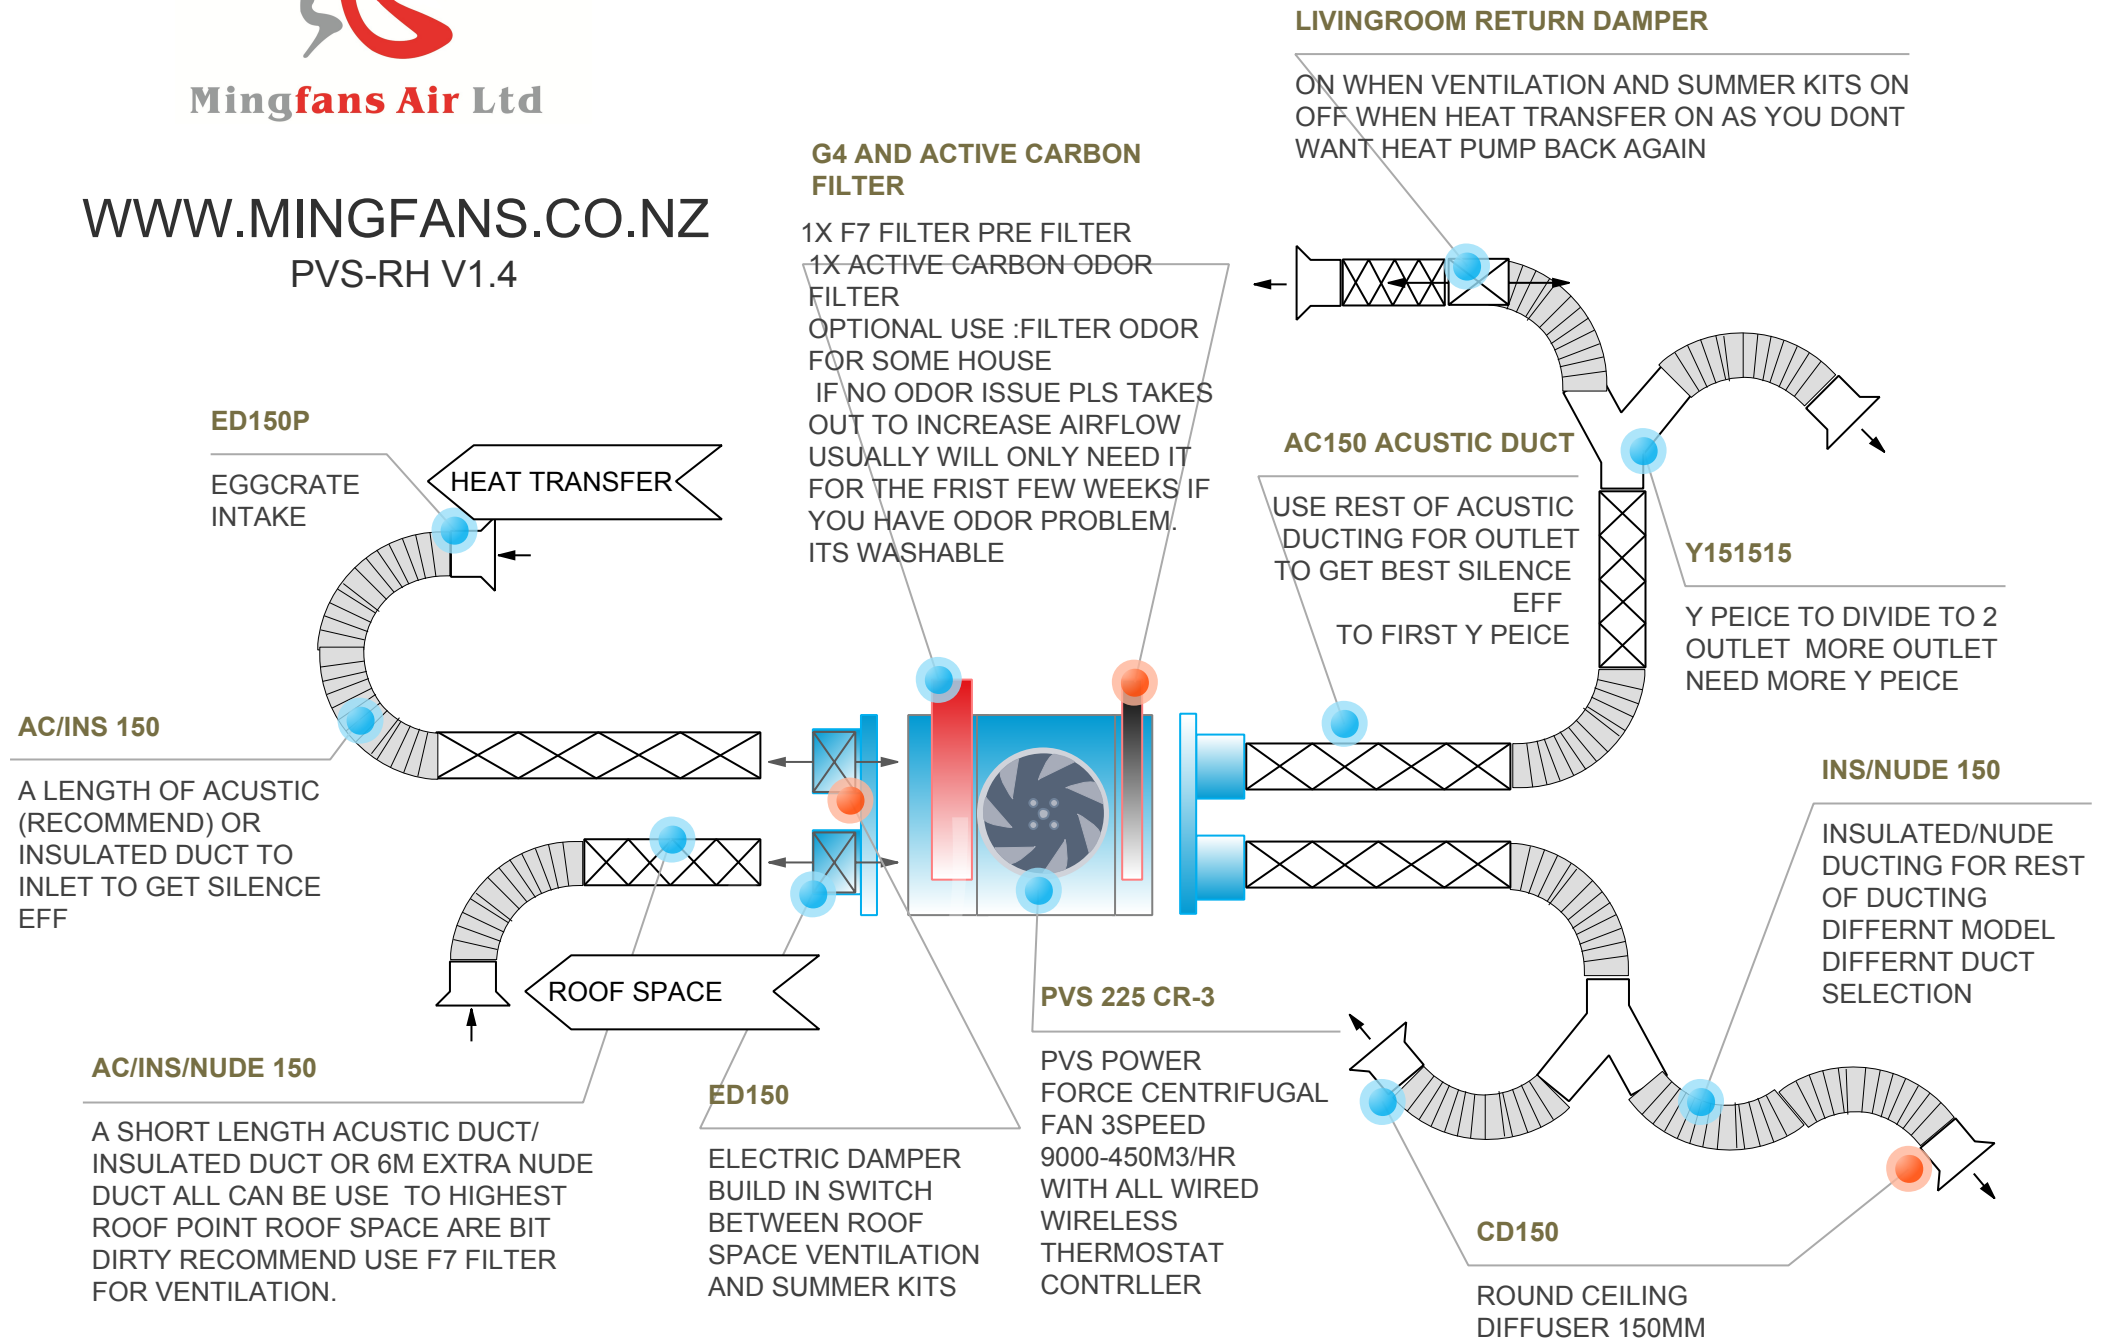



Mingfans Air Ltd


PVS HS

VENTILATION WINTER & HEAT TRANSFER FUNCTION

WE HAVE WIRED & SET UP TO SUIT EACH SYSTEM
PLEASE READ THE SETUP BOOKLET CAREFULLY
BEFORE SET UP .

WIFI Sign

NOT
connected

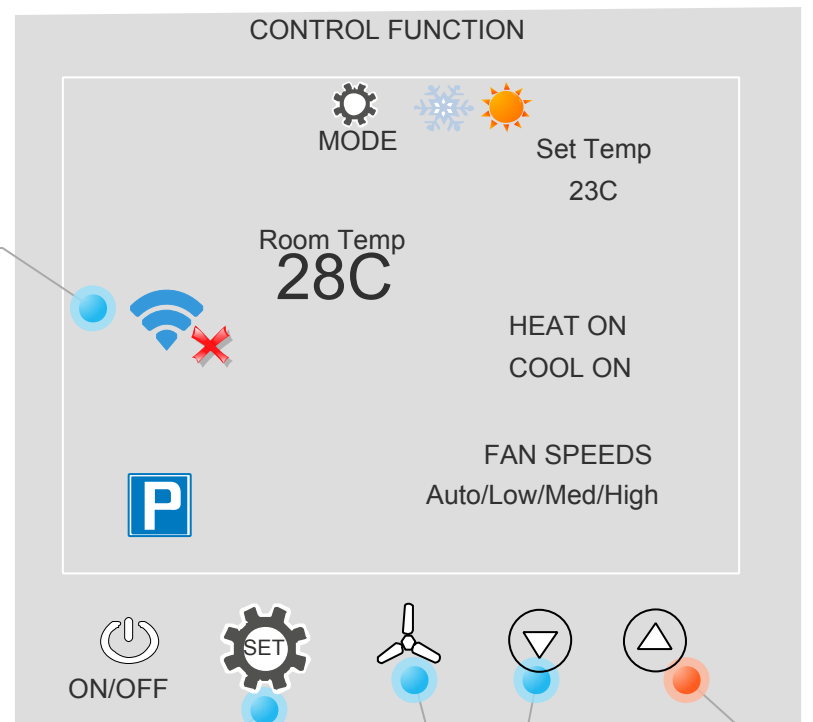

MODE CHANGE

COOL/HEAT(CONTROL
BY TEMPERATURE)
FAN SPEEDS

FANSPEED

HIGH MED LOW
AND AUTO

SETTING TEMPERATURE



INC/DEC SETTING
TEMPERATURE

WINTER MODE /VENTILATION MODE

Roof space ventilation damper & living room return damper all opening
dry air from roof space ventilation mode all day long recommend winter time set above 22C



COOL MODE
SUMMERKITS

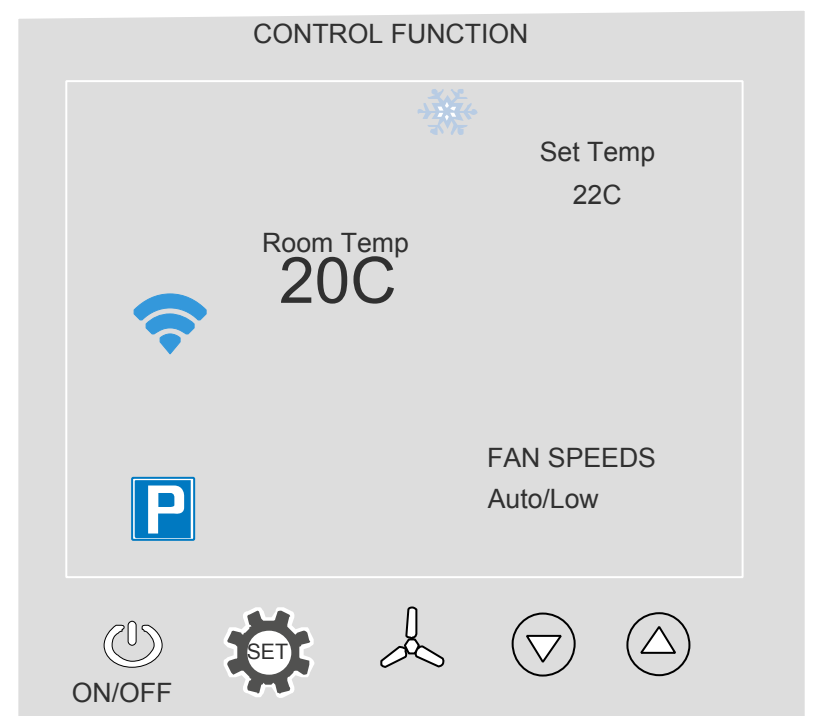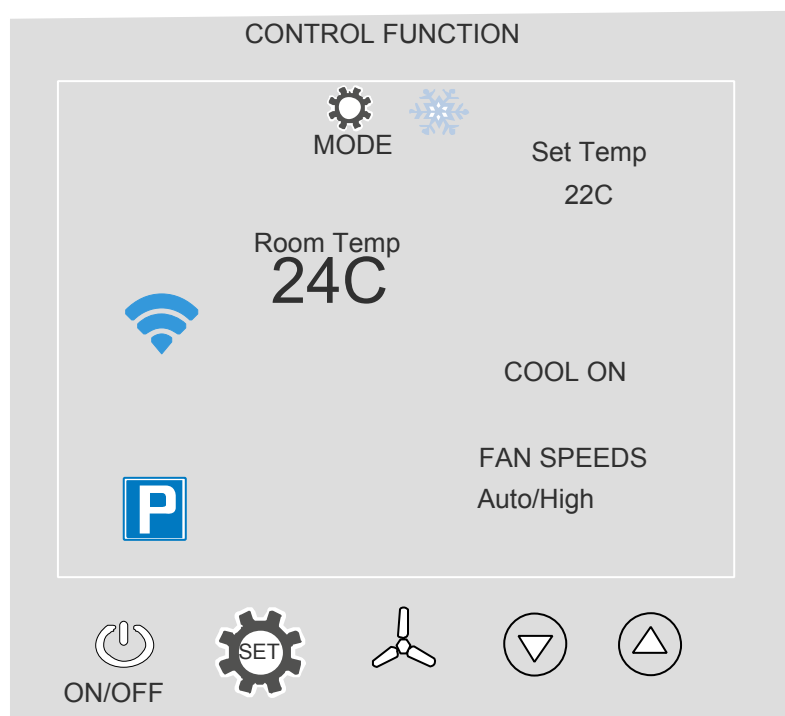

Winter Time Heat Mode

Room Temp Below Set Temp

HEAT ON

Heat transfer Damper opening,return damper shuts
high speeds air from heat source

Winter Time Heat Mode

Room Temp Below Set Temp

HEAT ON GONE VENTILATION



MODE ON

Low speeds air from ROOF SPACE



HEAT MODE
HEAT TRANSFER
& VENTILATION





IN SUMMER TIME ON HEAT
MODE ALSO CAN DO COLD
AIR TRANSFER TO EVERY
ROOM IF YOU HAVE AIRCO
IN THE LIVING ROOM

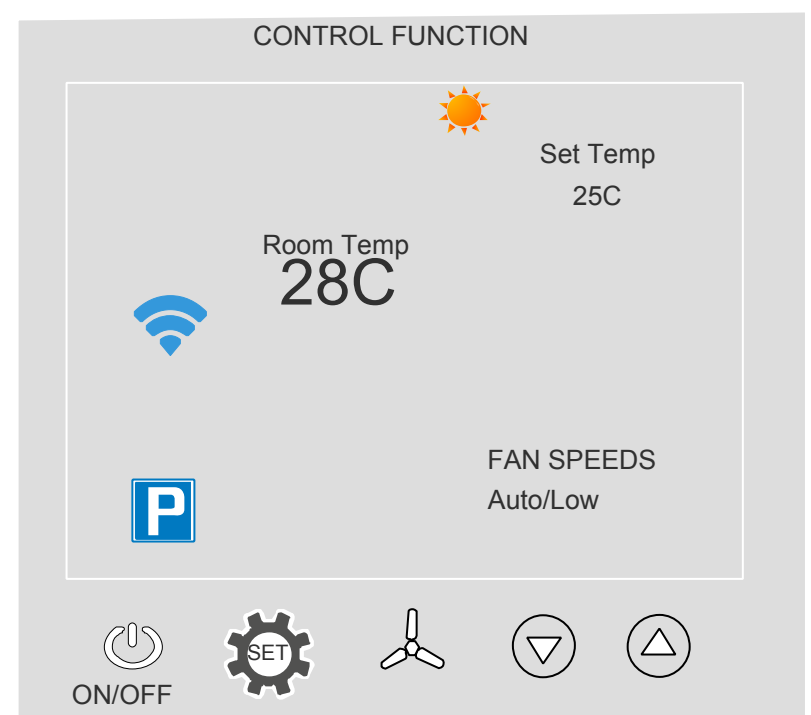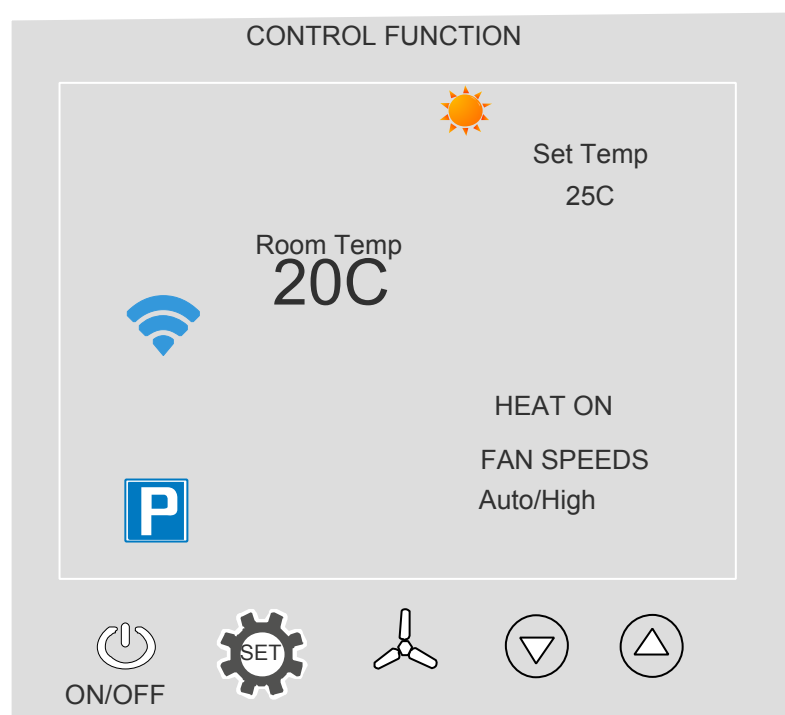


PVS WIFI SET UP



SCAN & WATCH ON YOUTUBE WIFI SET UP

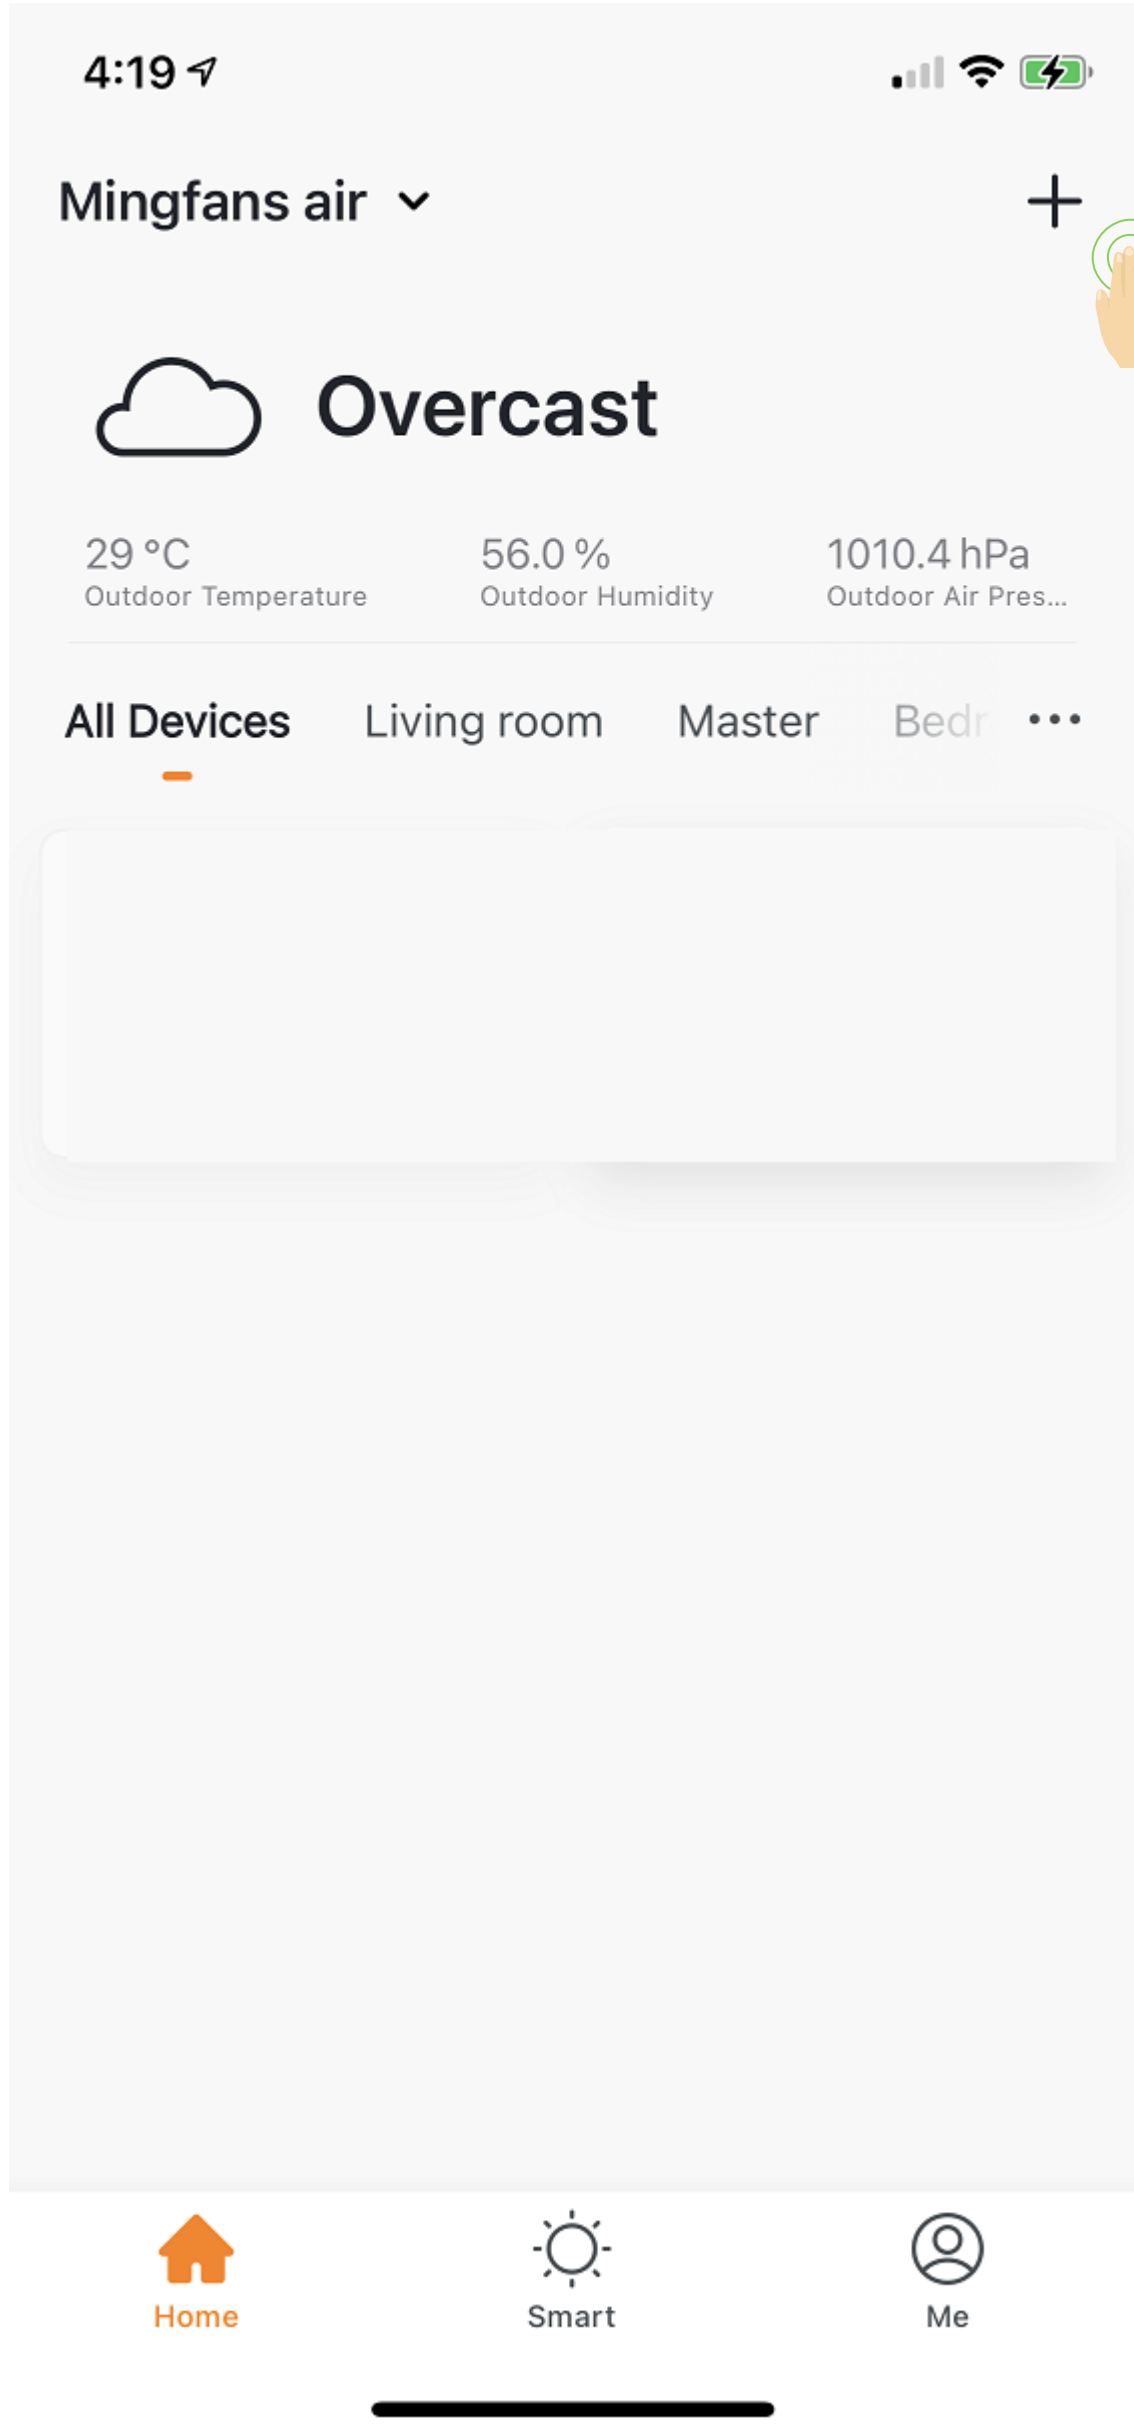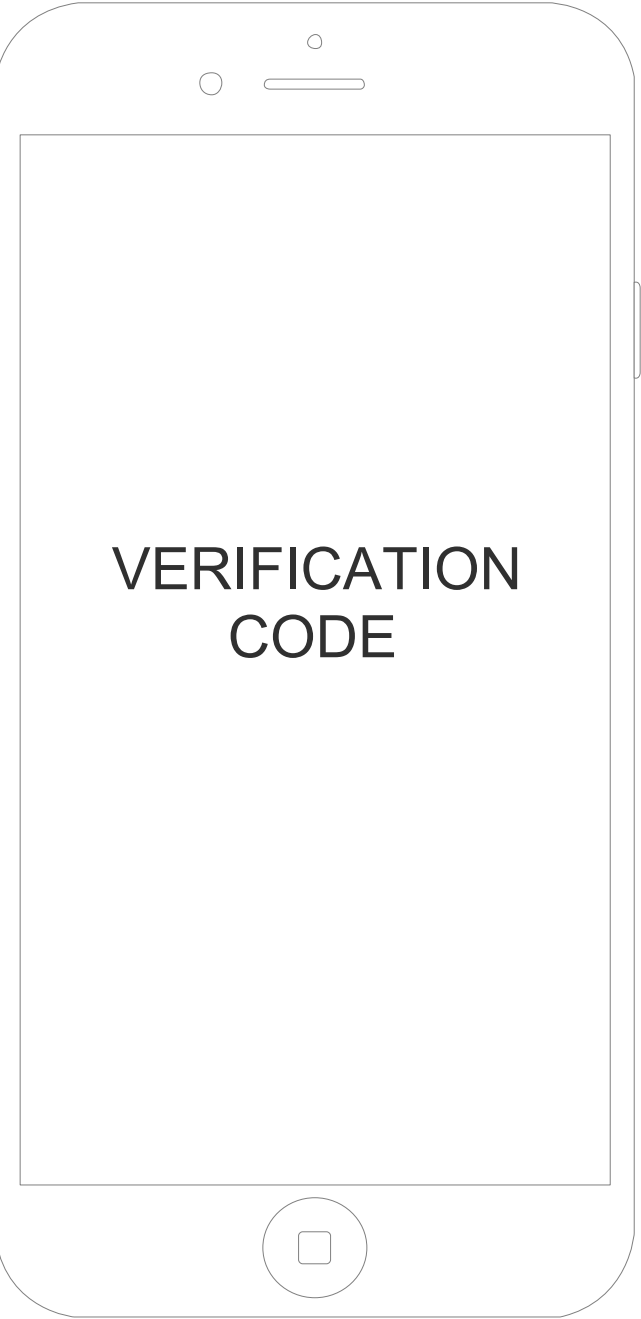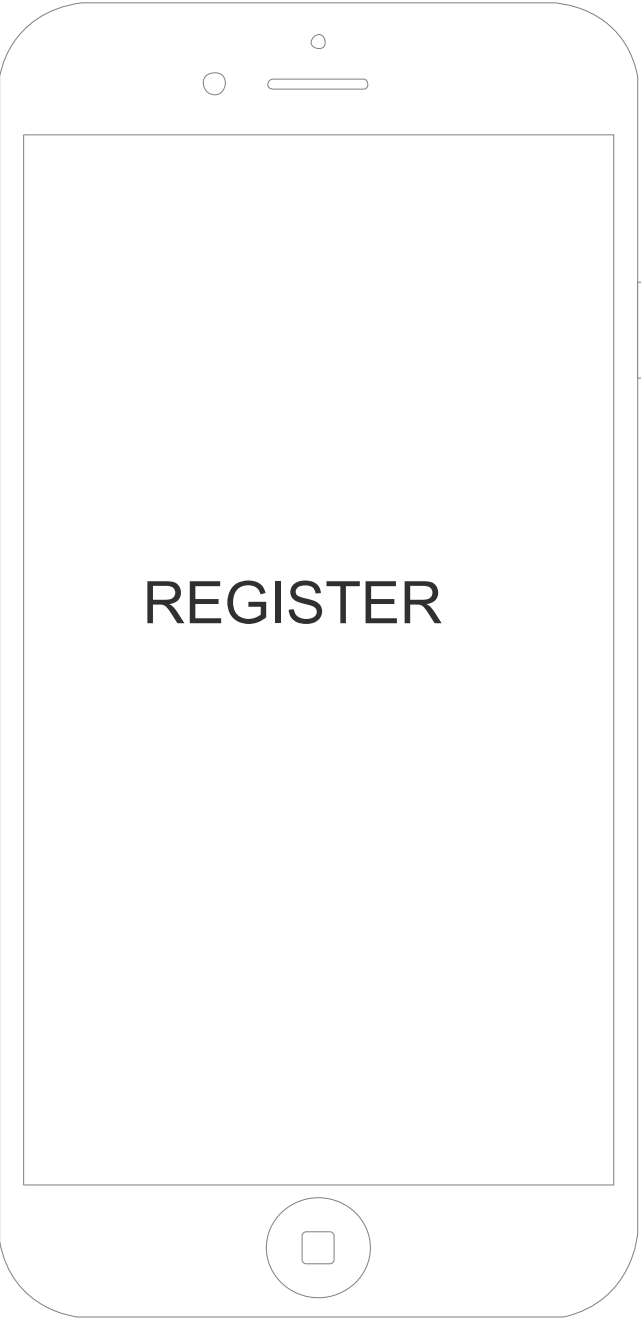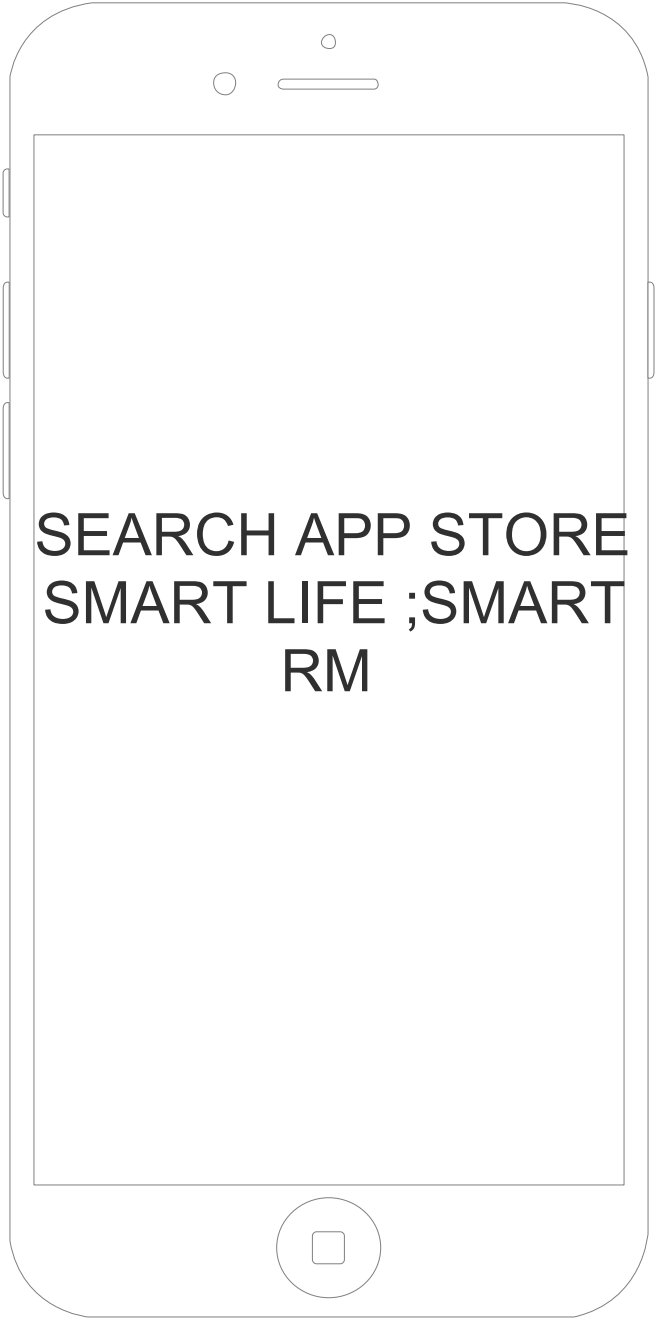


AFTER DOWNLOAD APP SMART LIFE ;SMART RM FROM APP STORE FILL UP THE REGISTRATION LET'S START TO ADD ON YOUR DEVICE

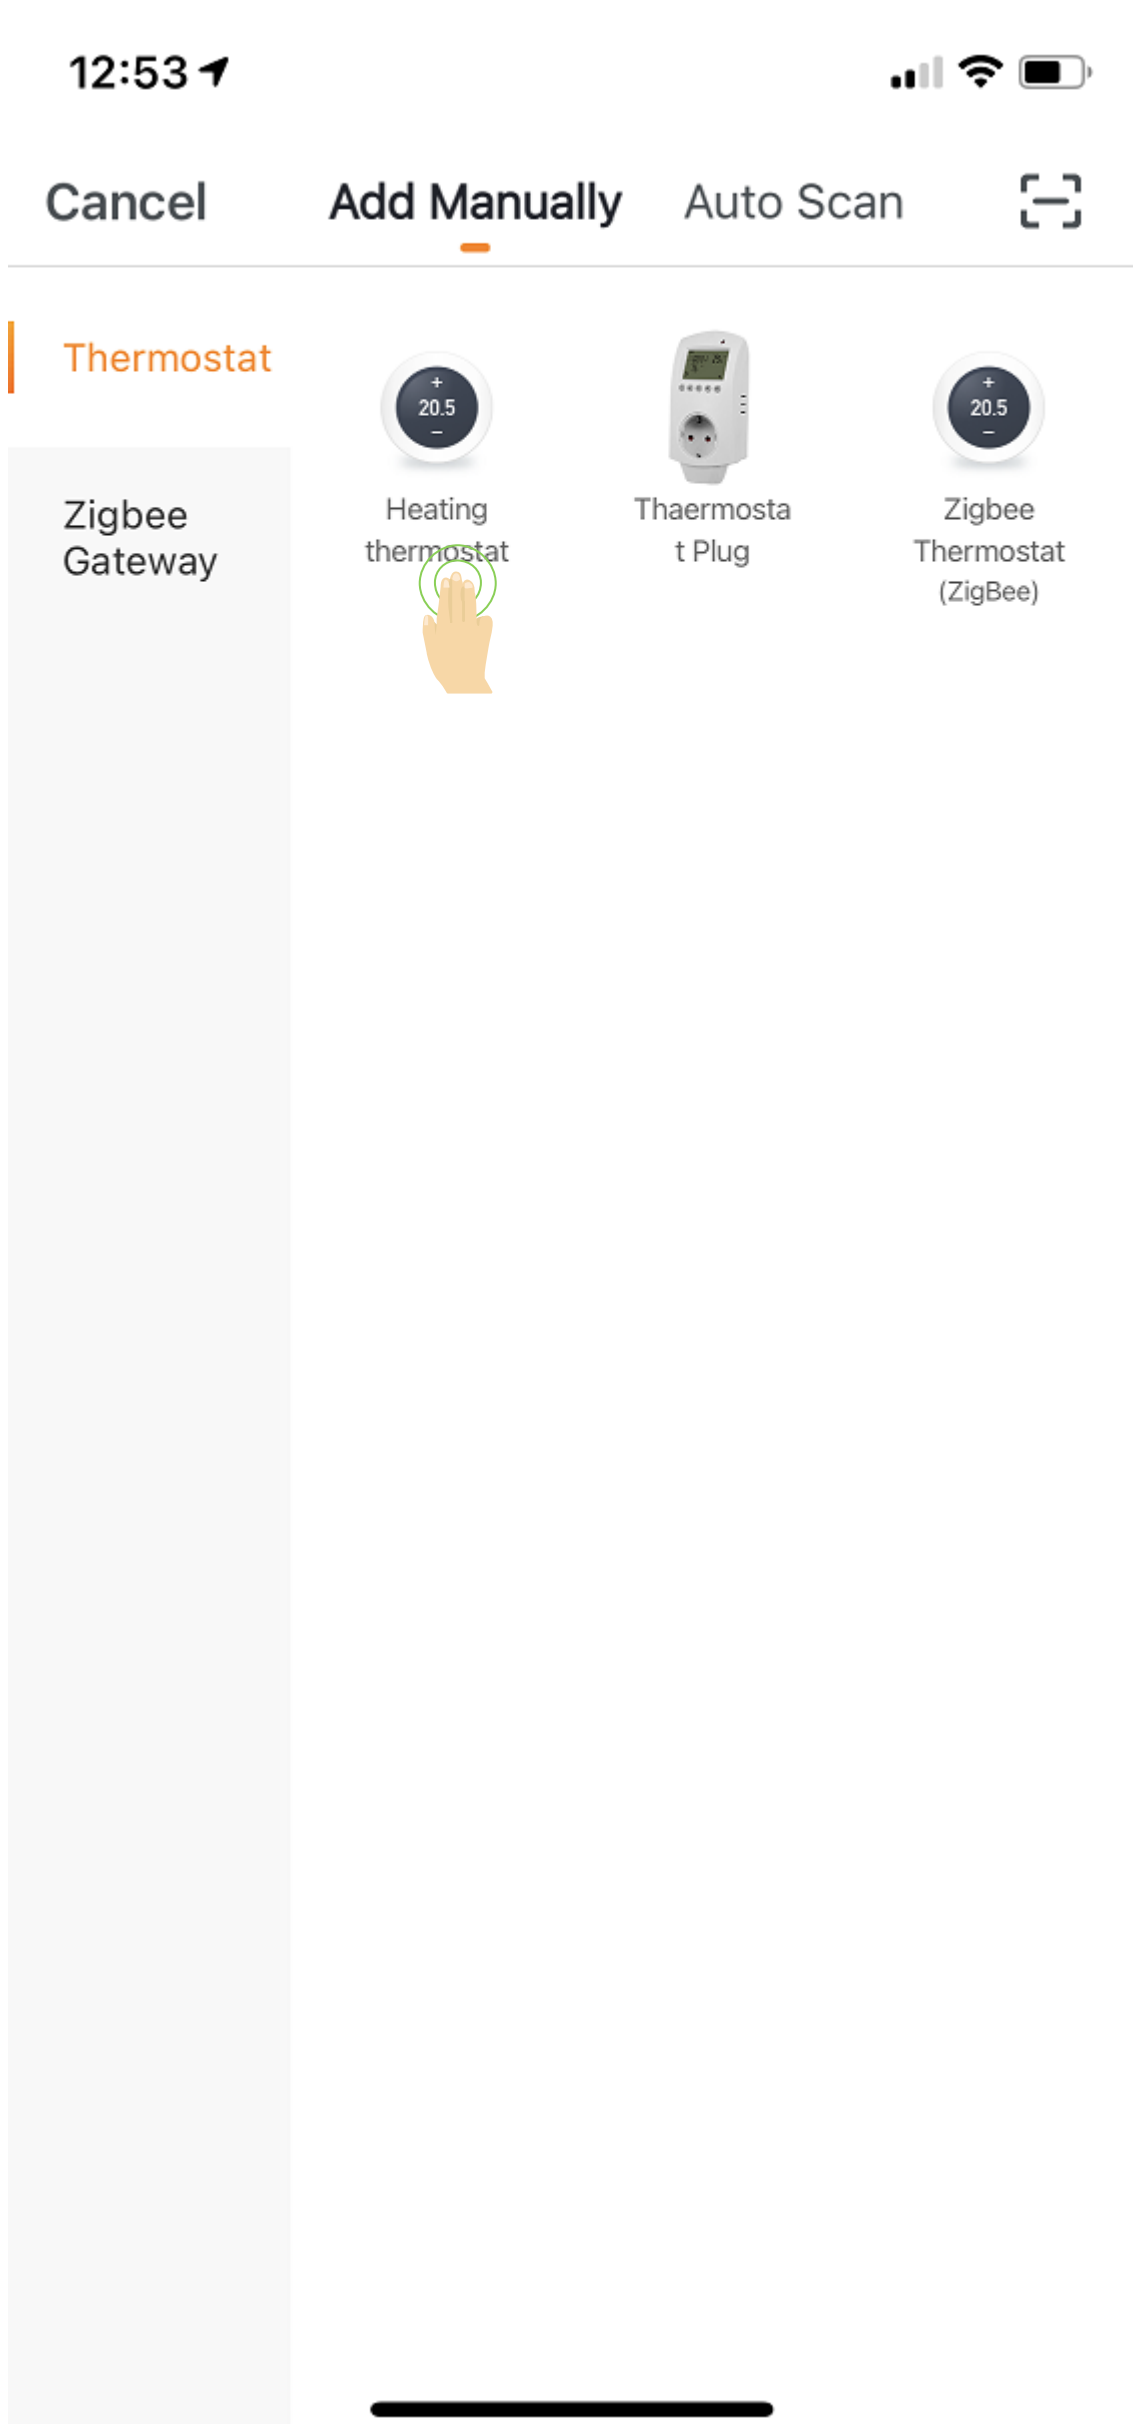

STEP 2 PRESS: THERMOSTAT ICON




STEP 3: FEEL FREE TO READ STEP 4 & 5 TO ACTIVE WIFI THEN PRESS CONFIRM

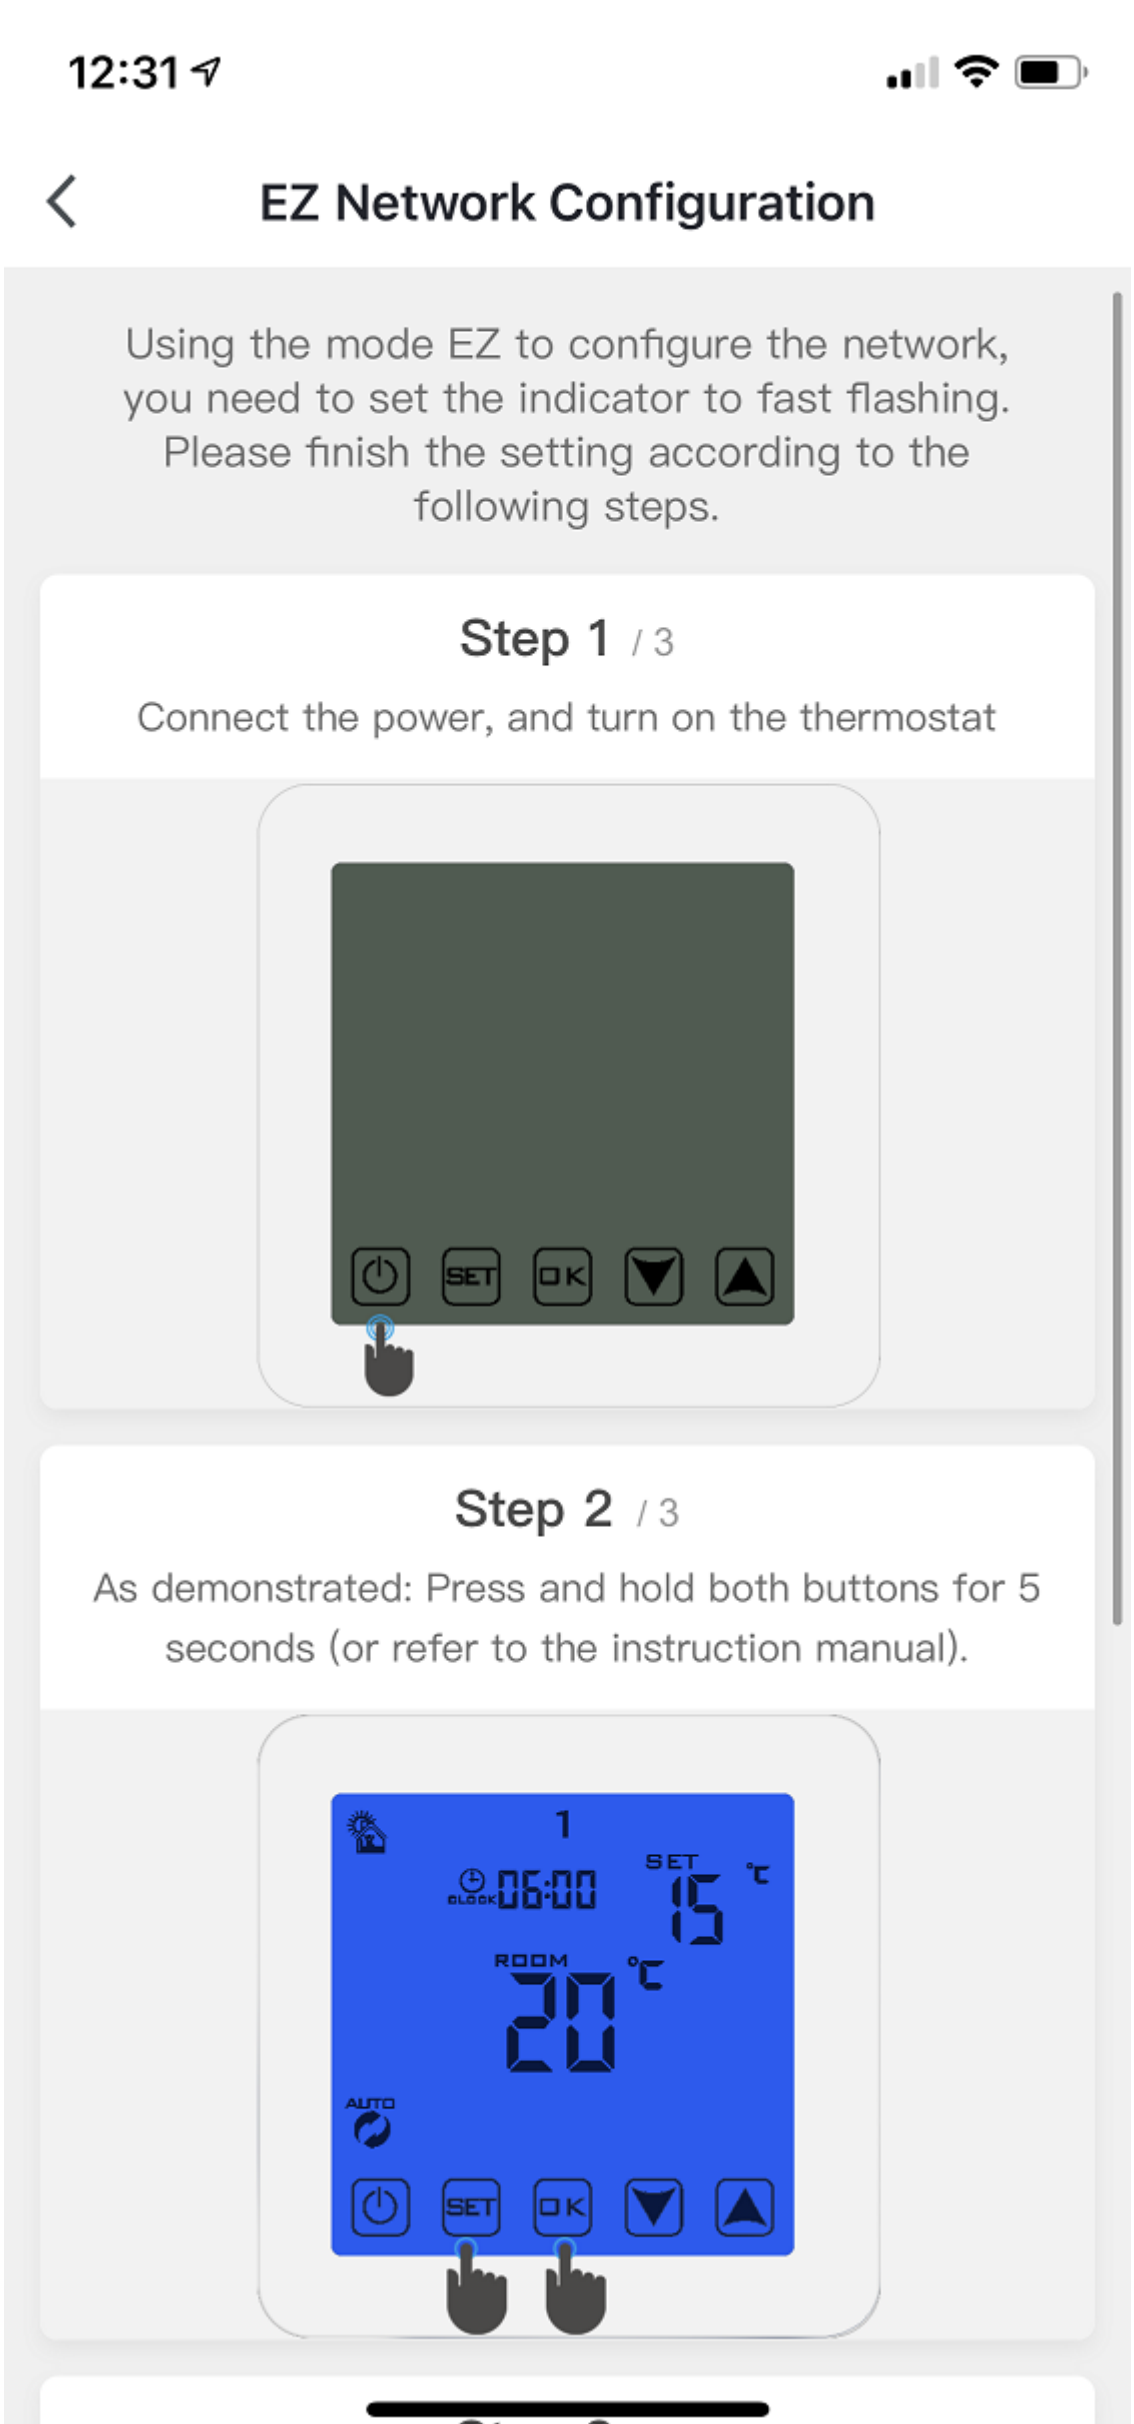


STEP 4 HOW TO ACTIVE WIIF ON CONTROL PANEL




STEP 5 HOW TO ACTIVE WIIF ON CONTROL PANEL

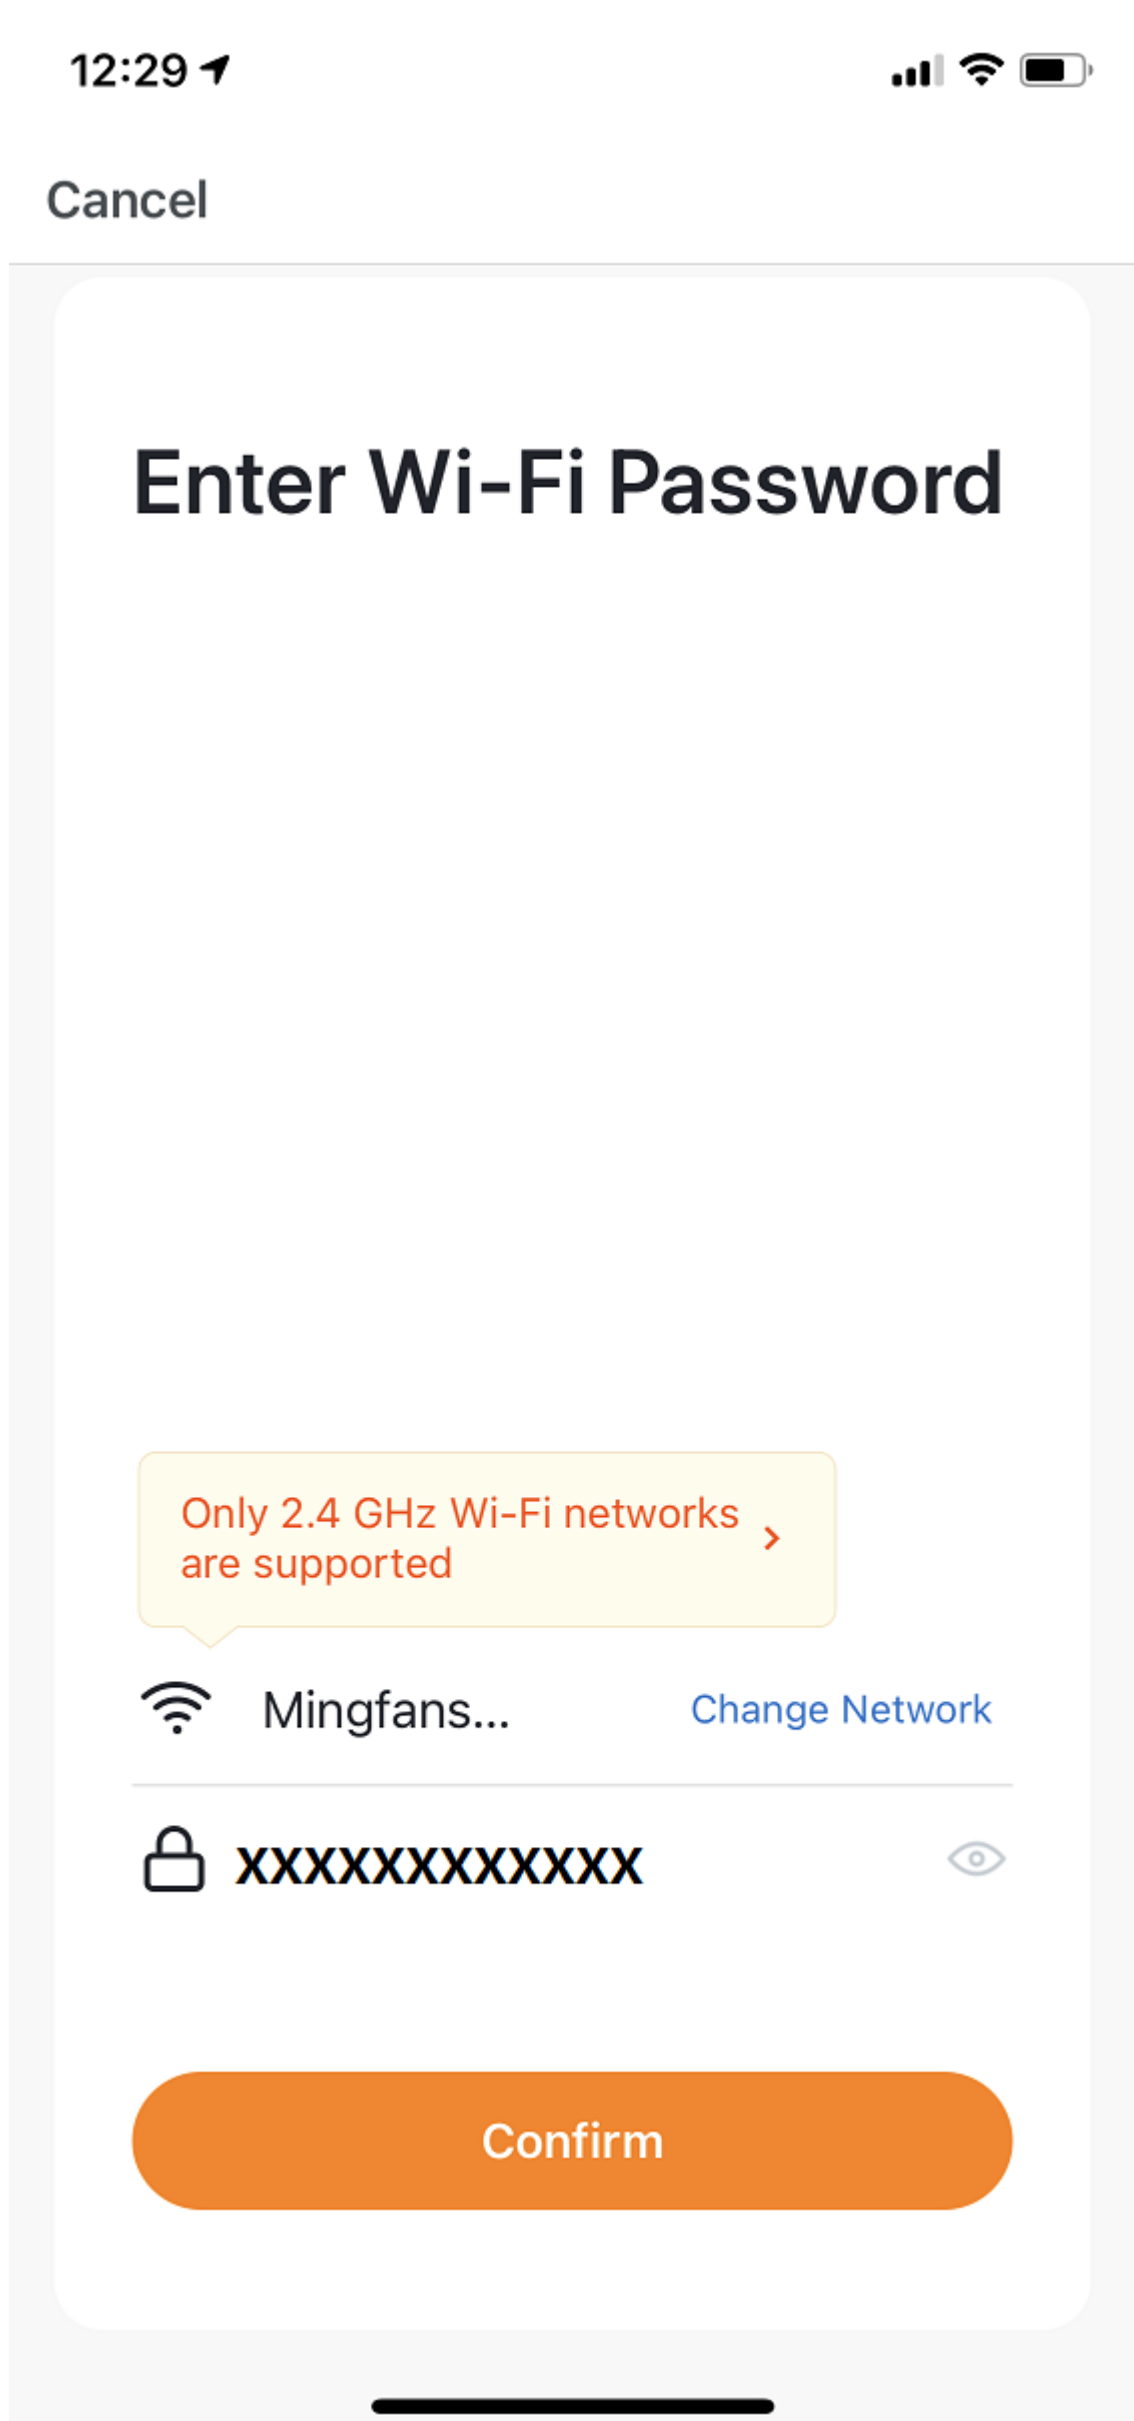


STEP 6 ENTER YOUR OWN WIFI PASSWORDS

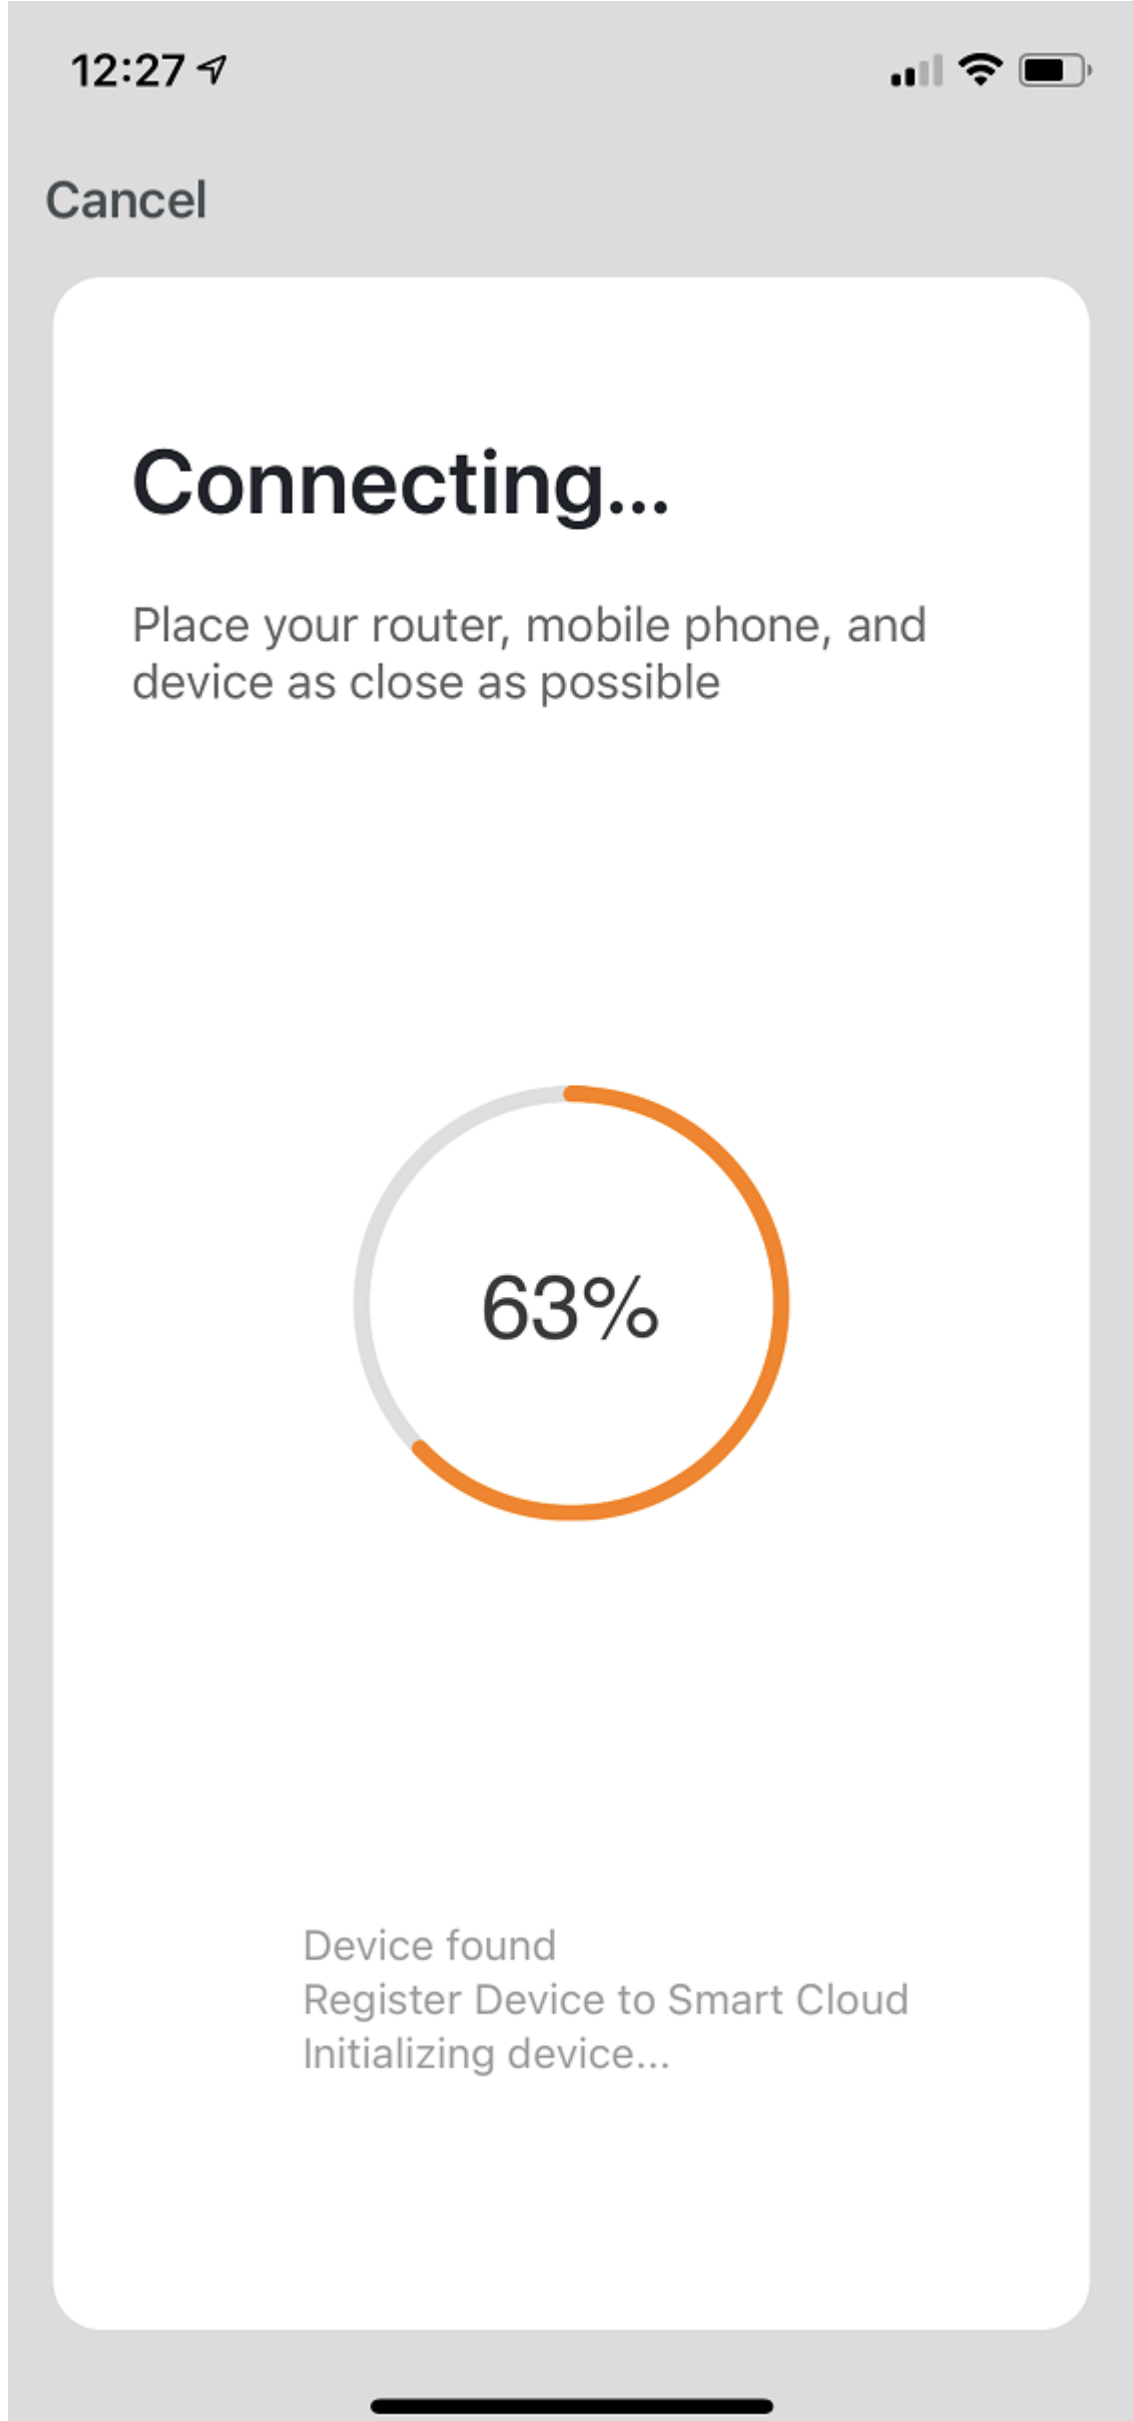


AUTO SET UP % PLS NOTES WIFI ON 2.4G ONLY 5G NOT ACCEPTABLE

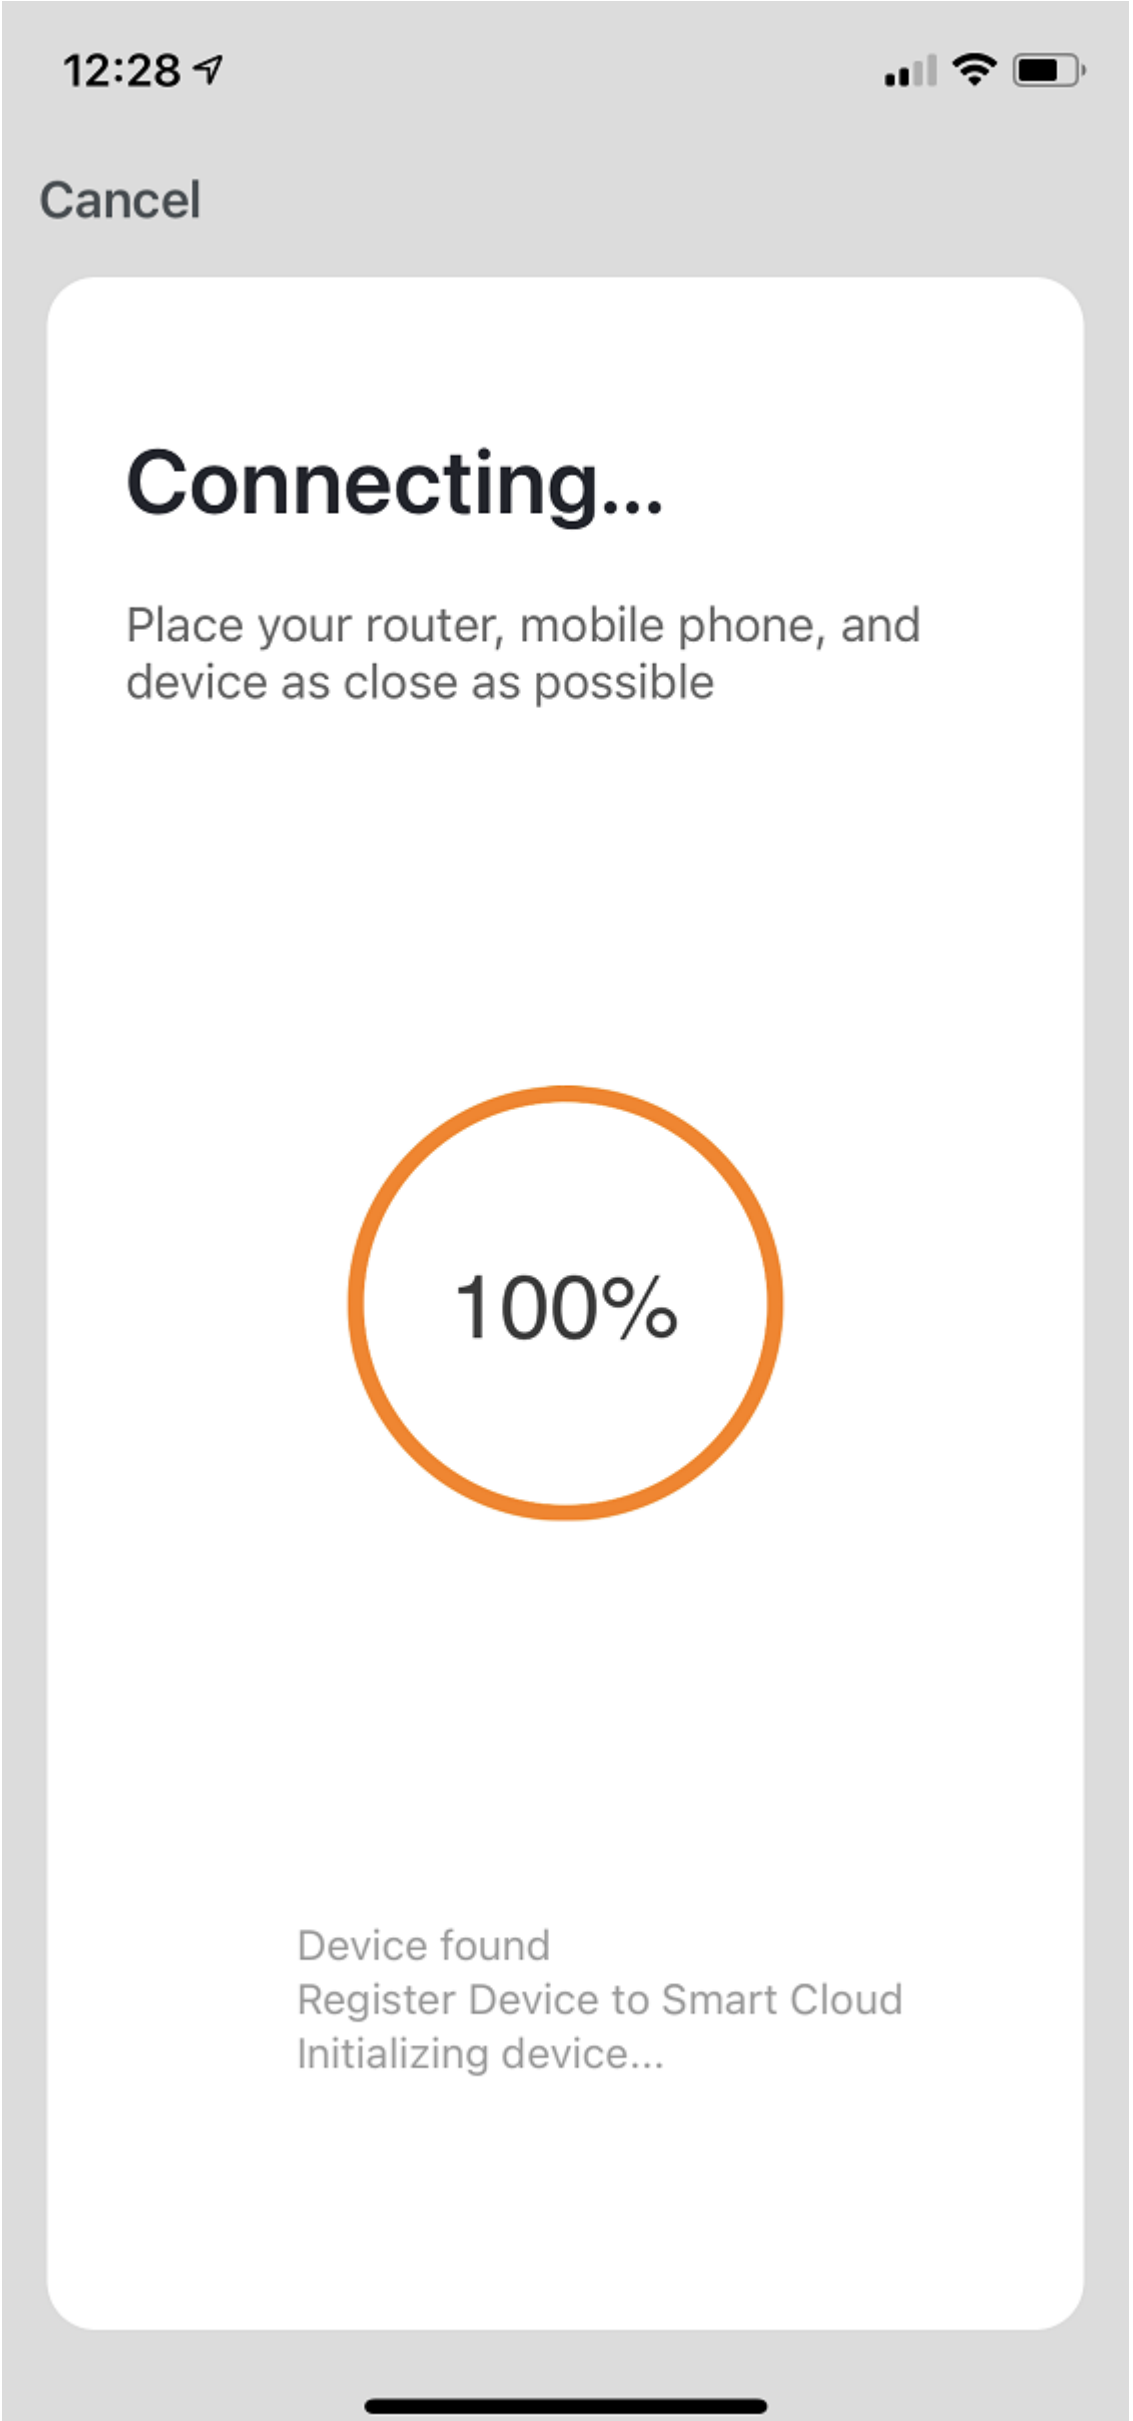

AUTO SET UP 100%

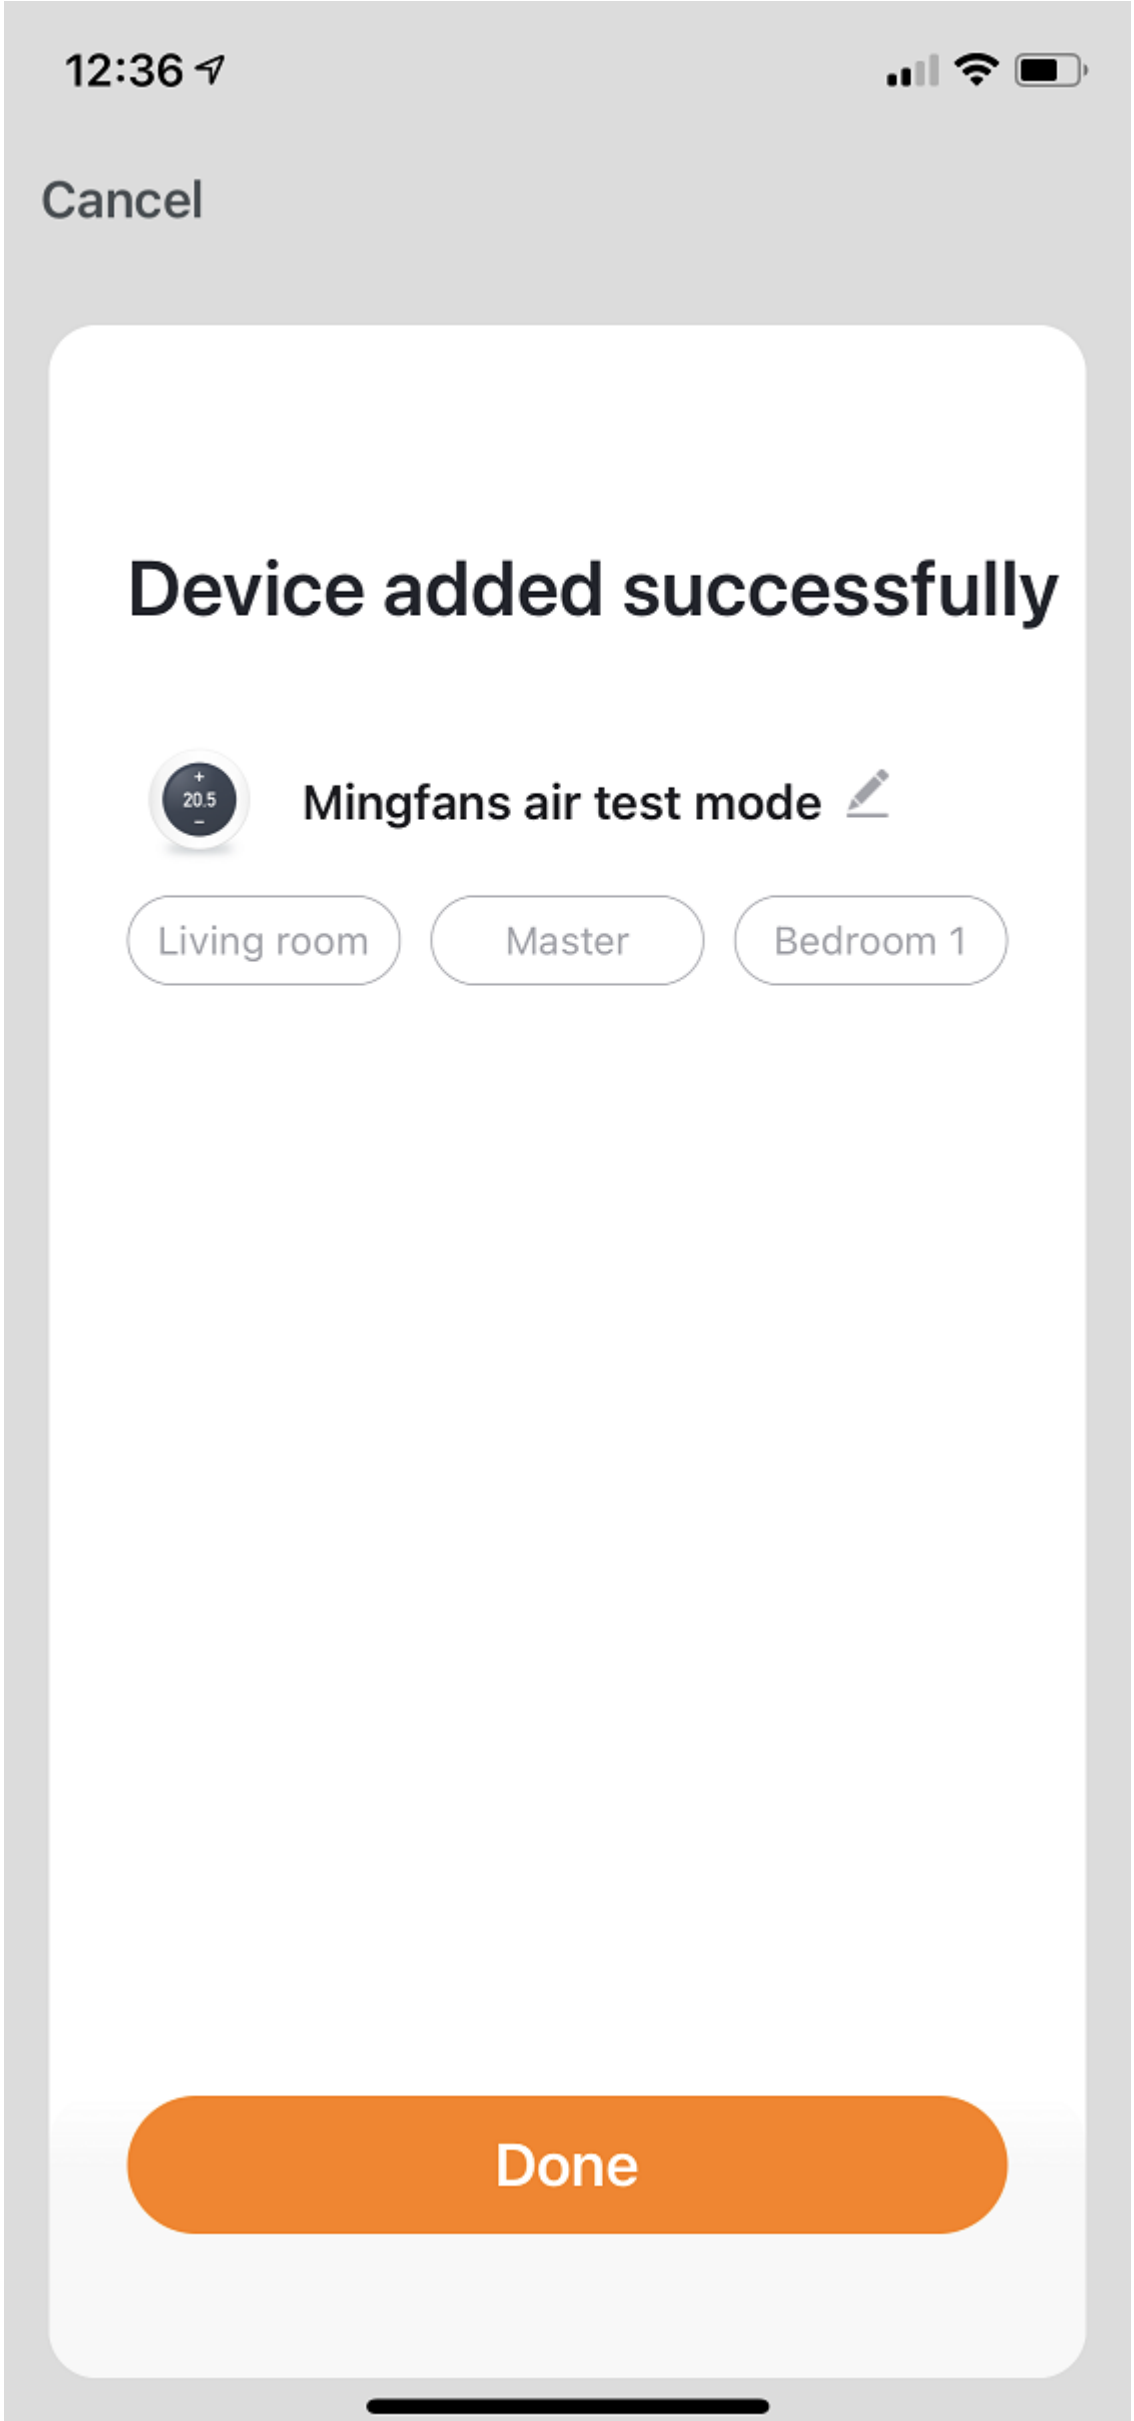

ALL DONE

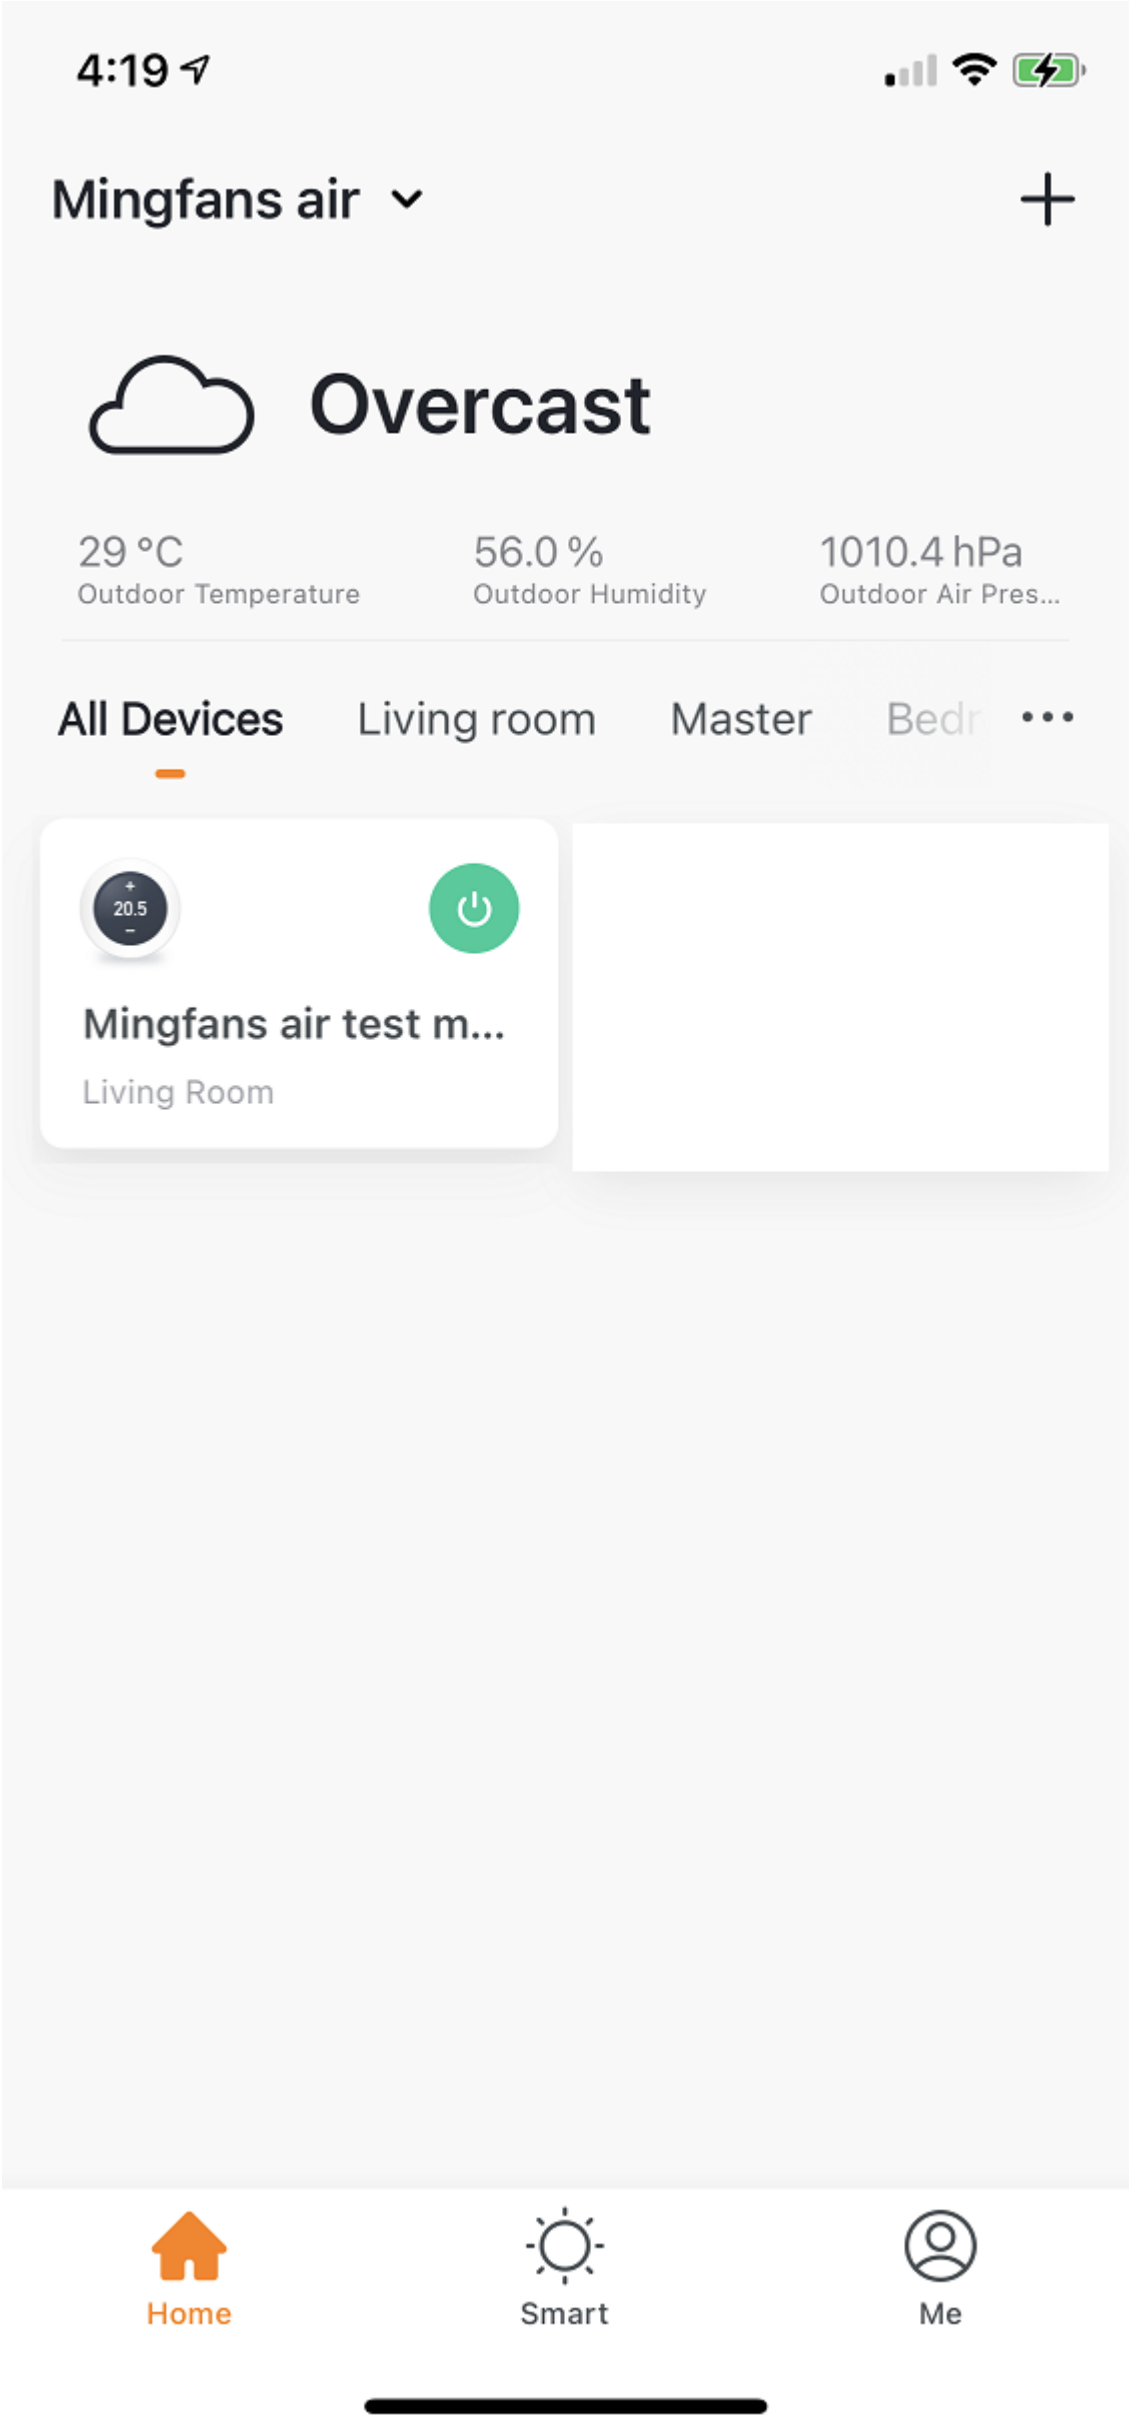

YOUR DEVICE HAS ADD ON APP YOU CAN ADD ON AS MANY SMART WIFI AS YOU WANT

PVS APP PANEL FUNCTION

Mode control

Cooling

Heating

Ventilate

cooling heating automatically

Done

MODE CONTROL

12:37

Back Mingfans air test mode

Program

Shutdown

Cooling

Low wind

Current Temperature 27.5°C

Switch

Mode

Sleep mode

Settings

ON/OFF

4:06

Back Mingfans air test mode

Program

15.0°C

Ventilate

Low wind

Current Temperature 28.0°C

Switch

Mode

Sleep mode

Settings

7 DAYS PROGRAM /
MANUAL

mode selection

Manual

Program

Done

Sleep mode

Sleep mode ON

Sleep mode OFF

Done

SLEEP MODE ON/OFF

FAN SPEEDS

Gear

Low wind

Mid wind

High wind

Automatic wind

Done

4:15

Back Settings

Child Lock

time period programming

Cloud timing

The following content needs to enter a password to set

temperature calibration

child lock type

Set temperature limit

Set lower temperature limit

fan energy saving

programming type

ADV. SETUP

4:01

Back Settings

Child Lock

time period programming

Cloud timing

Please enter a password

123456

Cancel Save

The following content needs to enter a password to set

temperature calibration

child lock type

Set temperature limit

q w e r t y u i o p

a s d f g h j k l

z x c v b n m


123 space return




Mingfans Air Ltd

ALL ADVANCED SET UP
REQUEST PASSWORD TO RESET
FACTORY PASSWORD "123456"

FAN ENERGY SAVE MODE (ECO MODE) WHEN TEMP REARCH FAN TURN OFF INSTEAD IN LOW SPEEDS

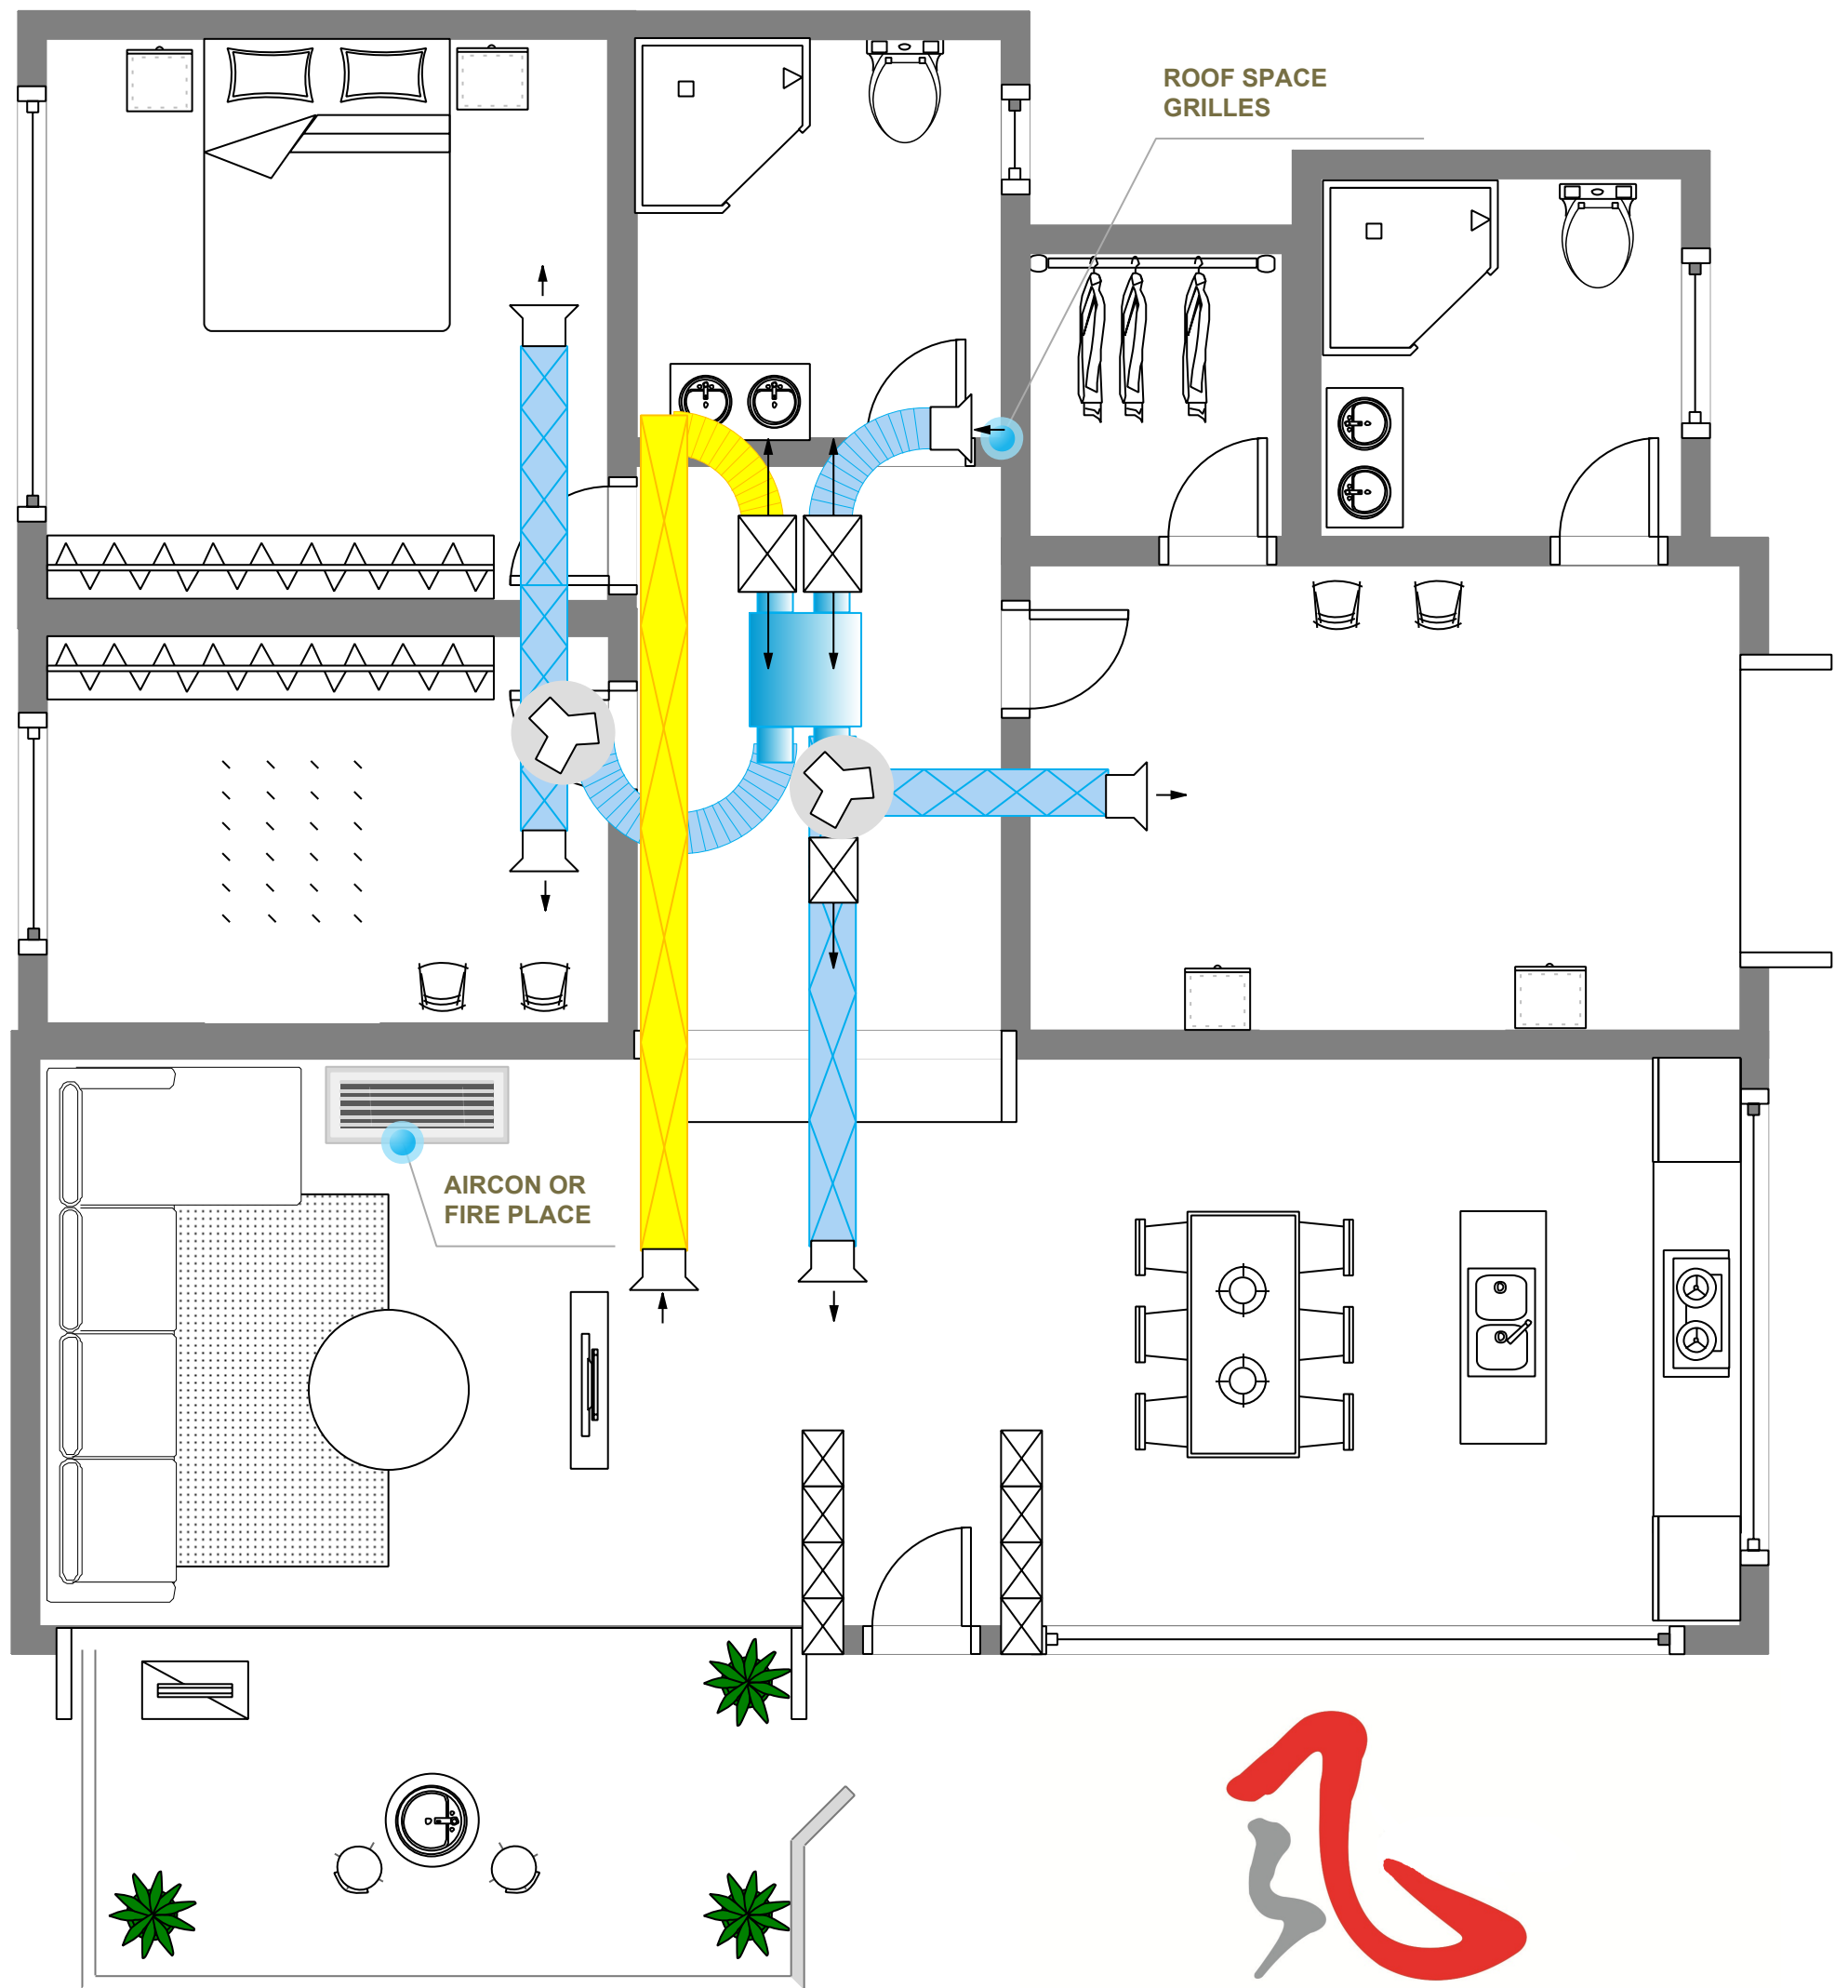

Mingfans Air Ltd

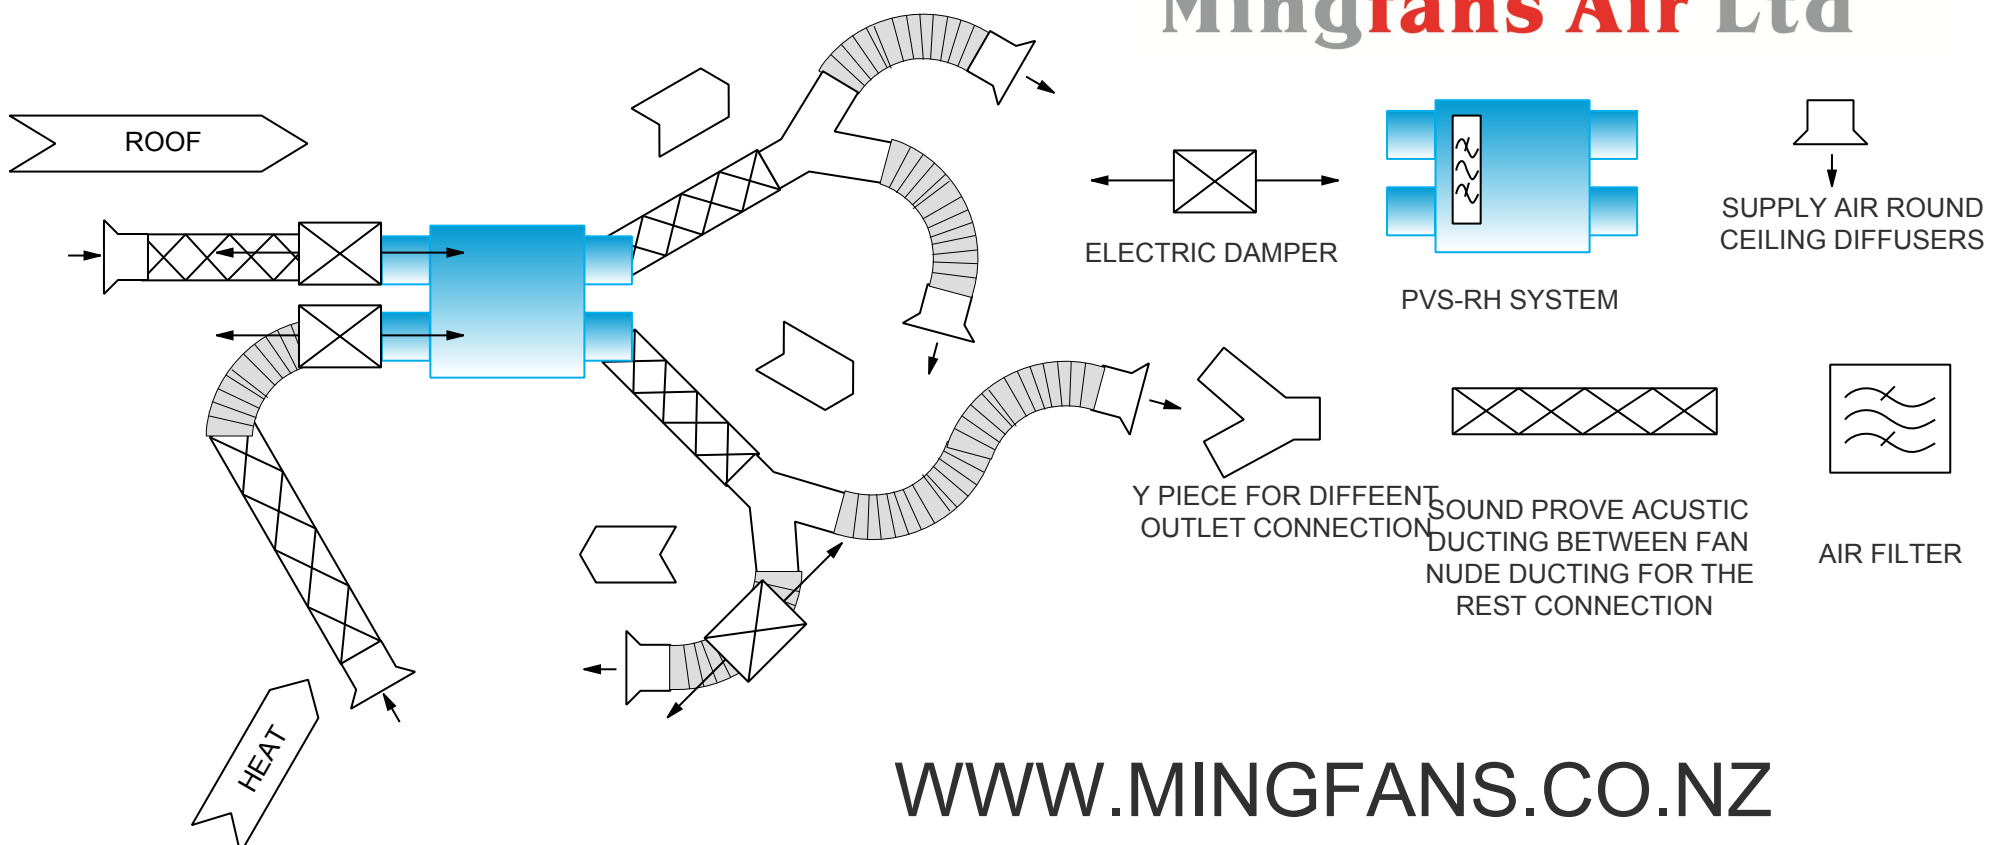

WWW.MINGFANS.CO.NZ